

HOOBRO WT60UPC01

HOOBRO WT60UPC01 Pantry Cabinet User Manual

Model: WT60UPC01 | Brand: HOOBRO

1. INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your HOOBRO WT60UPC01 Pantry Cabinet. Please read these instructions carefully before assembly and use to ensure safe and correct operation of the product.



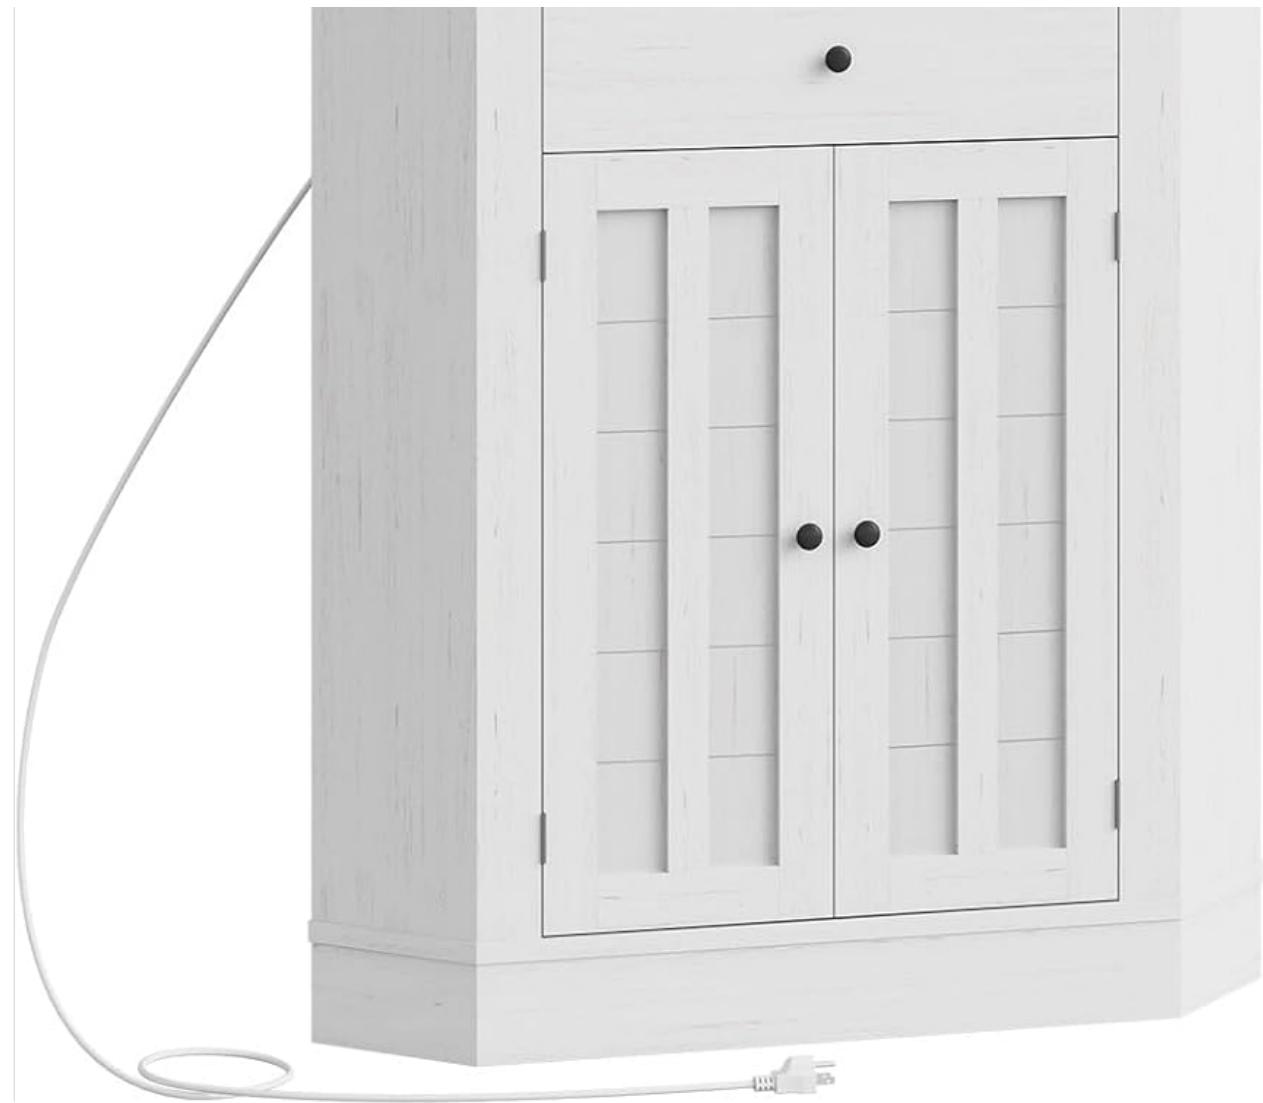


Image 1.1: The HOOBRO WT60UPC01 Pantry Cabinet in Cloud White.

The HOOBRO WT60UPC01 is a 177 cm farmhouse-style corner storage cabinet designed to maximize space in kitchens, bathrooms, or dining areas. It features drawers, adjustable shelves, glass doors, and integrated power outlets for convenience.

2. SAFETY INFORMATION

Please observe the following safety guidelines to prevent injury or damage to the product:

- **Assembly:** Assemble the cabinet on a soft, clean surface to prevent scratches. Ensure all parts are correctly aligned and securely fastened according to the instructions.
- **Stability:** This cabinet is designed for corner placement. For enhanced stability and safety, especially in households with children or pets, it is recommended to secure the cabinet to the wall using the provided anti-tip kit.
- **Weight Capacity:** Do not exceed the maximum weight capacity for shelves and drawers. Distribute weight evenly to maintain balance.
- **Electrical Safety:** The integrated power outlets are for small appliances. Do not overload the outlets. Ensure the power cord is not pinched or damaged during assembly or use. Keep liquids away from electrical components.
- **Glass Doors:** Handle glass doors with care during assembly and use. Avoid sudden impacts.
- **Maintenance:** Use only recommended cleaning agents. Avoid harsh chemicals that may damage the finish.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components and hardware are present. Refer to the included illustrated instruction manual for a detailed list of parts and hardware. If any parts are missing or damaged, contact HOOBRO customer support.

- Cabinet panels (engineered wood)
- Glass door panels
- Drawer components
- Hardware kit (screws, dowels, hinges, handles, drawer slides)
- Power outlet unit with cord
- Anti-tip kit
- Assembly tools (e.g., Allen wrench)
- Illustrated instruction manual

4. SETUP AND ASSEMBLY

The HOOBRO WT60UPC01 pantry cabinet is designed for straightforward assembly. Follow the step-by-step instructions provided in the separate illustrated manual included with your product. Ensure you have adequate space and the necessary tools before starting.

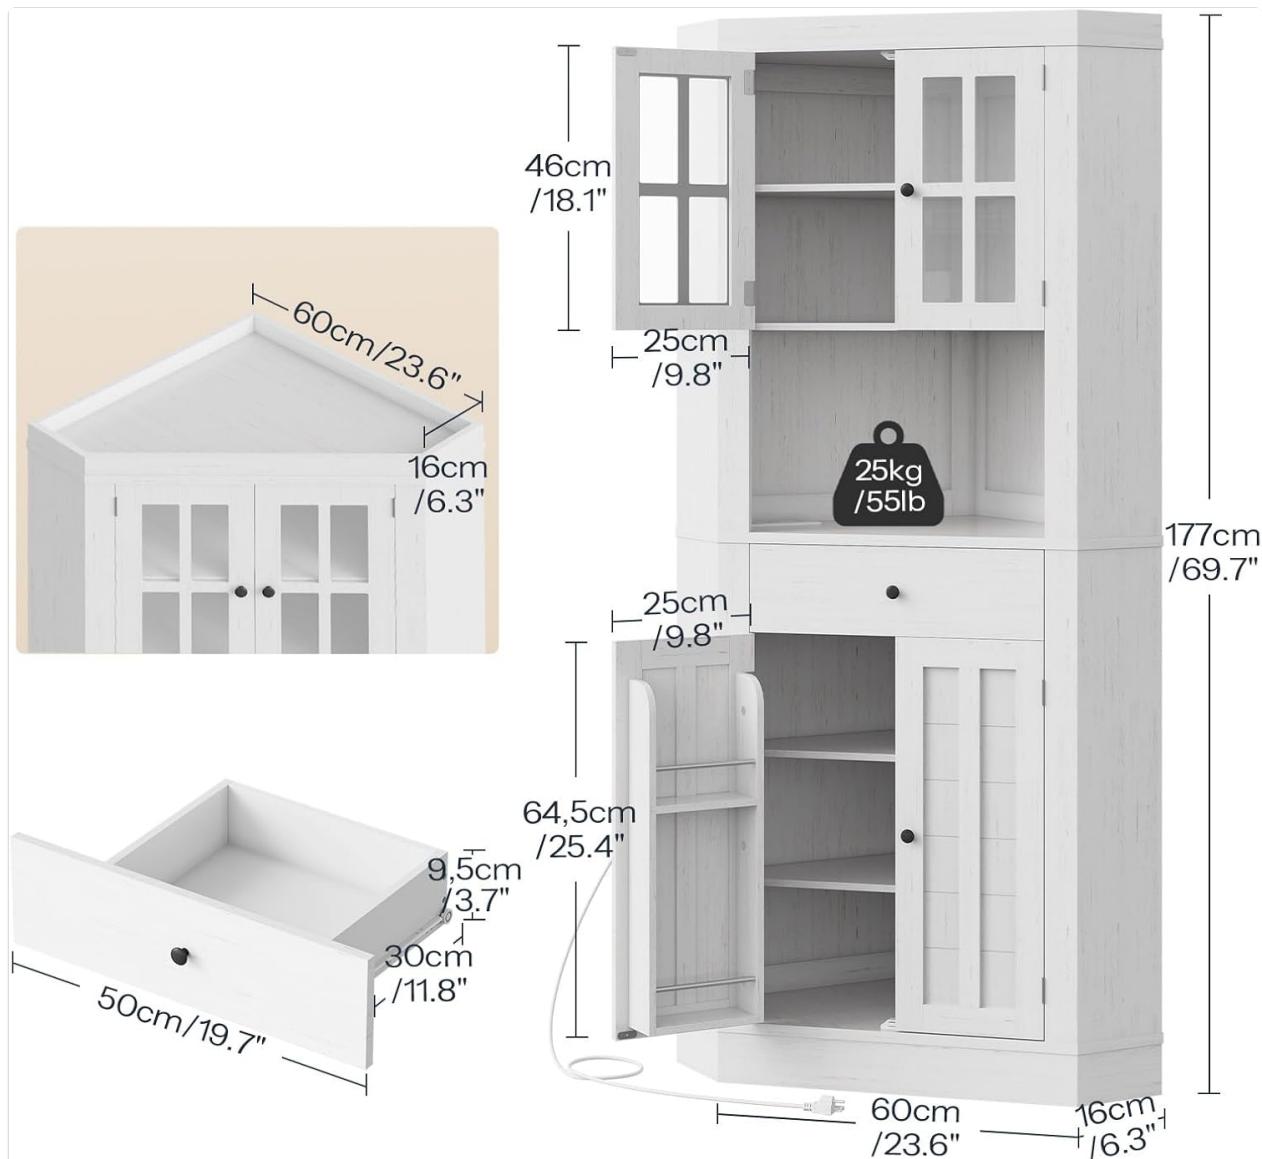


Image 4.1: Detailed dimensions and internal layout of the cabinet, showing various compartments and the drawer.

Key Assembly Points:

- **Corner Design:** The unique diamond-shaped design is specifically for corner placement. Ensure the cabinet is positioned correctly to maximize space.
- **Power Outlet Installation:** Integrate the power outlet unit into the designated countertop section as per the instructions. Ensure the power cord is routed safely.
- **Adjustable Shelves:** The upper cabinet features adjustable shelves. Install them at your desired height using the shelf pins.
- **Anti-Tip Kit:** Securely attach the anti-tip kit to the cabinet and the wall to prevent accidental tipping.



Image 4.2: The upper shelf with raised edges, providing anti-fall protection for items.

5. OPERATING INSTRUCTIONS

Your HOOBRO pantry cabinet offers various features for organized storage and convenience.

5.1 Power Outlets



Image 5.1: The countertop features 2 AC outlets, 1 USB-A port, and 1 Type-C port.

The countertop includes a practical charging station with 2 AC outlets (125V/12A), 1 USB-A port (5V/2A), and 1 Type-C port (5V/2A). This allows for convenient use of small kitchen appliances or charging of electronic devices. Ensure the cabinet is plugged into a grounded electrical outlet.

5.2 Storage Compartments



Image 5.2: The cabinet offers diverse storage options including glass-doored upper shelves, an open compartment, a drawer, and lower cabinet shelves.

- **Upper Cabinet:** Features two glass doors and adjustable shelves. Adjust shelf height to accommodate various items.
- **Open Compartment:** Located below the upper cabinet, ideal for frequently used items or small appliances.
- **Storage Drawer:** A large drawer with smooth gliding rails provides enclosed storage for utensils or smaller items.
- **Lower Cabinet:** Equipped with 240° swing doors for wide access to items stored deep inside. Includes additional shelves on the inside of the doors for extra organization.

Right-Angle Design

Maximizes unused corner space.



Image 5.3: The adjustable shelf feature allows customization of storage space.



Image 5.4: The spacious drawer with smooth gliding mechanism for easy access.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner. Dry immediately with a clean cloth.
- **Glass Care:** Clean glass doors with a standard glass cleaner and a soft cloth.
- **Avoid Moisture:** Do not allow liquids to sit on the surface, especially near electrical outlets. Wipe up spills immediately.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading or discoloration of the finish.

7. TROUBLESHOOTING

If you encounter issues with your HOOBRO pantry cabinet, refer to the following common solutions:

- **Cabinet Wobbles:** Ensure the cabinet is on a level surface. Adjust any leveling feet if present. Verify all assembly screws are tightened. Secure the anti-tip kit to the wall.
- **Drawer Sticks:** Check that the drawer slides are correctly installed and free of obstructions. Apply a silicone-based lubricant if needed.
- **Doors Misaligned:** Adjust the hinges on the doors to correct any misalignment. Refer to the assembly manual for hinge adjustment instructions.
- **Power Outlets Not Working:** Ensure the cabinet's power cord is securely plugged into a functional wall outlet. Check if the wall outlet itself is receiving power. Do not attempt to repair the integrated power unit; contact customer support if it is faulty.
- **Missing Parts:** If parts were missing upon delivery, contact HOOBRO customer support with your purchase details.

8. SPECIFICATIONS

Attribute	Detail
Brand	HOOBRO
Model Number	WT60UPC01
Colour	Cloud White
Product Dimensions	60D x 60W x 177H cm (23.6D x 23.6W x 69.7H inches)
Item Weight	48.53 kg (106.99 lbs)
Material	Engineered Wood, Glass, Metal
Mounting Type	Floor Mount
Power Outlets	2 AC (125V/12A), 1 USB-A (5V/2A), 1 Type-C (5V/2A)

Power Cord Length Approximately 4.9 feet

9. WARRANTY AND SUPPORT

For warranty information, product support, or to report missing/damaged parts, please contact HOOBRO customer service directly. Refer to your purchase documentation for specific warranty terms and contact details.

HOOBRO Customer Service:

- Refer to the contact information provided in your original purchase receipt or on the HOOBRO official website.
- When contacting support, please have your model number (WT60UPC01) and purchase date available.

