

CHiQ QRBC05B2S

CHiQ QRBC05B2S Vertical Beverage Cooler User Manual

Model: QRBC05B2S | Capacity: 130 Liters | Voltage: 220V

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your CHiQ QRBC05B2S Vertical Beverage Cooler. Please read these instructions thoroughly before installation and use, and retain them for future reference.

1.1 Product Overview

The CHiQ QRBC05B2S is a 130-liter vertical beverage cooler designed for optimal storage and cooling of various beverages. It features a modern design with a triple-pane glass door, digital temperature control, and internal LED lighting.

1.2 Key Features

- Triple Glass Door:** Enhances thermal insulation and provides a clear view of contents.
- Digital Touch Control:** Allows for precise and easy temperature adjustment.
- Internal LED Lighting:** Illuminates the interior, showcasing beverages.
- Ample Organization:** Includes 4 wire shelves and a metallic bottom support for versatile storage.
- Quiet and Stable Operation:** Features an anti-vibration system and adjustable feet for stability.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, follow these basic safety precautions:

- Ensure the cooler is connected to a properly grounded 220V electrical outlet. Do not use extension cords or ungrounded adapters.
- Do not operate the cooler if the power cord or plug is damaged.
- Keep ventilation openings clear of obstructions. Allow adequate space around the cooler for proper air circulation.
- Do not store explosive substances such as aerosol cans with flammable propellants in this appliance.
- Unplug the cooler before cleaning or performing any maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Do not touch cold surfaces with wet or damp hands, as skin may stick to these surfaces.

3. PRODUCT OVERVIEW

3.1 External View

The image below shows the front view of the CHiQ QRBC05B2S Vertical Beverage Cooler with its sleek black finish and triple glass door. The digital control panel is located at the top, providing easy access to settings.



3.2 Internal View

This image displays the interior of the beverage cooler with the door open. It highlights the four adjustable wire shelves and the metallic bottom support, designed for organized storage of various bottle and can sizes. The internal LED lighting is visible at the top.



4. INSTALLATION AND SETUP

4.1 Unpacking

- Carefully remove all packaging materials, including foam and adhesive tape.
- Inspect the cooler for any shipping damage. Report any damage to your retailer immediately.
- Keep packaging materials out of reach of children.

4.2 Placement

- Place the cooler on a flat, stable surface strong enough to support its weight when fully loaded.
- Ensure there is adequate ventilation around the unit. Leave at least 10 cm (4 inches) of space at the back and sides, and 30 cm (12 inches) at the top for proper air circulation.
- Avoid placing the cooler in direct sunlight or near heat sources (e.g., ovens, radiators).
- Do not install in areas where the temperature can drop below 10°C (50°F) or rise above 32°C (90°F).

4.3 Leveling

The cooler is equipped with adjustable feet. Use a spirit level to ensure the unit is perfectly level. Adjust the feet by turning them clockwise or counter-clockwise until the cooler is stable and level. Proper leveling is crucial for efficient operation and to prevent door alignment issues.

4.4 Initial Power-On

- After placement and leveling, wait at least 2-4 hours before plugging the unit into the power outlet. This allows the refrigerant to settle.
- Plug the power cord into a dedicated 220V, 60Hz grounded electrical outlet.
- The cooler will begin to cool. Allow it to operate for several hours (e.g., 24 hours) empty to reach the desired temperature before loading beverages.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Functions

The digital touch control panel is located at the top of the cooler. It typically includes buttons for power, temperature adjustment (up/down arrows), and internal light control.

- **Power Button:** Press to turn the cooler on or off.
- **Temperature Up/Down Arrows:** Used to increase or decrease the set temperature.
- **Light Button:** Activates or deactivates the internal LED lighting.

5.2 Temperature Adjustment

- To adjust the temperature, press the 'Up' or 'Down' arrow buttons on the digital control panel.
- The display will show the set temperature. Release the button when the desired temperature is reached.
- The cooler will automatically adjust to maintain the set temperature.

5.3 Internal Lighting

Press the 'Light' button on the control panel to turn the internal LED light on or off. This feature allows you to illuminate the contents of the cooler for better visibility.

6. CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your beverage cooler.

6.1 Cleaning the Interior

- Always unplug the cooler before cleaning.
- Remove all beverages and shelves.
- Wash the interior surfaces and shelves with a solution of mild detergent and warm water. Rinse thoroughly and dry completely with a soft cloth.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as they can damage surfaces.

6.2 Cleaning the Exterior

- Wipe the exterior with a soft cloth dampened with water and a mild detergent.
- For the glass door, use a glass cleaner and a lint-free cloth.
- Ensure no water enters the control panel or electrical components.

6.3 Door Seal Maintenance

Regularly check and clean the door gasket to ensure a tight seal. A dirty or damaged gasket can lead to inefficient cooling and increased energy consumption. Wipe the gasket with a damp cloth and dry thoroughly.

6.4 Power Saving Tips

- Avoid opening the door frequently or for extended periods.
- Ensure the cooler is not overloaded, as this can restrict airflow.
- Keep the condenser coils clean (located at the back or bottom of the unit) to maintain efficiency.

7. TROUBLESHOOTING GUIDE

Before contacting customer support, please refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Cooler does not operate	No power supply Power cord not plugged in Circuit breaker tripped	Check power outlet Ensure plug is securely inserted Reset circuit breaker
Cooler is not cooling sufficiently	Door not closed properly Door gasket damaged Excessive door openings High ambient temperature Temperature setting too high	Ensure door is fully closed Inspect and clean/replace gasket Reduce frequency of door openings Move cooler to a cooler location Lower temperature setting
Excessive noise	Cooler not level Vibrating components Normal compressor operation	Adjust leveling feet Ensure bottles/cans are not touching walls This is normal and will subside
Condensation on glass door	High humidity Frequent door openings	This is normal in humid conditions Reduce door openings

If the problem persists after checking these points, please contact customer support.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	CHiQ
Model Number	QRBC05B2S

Feature	Specification
Capacity	130 Liters
Dimensions (W x D x H)	58 cm x 59 cm x 88.1 cm (22.8 x 23.2 x 34.7 inches)
Net Weight	37 kg (81.6 lbs)
Voltage	220 Volts
Frequency	60 Hz
Color	Black
Door Hinge	Right
Door Material	Stainless Steel
Shelf Type	Metal Wire
Number of Shelves	4
Control Type	Digital Touch
Internal Lighting	LED
Can Capacity (330ml)	139
Bottle Capacity (550ml)	50

9. WARRANTY AND CUSTOMER SUPPORT

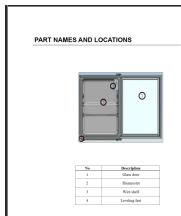
9.1 Product Warranty

This CHiQ beverage cooler comes with a **12-month warranty** provided by the manufacturer, covering defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accident, unauthorized modification, or improper installation.

9.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your CHiQ QRBC05B2S beverage cooler, please contact your retailer or the official CHiQ customer support channels. Refer to your purchase documentation for specific contact information.

Related Documents - QRBC05B2S

 <table border="1" data-bbox="158 1954 253 2021"> <thead> <tr> <th>No.</th><th>Descriptions</th></tr> </thead> <tbody> <tr> <td>1</td><td>Door</td></tr> <tr> <td>2</td><td>Handle</td></tr> <tr> <td>3</td><td>Base</td></tr> <tr> <td>4</td><td>Leveling Kit</td></tr> </tbody> </table> <p><small>IF ACCIDENTAL DAMAGE OCCURRED, PLEASE REFER TO THE ACCIDENTAL DAMAGE POLICY IN THE WARRANTY CARD.</small></p>	No.	Descriptions	1	Door	2	Handle	3	Base	4	Leveling Kit	<p>CHiQ Cooler CBC064BG User Manual: Installation, Operation, and Safety</p> <p>Comprehensive user manual for the CHiQ CBC064BG cooler, detailing part identification, important safety instructions, installation procedures, operating guidelines, energy-saving tips, maintenance advice, and troubleshooting solutions.</p>
No.	Descriptions										
1	Door										
2	Handle										
3	Base										
4	Leveling Kit										

