

[Manuals.plus](#) /

> [Elevon](#) /

> Elevon 800W 2.6 Cu. Ft. Portable Electric Clothes Dryer Instruction Manual

Elevon QD-EL-DRYER1-3

Elevon 800W 2.6 Cu. Ft. Portable Electric Clothes Dryer Instruction Manual

1. PRODUCT OVERVIEW

The Elevon 800W 2.6 Cu. Ft. Portable Electric Clothes Dryer is designed for efficient and convenient laundry drying in compact living spaces such as apartments, RVs, and dorms. Featuring an 800W motor and a 2.6 cubic feet stainless steel tub, this dryer offers multiple drying modes and flexible installation options.



Image: Front view of the Elevon Portable Clothes Dryer, white with a dark transparent door, showing laundry inside. A basket of folded towels and a potted plant are on top of the dryer.

2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Keep the area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the drum is moving.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you

understand and have the skills to carry out.

- Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Clean the lint filter before or after each load.
- Do not operate the dryer with a missing or damaged lint filter.
- Do not allow lint to accumulate around the dryer.
- Do not obstruct the flow of ventilating air.

3. SETUP

3.1 Unpacking and Placement

Carefully unpack the dryer and remove all packaging materials. The compact size (19.29" x 18.11" x 23.43") allows for flexible placement. It can be used as a stand-alone unit, wall-mounted (bracket included), or stacked.



Image: Visual representation of the dryer's versatile installation options, including freestanding on a counter, wall-

mounted above a laundry basket, and stacked on top of a larger washing machine.

COMPACT SIZE WITH LARGE CAPACITY



Image: A graphic illustrating the compact dimensions of the dryer (19.29" x 18.11" x 23.43") and showing it fitting into different small environments such as a home, apartment, dorm room, and RV.

3.2 Electrical Connection

Connect the dryer to a standard 110V electrical outlet. Ensure the outlet meets the power requirements of the 800W dryer.

3.3 Venting

The dryer requires proper venting to exhaust hot, moist air. Connect the exhaust pipe to the designated outlet at the back of the unit and route it to an appropriate outdoor vent or an indoor venting system designed for dryers. Ensure the vent path is clear and unobstructed.



**Automatic stop
when the door is opened**

Stainless steel drum

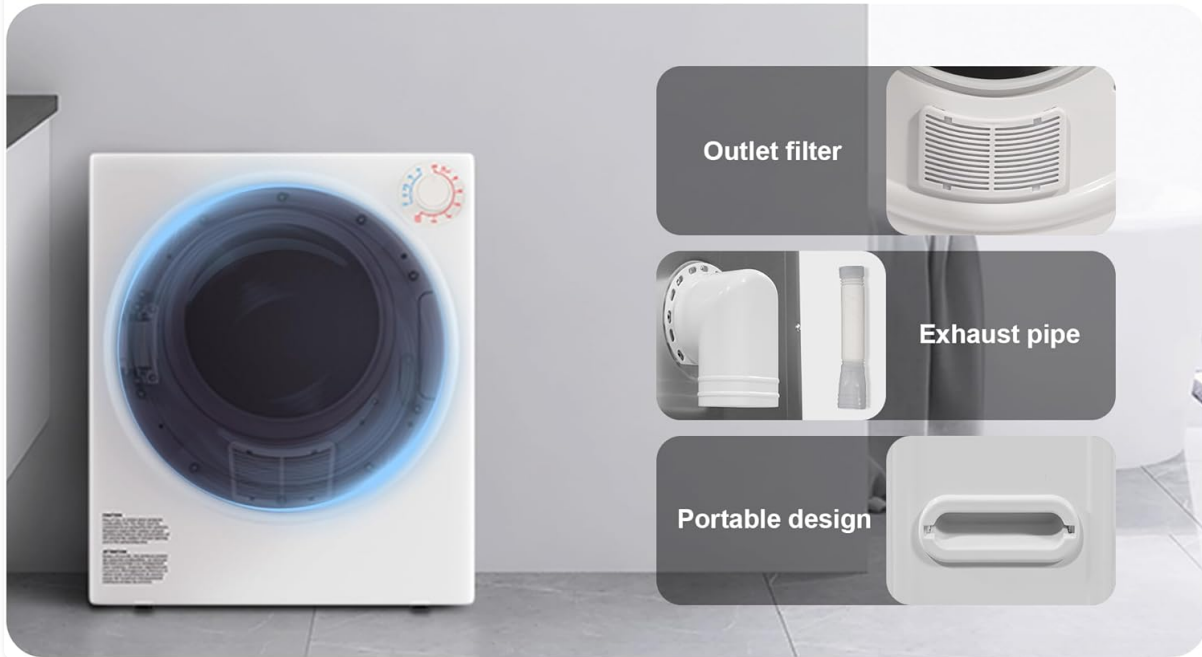


Image: A detailed view of the dryer's rear, highlighting the exhaust pipe connection and the internal structure of the stainless steel drum and lint filter.

Your browser does not support the video tag.

Video: This video demonstrates the compact design and basic setup of a portable laundry dryer, including connecting the exhaust hose and showing the internal drum. It highlights its suitability for small living spaces.

4. OPERATING INSTRUCTIONS

4.1 Loading Laundry

Open the dryer door, which features a 170° opening angle for easy loading and unloading. Place clothes loosely into the stainless steel diamond-patterned inner drum. Avoid overloading to ensure efficient drying and prevent damage to garments.

POWERFUL AND FAST DRYING



Image: The dryer in operation, with clothes visible through the transparent door, illustrating the powerful and fast drying capabilities.

4.2 Selecting Drying Modes

The dryer offers multiple drying modes to suit different fabric types and laundry sizes. Use the control panel to select your desired setting:

- **Cool Down (0-20 mins):** For cooling clothes after a heated cycle.
- **Anti-Wrinkle (30-60 mins):** Helps reduce wrinkles.
- **Air Dry (0-80 mins):** Dries clothes without heat.
- **Warm (60-150 mins):** Standard heated drying.
- **Hot (150-200 mins):** For heavier loads or faster drying.



Image: A detailed view of the dryer's timer dial and the various drying mode options, including Cool Down, Anti-Wrinkle, Air Dry, Warm, and Hot, with their respective time ranges.

4.3 Starting the Dryer

After selecting the desired mode and time, press the start button. The dryer will automatically stop when the door is opened during operation for safety.

5. MAINTENANCE

5.1 Lint Filter Cleaning

To maintain optimal drying efficiency and prevent fire hazards, clean the lint filter before or after each load. The lint filter is easily accessible and can be removed for cleaning.

5.2 Exterior Cleaning

Wipe the exterior of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents. The high-strength corrosion-resistant white plate shell and plastic door cover are designed for durability.

5.3 Internal Drum Care

The stainless steel diamond-patterned inner drum is designed to reduce wear and tear. Periodically inspect the drum for any foreign objects or damage.

6. TROUBLESHOOTING

If you encounter any issues with your Elevon Portable Clothes Dryer, please refer to the following common troubleshooting tips:

- **Dryer not starting:** Ensure the power cord is securely plugged into a working outlet and the door is fully closed. Check if the timer is set correctly.
- **Clothes not drying completely:** Avoid overloading the dryer. Ensure the lint filter is clean and the exhaust vent is not obstructed. Select an appropriate drying mode and time for the load size and fabric type.
- **Unusual noise:** Check for any foreign objects inside the drum. Ensure the dryer is placed on a stable, level surface.
- **Overheating:** Immediately turn off the dryer. Check the lint filter and exhaust vent for blockages. Allow the unit to cool down before attempting to restart.

For persistent issues not resolved by these steps, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Elevon
Model Number	QD-EL-DRYER1-3
Power	800W
Capacity	2.6 cu.ft
Color	White
Mounting Type	Stand-Alone, Wall-Mounted, Stacked
Material	Plastic, Stainless Steel
Item Weight	37.48 Pounds
Package Dimensions	25.98 x 23.03 x 19.69 inches
Noise Level	58-62dB
UPC	762849729961

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Elevon website. Contact details for customer service can typically be found in the product packaging or on the manufacturer's website.