

Lenyes Air 68

LENYES Air 68 Wireless Earbuds User Manual

Model: Air 68 | Brand: Lenyes

INTRODUCTION

Thank you for choosing the LENYES Air 68 Wireless Earbuds. These earbuds are designed to provide a superior audio experience with advanced features such as Bluetooth 5.3 connectivity, Active Hybrid Noise Cancellation (HNC), and HiFi stereo sound. This manual will guide you through the setup, operation, and maintenance of your new earbuds to ensure optimal performance and longevity.

IMPORTANT SAFETY INFORMATION

- Do not expose the earbuds or charging case to extreme temperatures, direct sunlight, or fire.
- Avoid using the earbuds at high volume levels for extended periods to prevent hearing damage.
- Keep the device away from water and moisture. If wet, dry thoroughly before use or charging.
- Do not attempt to disassemble, repair, or modify the device. This may void the warranty and cause damage.
- Use only the provided or certified charging cables and adapters.

PACKAGE CONTENTS

Please check that all items are present in your package:

- LENYES Air 68 Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable



Image: The retail packaging for the LENYES Air 68 Wireless Earbuds, displaying the earbuds and charging case inside.

PRODUCT OVERVIEW

The LENYES Air 68 earbuds feature a sleek, ergonomic design for comfortable wear. The charging case not only protects your earbuds but also provides additional battery life on the go.



Image: The LENYES Air 68 Wireless Earbuds, white in color, resting inside their open charging case, ready for use.

Key Features:

- **Bluetooth 5.3:** For stable and efficient wireless connection.
- **Active Hybrid Noise Cancellation (HNC):** Reduces ambient noise for immersive audio.
- **HiFi Stereo Sound:** Delivers clear and balanced audio quality.
- **20-Hour Playtime:** Extended listening with the charging case.
- **Touch Controls:** Intuitive control over music and calls.

SETUP GUIDE

1. Charging the Earbuds and Case

1. **Initial Charge:** Before first use, fully charge the earbuds and charging case.
2. **Charging the Case:** Connect the USB charging cable to the charging port on the case and to a power source. The indicator light will show charging status.
3. **Charging the Earbuds:** Place the earbuds into the charging case. Ensure they are correctly seated. The earbuds will charge automatically when placed in the case, indicated by their respective lights.

4. **Full Charge:** A full charge typically takes approximately 1-2 hours for the earbuds and 2-3 hours for the case.

2. Pairing with Your Device

1. **Activate Bluetooth:** Ensure Bluetooth is enabled on your smartphone, tablet, or other device.
2. **Open Case:** Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing light on the earbuds.
3. **Select Device:** On your device's Bluetooth settings, search for available devices and select "LENYES Air 68".
4. **Confirm Connection:** Once connected, a voice prompt will confirm the pairing, and the earbud indicator lights will stop flashing.
5. **Reconnect:** The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

OPERATING INSTRUCTIONS

Touch Controls (*Typical functions, may vary slightly*)

Action	Function
Single Tap (Left/Right)	Play/Pause Music, Answer/End Call
Double Tap (Right)	Next Track
Double Tap (Left)	Previous Track
Triple Tap (Right)	Volume Up
Triple Tap (Left)	Volume Down
Long Press (2 seconds)	Activate Voice Assistant, Reject Call
Long Press (Left/Right, 3 seconds)	Toggle Active Hybrid Noise Cancellation (HNC) / Transparency Mode

Note: Specific touch control functions may vary. Refer to the quick start guide included in your package for precise details if available.

Active Hybrid Noise Cancellation (HNC)

The LENYES Air 68 features Active Hybrid Noise Cancellation to reduce ambient noise. To activate or deactivate HNC, typically press and hold the touch sensor on either earbud for approximately 3 seconds. You may hear an audible prompt indicating the mode change.

MAINTENANCE

Cleaning

- Use a soft, dry, lint-free cloth to clean the earbuds and charging case.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Gently clean the ear tips and speaker mesh to remove earwax or debris.

Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store the device in a cool, dry place, away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

Problem	Solution
Earbuds not pairing with device.	<ul style="list-style-type: none">• Ensure earbuds are charged and out of the case.• Turn off and on Bluetooth on your device.• Forget "LENYES Air 68" from your device's Bluetooth list and try pairing again.• Restart your device.
Only one earbud is working.	<ul style="list-style-type: none">• Place both earbuds back into the charging case, close the lid, wait a few seconds, then take them out again.• Ensure both earbuds are charged.• Try resetting the earbuds (refer to specific reset instructions if available, or try forgetting and re-pairing).
Earbuds not charging.	<ul style="list-style-type: none">• Ensure the charging cable is securely connected to both the case and the power source.• Check if the charging port is clean and free of debris.• Try a different charging cable or power adapter.• Ensure earbuds are correctly seated in the charging case.
Poor sound quality or intermittent connection.	<ul style="list-style-type: none">• Ensure the earbuds are within the Bluetooth range of your device (typically 10 meters/33 feet).• Avoid physical obstructions between the earbuds and your device.• Check for interference from other wireless devices.• Clean the earbud speaker mesh.

SPECIFICATIONS

Feature	Detail
Model Name	Air 68
Brand	Lenyes
Connectivity Technology	Bluetooth 5.3, Wireless
Wireless Communication Technology	Bluetooth
Noise Control	Hybrid Noise Cancellation
Headphones Form Factor	True Wireless
Headphones Ear Placement	In Ear
Sensitivity	98 dB
Color	White
Package Dimensions	16.8 x 8.8 x 3.1 cm
Item Weight	45 g
Manufacturer	Lenyes
Country of Origin	China

WARRANTY AND SUPPORT

LENYES products are covered by a limited warranty. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official LENYES website. For technical support, troubleshooting assistance, or service inquiries, please contact LENYES customer support through their official channels.