

FOTING CBK-KLC-T3-BL012

FOTING 4500PSI Pressure Power Washer Instruction Manual

Model: CBK-KLC-T3-BL012

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your FOTING 4500PSI Pressure Power Washer. Please read it thoroughly before initial use and retain it for future reference. This pressure washer is designed for various outdoor cleaning tasks, including vehicles, driveways, decks, siding, and outdoor equipment.

2. SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. Ensure the power source matches the product's requirements. Never point the spray gun at people or animals. Wear appropriate personal protective equipment, including eye protection. Keep children and pets away from the operating area.

3. PACKAGE CONTENTS

Verify that all items are present upon unboxing:

- FOTING Pressure Power Washer Unit
- High-Pressure Spray Gun
- High-Pressure Water Pipe (23FT)
- Inlet Hose & Filter (5FT)
- Foam Cannon (Detergent Bottle)
- 4 Quick-Connect Nozzles (0°, 15°, 25°, 40°)
- Power Cord (16FT)
- Mounting Handle
- Mounting Bracket
- User Manual



Image 3.1: Overview of the FOTING Pressure Power Washer and its included accessories.

4. SETUP INSTRUCTIONS

Follow these steps to assemble and prepare your pressure washer for use:

1. **Unboxing and Initial Inspection:** Carefully remove all components from the packaging. Inspect for any damage.
2. **Attach Mounting Handle:** Secure the mounting handle to the top of the unit using the provided swivel screw.
3. **Install Mounting Bracket:** Attach the accessory mounting bracket to the side of the pressure washer. Use a screwdriver to secure it firmly.
4. **Connect High-Pressure Water Pipe:** Connect one end of the high-pressure water pipe to the outlet on the pressure washer unit and the other end to the spray gun.
5. **Connect Water Inlet Pipe:** Attach the inlet hose with filter to the water inlet on the pressure washer. Ensure a secure connection.
6. **Attach Spray Gun Components:** Connect the metal wand to the spray gun handle. Select the desired quick-connect nozzle and attach it to the end of the wand.
7. **Connect Water Supply:** Connect the inlet hose to a standard garden hose or use the siphon hose for drawing water from a bucket. Ensure the water supply is turned on before starting the unit.

Your browser does not support the video tag.

Video 4.1: Detailed unboxing and assembly guide for the FOTING Pressure Power Washer.



Image 4.2: Visual steps for assembling the pressure washer, including handle, bracket, hoses, and nozzles.



Image 4.3: Demonstrates connecting the pressure washer to a water source using the siphon hose from a bucket.

5. OPERATING INSTRUCTIONS

5.1 Starting the Unit

1. Ensure all connections are secure and the water supply is open.
2. Plug the power cord into a grounded electrical outlet.
3. Turn the rotary switch on the unit to the 'ON' position.
4. Press the trigger on the spray gun to begin spraying.

5.2 Using Quick-Connect Nozzles

The pressure washer includes four quick-connect nozzles, each designed for specific cleaning tasks:

- **0° (Red):** Powerful jet for concentrated cleaning on cracks, footpaths, and tough stains.
- **15° (Yellow):** Focused cleaning for concrete, asphalt, and bricks.
- **25° (Green):** Suitable for decks, fences, and terraces.

- **40° (White):** General cleaning for vehicles, windows, and outdoor furniture.



Image 5.1: Illustration of the four quick-connect nozzles and their respective spray angles and applications.

Your browser does not support the video tag.

Video 5.2: Demonstrates the quick attachment of accessories and the use of different nozzles for various cleaning tasks.

5.3 Using the Foam Cannon

The included foam cannon is ideal for applying detergent to surfaces, especially for car washing. Fill the detergent bottle with appropriate pressure washer detergent, attach it to the spray gun, and spray to create a rich foam that helps loosen dirt.



Image 5.3: The foam cannon in action, producing a rich foam for effective cleaning.

5.4 Smart Safety System (TSS)

The Total Stop System (TSS) automatically shuts off the pump when the trigger is not engaged, conserving energy, extending pump life, and ensuring safety.

5.5 Child Safety Switch

The spray gun is equipped with a child safety switch to prevent accidental operation. Always engage this switch when the pressure washer is not in use.

6. MAINTENANCE

6.1 Cleaning Nozzles

Regularly check and clean the nozzles to prevent blockages and maintain optimal spray performance. Use the included nozzle cleaning tool if necessary.

6.2 Storage

After each use, ensure the unit is turned off and disconnected from power and water. Drain any remaining water from the pump and hoses. Utilize the integrated hose reel for tidy storage of the high-pressure hose and the accessory holders for nozzles and the spray gun. The wheeled trolley design allows for easy movement and compact storage.



Image 6.1: Features for easy movement, stabilized base, and portable storage of the pressure washer.

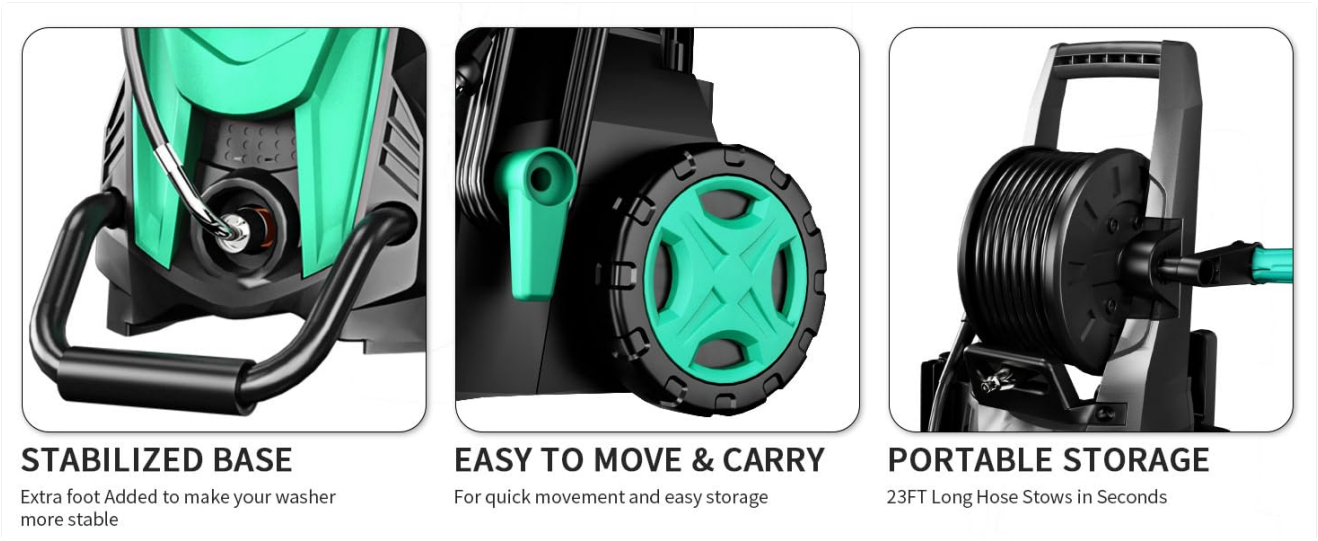


Image 6.2: Highlights organized storage for accessories and the quick-connect nozzle system.

6.3 Winterization

In cold climates, it is crucial to protect the pressure washer from freezing. Drain all water from the pump, hoses, and spray gun. Consider using a pump protector or antifreeze solution if storing in temperatures below freezing.

7. TROUBLESHOOTING

Refer to this section for common issues and their potential solutions:

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem | Possible Cause | Solution |
|------------------------|--|---|
| Unit does not start | No power, tripped circuit breaker, power switch off | Check power connection, reset breaker, turn switch ON |
| Low pressure | Insufficient water supply, clogged nozzle, air in pump | Ensure adequate water flow, clean nozzle, purge air from system |
| Water leaks | Loose connections, damaged O-rings | Tighten connections, replace damaged O-rings |
| Motor stops during use | Overheating, TSS activation | Allow unit to cool, release trigger to reset TSS |

8. SPECIFICATIONS

| Feature | Detail |
|--------------------|--|
| Brand | FOTING |
| Model Number | CBK-KLC-T3-BL012 |
| Power Source | AC |
| Maximum Pressure | 4500 PSI |
| Maximum Flow Rate | 3.2 Gallons Per Minute (GPM) |
| Hose Length | 23 Feet |
| Power Cord Length | 16 Feet |
| Item Weight | 28 Pounds |
| Product Dimensions | 8"L x 15"W x 27"H |
| Nozzle Types | 0°, 15°, 25°, 40° Quick-Connect |
| Safety Features | Total Stop System (TSS), Child Safety Switch |



 **FOTING**

MULTIFUNCTION
PRESSURE WASHER

Max. Flow Rate
3.2GPM

Max. Psi
4500PSI

Max. Pressure
310Bar

Rated Voltage
120V/60Hz

Hose Length
23FT

Power Cord
16FT

Adjustable Nozzles
0° / 15° / 25° / 40°



TSS


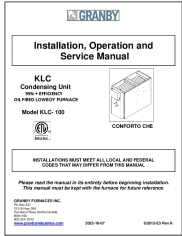



Image 8.1: Key specifications and features of the FOTING Pressure Power Washer.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please refer to the contact details provided with your purchase documentation or visit the official FOTING website. Keep your purchase receipt as proof of purchase.

Related Documents - CBK-KLC-T3-BL012

| | |
|---|---|
|  | <p>VEICHI AC70T Crane Purpose VFD Manual</p> <p>Comprehensive manual for the VEICHI AC70T Crane Purpose Variable Frequency Drive (VFD), detailing installation, operation, parameters, and maintenance for optimal crane performance.</p> |
|---|---|

| | |
|---|---|
|  | <p>RVR PJ-K-KLC Series FM Amplifiers - Technical Specifications</p> <p>Detailed technical specifications for the RVR PJ-K-KLC Series FM amplifiers, including the PJ10K-KLC model. Features power, quality, user-friendly interface, and cooling system information.</p> |
|  | <p>Granby KLC-100 Oil Fired Lowboy Furnace: Installation, Operation, and Service Manual</p> <p>Comprehensive guide for the Granby KLC-100 oil-fired lowboy condensing furnace, covering installation, operation, maintenance, troubleshooting, and technical specifications. Essential for installers and service technicians.</p> |
|  | <p>Cuisinart CBK-110 Series Compact Automatic Bread Maker: Instruction and Recipe Booklet</p> <p>User manual and recipe guide for the Cuisinart CBK-110 Series Compact Automatic Bread Maker. Learn to operate the appliance, bake various types of bread, and find troubleshooting tips. Features include multiple programs, delay start, and gluten-free options.</p> |
|  | <p>Cuisinart CBK-110 Series Compact Automatic Bread Maker: Instruction and Recipe Booklet</p> <p>User manual and recipe guide for the Cuisinart CBK-110 Series Compact Automatic Bread Maker, detailing operation, safety instructions, troubleshooting, and various bread, dough, jam, and cake recipes.</p> |
|  | <p>LinkedSparx The Box User Manual and Setup Guide</p> <p>Detailed user manual and setup guide for the LinkedSparx The Box smart LED lighting system, covering installation, app control, and troubleshooting.</p> |