

[manuals.plus](#) /› [Electactic](#) /› [Electactic 1500W Portable Oil-Filled Radiator Heater User Manual \(Model 36205HOR0\)](#)

Electactic 36205HOR0

Electactic 1500W Portable Oil-Filled Radiator Heater User Manual

MODEL: 36205HOR0

1. Important Safety Instructions

Please read this entire instruction manual before using your Electactic Portable Oil-Filled Radiator Heater. Failure to follow these instructions may result in fire, electric shock, injury to persons, or property damage. Keep this manual for future reference.

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- Do not use outdoors.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- This heater includes an Overheat Protection System and a Tip-Over Safety Switch that automatically shuts off the unit if it overheats or is accidentally knocked over.
- Ensure the heater is placed on a firm, level surface to prevent accidental tipping.

2. Product Overview

The Electactic 1500W Portable Oil-Filled Radiator Heater is designed to provide efficient and quiet supplemental heating for indoor spaces. Its oil-filled design ensures consistent warmth without drying out the air, making it ideal for bedrooms, offices, and living areas. The heater features multiple safety mechanisms for peace of mind.





Figure 2.1: Front view of the Electactic Portable Oil-Filled Radiator Heater.

Key Features:

- **Fast & Adjustable Heating:** Equipped with an adjustable thermostat (59°F to 95°F) for personalized comfort.
- **3 Heat Settings:** Offers versatile heating options: Low (600W), Medium (900W), and High (1500W).
- **Advanced Safety Features:** Includes tip-over switch and overheat protection for safe operation.
- **Portable & Easy to Store:** Features smooth-gliding wheels, an easy-carry handle, and built-in cord storage for convenience.
- **Ultra-Quiet Operation:** Provides consistent warmth silently, suitable for quiet environments.

3. Setup

3.1 Unpacking

1. Carefully remove the heater from its packaging.
2. Remove all packaging materials, including any protective films or labels.
3. Inspect the heater for any signs of damage. If damaged, do not operate and contact customer support.

3.2 Placement

- Place the heater on a firm, level surface.
- Ensure there is at least 3 feet (0.9 m) of clear space around the heater from walls, furniture, and other objects.
- Do not place the heater directly below a power outlet.
- This heater is for indoor use only. Do not use it in bathrooms, laundry areas, or similar indoor locations with high humidity.

3.3 Power Connection

- Ensure the heater is in the 'OFF' position before plugging it in.
- Plug the power cord directly into a 120V AC, 60Hz wall outlet. Do not use extension cords or power strips.

User-friendly Design



Figure 3.1: User-friendly design showing universal wheels, power cord storage, and built-in handle.

4. Operating Instructions

The Electactic Radiator Heater features dual-knob controls for easy temperature and heat setting adjustments.

Dual-Knob Temperature Control



Figure 4.1: Close-up of the dual-knob temperature and heat setting controls.

4.1 Powering On/Off

- To turn the heater ON, rotate the lower knob (Heat Settings) to your desired power level (I, II, or III).
- To turn the heater OFF, rotate the lower knob (Heat Settings) to the 'O' position.

4.2 Adjusting Heat Settings

Select one of the three heat settings using the lower knob:

- **I (Low Heating):** Approximately 600W for minimal warmth or smaller spaces.
- **II (Medium Heating):** Approximately 900W for moderate warmth.
- **III (High Heating):** Approximately 1500W for maximum warmth or larger spaces.

3 Heat Options

Each mode adapts to your needs—efficient, customizable, and silent



Figure 4.2: Illustration of recommended heat settings for different room sizes.

4.3 Setting the Thermostat

The upper knob controls the adjustable thermostat, allowing you to set a desired room temperature between 59°F and 95°F.

1. Turn the upper knob clockwise to increase the desired temperature or counter-clockwise to decrease it.
2. The heater will cycle on and off to maintain the set temperature.
3. For continuous heating, set the thermostat to its maximum position.

Immerse Yourself in a Soothing & Quiet Sleep

Experience uninterrupted comfort with silent, radiator heat that lasts through the night



Figure 4.3: The heater operating quietly in a bedroom setting.

5. Maintenance

5.1 Cleaning

- Always unplug the heater from the power outlet and allow it to cool completely before cleaning.
- Wipe the exterior surfaces of the heater with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Do not immerse the heater in water or allow water to drip into the interior of the heater.
- Clean the air intake and exhaust vents regularly with a vacuum cleaner or a soft brush to remove dust and lint.

5.2 Storage

- When not in use, store the heater in a cool, dry place.
- Utilize the built-in cord storage to neatly wrap the power cord, preventing tangles and damage.
- It is recommended to store the heater in its original packaging to protect it from dust and damage.

6. Troubleshooting

If your heater is not operating correctly, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power to the unit. Thermostat set too low. Tip-over switch activated.	Check if the power cord is securely plugged into a working outlet. Increase the thermostat setting. Ensure the heater is on a flat, stable surface and upright.
Heater turns off unexpectedly.	Overheat protection activated. Tip-over switch activated.	Unplug the heater, let it cool for 30 minutes, then clear any obstructions from vents. Re-plug and restart. Ensure the heater is on a flat, stable surface and upright.
Heater is not producing enough heat.	Heat setting too low. Thermostat set too low. Room size is too large for the selected setting.	Increase the heat setting (I, II, or III). Increase the thermostat setting. Use the 1500W (High) setting for larger rooms or consider using multiple heaters for very large spaces.

If the problem persists after trying these solutions, please contact Electactic customer support.

Multiple Safety Protection



Figure 6.1: Overview of the heater's multiple safety protection features.

7. Specifications

Feature	Specification
Brand	Electactic
Model Number	36205HOR0
Power Output	600W / 900W / 1500W
Voltage	120 Volts
Temperature Range	59°F - 95°F (Adjustable Thermostat)
Product Dimensions (D x W x H)	12.13" x 9.65" x 24.41"

 
Feature	Specification
Item Weight	15.1 pounds
Color	Deep Black
Indoor/Outdoor Usage	Indoor Only
Safety Features	Overheat Protection, Tip-Over Protection
Special Features	Adjustable Temperature, Portable (Wheels, Handle, Cord Storage), Quiet Operation

8. Warranty and Support

For warranty information, please refer to the documentation included with your product packaging or visit the official Electactic website. If you have any questions, concerns, or require technical assistance, please contact Electactic customer support through their official channels.

Contact Information: Refer to your product packaging or the Electactic official website for the most current customer support contact details.

Related Documents - 36205HOR0

<p>IMPORTANT INSTRUCTIONS AND OPERATING MANUAL</p> <p>ELECTRIC FIREPLACE</p>  <p>RFH-3001LC, RFH-3601LC RFH-4201LC, RFH-5601LC RFH-6801LC, RFH-6801Q</p> <p>NO VENTING REQUIRED</p> <p>WARNING</p> <p>CELESTE PRODUCT DESIGN AND MANUFACTURING COMPANY, LLC 01</p>	<p><u>Electac Electric Fireplace Operating Manual and Safety Instructions</u></p> <p>Comprehensive operating manual and safety instructions for Electac electric fireplaces (models RFH-3001LC through RFH-6801LC), covering installation, operation, maintenance, troubleshooting, and warranty information.</p>
<p>USER MANUAL PORTABLE AUTOMATIC ICE MAKER</p>  <p>MODEL NO.: HZB-12/Q</p>  <p>www.electacindia.com Email: service@electacindia.com</p>	<p><u>Portable Automatic Ice Maker User Manual - Model HZB-12/Q</u></p> <p>User manual for the Portable Automatic Ice Maker, Model HZB-12/Q. Includes safety instructions, operating guide, cleaning and maintenance, and troubleshooting.</p>
<p>USER MANUAL PORTABLE AUTOMATIC ICE MAKER</p>  <p>MODEL NO.: HZB-12/Q</p>  <p>www.electacindia.com Email: service@electacindia.com</p>	<p><u>User Manual: Portable Automatic Ice Maker HZB-12/Q</u></p> <p>This user manual provides instructions for operating, cleaning, and troubleshooting the HZB-12/Q portable automatic ice maker. It includes safety precautions, product features, and answers to frequently asked questions.</p>



[Electactic HZB-36B Automatic Ice Maker: Instruction Manual & Operation Guide](#)

Comprehensive instruction manual for the Electactic HZB-36B Automatic Ice Maker. Covers essential safety precautions, general information, installation, operation, cleaning, maintenance, troubleshooting, and correct disposal procedures for optimal performance and longevity.



[Electactic HZBF-0340 Portable Cube Ice Maker User Manual](#)

Comprehensive user manual for the Electactic HZBF-0340 portable cube ice maker, covering safety instructions, operation, cleaning, and troubleshooting. Learn how to set up, use, and maintain your ice maker.