

[manuals.plus](#) /

› [Edillas](#) /

› [Edillas Square Digital Sport Watch Model 461D User Manual](#)

**Edillas 461D**

# **Edillas Square Digital Sport Watch Model 461D User Manual**

Model: 461D

## **1. INTRODUCTION**

This manual provides instructions for the operation and maintenance of your Edillas Square Digital Sport Watch, Model 461D. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.



Image 1.1: Edillas Square Digital Sport Watch Model 461D (Light Pink)

## 2. PRODUCT FEATURES

- 1.5-inch large digital display for clear readability of time, date, and day of the week.
- Supports both 12-hour and 24-hour time formats.
- Equipped with an LED backlight for visibility in low-light conditions.
- Integrated alarm function.
- Stopwatch function for timing activities.
- 5ATM water resistance, suitable for shallow-water swimming and cold showers.
- Durable construction with a soft silicone strap and scratch-resistant resin crystal lens.
- Lightweight design (40g) with an adjustable band fitting wrist sizes from 14.2cm (5.6") to 22.5cm (8.9").

## 3. WATCH OVERVIEW AND BUTTON FUNCTIONS



Image 3.1: Watch Display and Button Layout

The Edillas Square Digital Sport Watch features four buttons:

- **LIGHT Button (Top Left):** Activates the LED backlight.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Stopwatch, Alarm).
- **START Button (Top Right):** Used to adjust settings (increment values), start/pause the stopwatch, or turn the alarm/hourly chime on/off.
- **RESET Button (Bottom Right):** Used to select flashing digits in setting mode, reset the stopwatch, or confirm settings.

## 4. SETUP AND OPERATING INSTRUCTIONS

### 4.1. Time and Date Setting

1. In normal time display mode, press the **MODE** button three times to enter time setting mode. The seconds digits will begin to flash.
2. Press the **RESET** button to advance to the next setting (hours, minutes, month, date, day of week).
3. While a digit is flashing, press the **START** button to adjust its value.
4. After setting all desired values, press the **MODE** button to exit the setting mode and return to normal time display.

### 4.2. Backlight Function

Press the **LIGHT** button (top left) to activate the LED backlight for approximately 3 seconds. This enhances visibility in dark environments.



### Easy Reading in the Dark

*It ensures clear time reading even in low-light conditions.*

Image 4.1: Backlight in use

### 4.3. Alarm Function

To use the alarm function, follow these steps:

1. Press the **MODE** button twice to enter the alarm mode.
2. To turn the alarm and hourly chime on or off, press the **START** button. A displayed bell icon indicates the alarm is on. A displayed "SIG" icon indicates the hourly chime is active. If the icon is not visible, the corresponding function is turned off.
3. To set the alarm time, press the **RESET** button. The hours digits will flash. Press the **START** button to adjust the hour setting.
4. After setting the hour, press the **RESET** button to switch to minute setting. Similarly, press the **START** button to adjust the minutes.
5. After setting the minutes, press **RESET** to confirm, then press **MODE** to exit the alarm setting mode.

#### 4.4. Stopwatch Function

To use the stopwatch function, follow these steps:

1. Press the **MODE** button once to enter stopwatch mode.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause the stopwatch.
4. While paused, press the **START** button again to resume timing.
5. To activate the SPL (Split) mode while the stopwatch is running, press the **RESET** button. The current timing data will be frozen and displayed, while the stopwatch continues running in the background. This function is useful for recording lap times.
6. Pressing the **RESET** button again will exit SPL mode.
7. To return the stopwatch to its initial state (00:00:00), press the **START** button to pause it, then press the **RESET** button.
8. Press the **MODE** button once to exit the stopwatch mode.

### 5. WATER RESISTANCE GUIDELINES

---

The Edillas Square Digital Sport Watch is rated for 5ATM (50 meters) water resistance. This means it is suitable for:

- Daily water resistance (splashes, rain).
- Shallow-water swimming.
- Cold showers.

#### Important Precautions:

- DO NOT press any buttons while the watch is submerged in water.
- Avoid exposure to hot water and steam, as this can compromise the watch's water resistance.
- Not suitable for surfing, diving, or high-pressure water activities.

# 164FT / 50M WATERPROOF

Note: **DO NOT** press any buttons underwater!



Image 5.1: Water Resistance Capabilities

## 6. BATTERY AND MATERIALS

# BATTERY & MATERIALS



Image 6.1: Watch Components

- **Strap:** Soft silicone, designed for comfort and durability.
- **Case Back:** Stainless steel, offering durability and corrosion resistance.
- **Battery:** CR2025 (included), providing long-lasting power for up to 1095 days.
- **Crystal:** Scratch-resistant resin.

## 7. CARE AND MAINTENANCE

- Clean the watch regularly with a soft, damp cloth. Avoid harsh chemicals or abrasive materials.
- Avoid extreme temperatures and direct sunlight for prolonged periods.
- Do not attempt to open the watch case or replace the battery yourself, as this may void the warranty and compromise water resistance. Seek professional service for battery replacement.
- Store the watch in a cool, dry place when not in use.

## Shockproof & Drop-Tested

*Ruggedly built to withstand drops from up to 2 meters.*

 


Image 7.1: Durability Features

## 8. SPECIFICATIONS

Feature	Detail
Model Number	461D
Package Dimensions	5.98 x 2.32 x 0.75 inches
Item Weight	2.4 ounces (40g)
Water Resistance	5ATM (50 meters)
Battery Type	1 C battery (CR2025)
Strap Material	Silicone
Case Material	ABS
Crystal Material	Resin

## WATCH SIZE



Case thickness:  
0.47 in / 1.2 cm



Product weight:  
1.41oz / 40 g

1.5in /  
3.81 cm



0.86 in /  
2.2 cm



Image 8.1: Watch Dimensions

## 9. TROUBLESHOOTING

If you encounter any issues with your Edillas Square Digital Sport Watch, please consider the following:

- **Display is blank or dim:** The battery may need replacement.
- **Time is incorrect:** Re-adjust the time settings as described in Section 4.1.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though not specified for this model) or that no debris is obstructing the buttons.


For further assistance, please contact customer support.

## 10. WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the product packaging or contact the retailer where the watch was purchased. Keep your proof of purchase for warranty claims.

Manufacturer: Yadelai

### Related Documents - 461D

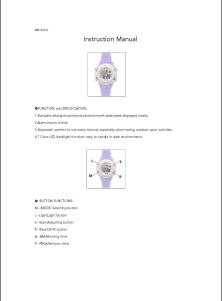	<p><a href="#"><u>MR-8203L Digital Kids Watch Instruction Manual - How to Set Time, Alarm, Stopwatch</u></a></p> <p>Comprehensive instruction manual for the MR-8203L digital kids watch by Edillas. Learn how to set time, date, alarm, use the stopwatch, and understand maintenance instructions. Features 7 color LED backlight.</p>
	<p><a href="#"><u>MILCOTS 5020UX 20-inch Rugged LCD Monitor Datasheet and Specifications   Artisan Technology Group</u></a></p> <p>Detailed technical specifications, features, and configurations for the MILCOTS 5020UX 20-inch waterproof LCD monitor designed for harsh environments. Includes information on Artisan Technology Group's pre-owned equipment services, repair, and custom engineering.</p>