

[Manuals.plus](#) /

› [AUDIOCULAR](#) /

› AUDIOCULAR M302 Android MP3 Player User Manual

AUDIOCULAR M302

AUDIOCULAR M302 Android MP3 Player User Manual

Model: M302

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your AUDIOCULAR M302 Android MP3 Music Player. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience.



Image 1.1: The AUDIOCULAR M302 Android MP3 Player.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your product package:

- 1x AUDIOCULAR M302 Portable MP3 Music Player
- 1x Charging Cable (USB Type-C)
- 1x Earphones
- 1x Protective Case
- 1x User Manual (this document)

IN THE BOX



Image 2.1: All items included in the AUDIOCULAR M302 product box.

3. DEVICE LAYOUT

Familiarize yourself with the physical components and controls of your M302 player.

HIFI SOUND QUALITY WITH WIDE FORMAT COMPATIBILITY

Combine music player, video player, FM radio, voice recording, Ebook, and more in a compact and portable form factor.



Image 3.1: Front view of the M302 player, highlighting the touchscreen display.

Key Components:

- **4.02-inch HD Touchscreen Display:** For navigation and interaction.
- **Power Button:** Located on the side, used for powering on/off and screen lock.
- **Volume Buttons:** Located on the side, for adjusting audio output.
- **USB Type-C Port:** For charging and data transfer.
- **3.5mm Audio Jack:** For connecting wired earphones or headphones.
- **MicroSD Card Slot:** For expandable storage up to 512GB.

4. SETUP

4.1 Charging the Device

Before first use, fully charge the M302 player. Connect the provided USB Type-C cable to the device and a compatible USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.



Image 4.1: Charging the M302 player via USB Type-C.

4.2 Power On/Off

- **To Power On:** Press and hold the Power button on the side of the device until the screen illuminates.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select 'Power off'.
- **To Lock/Unlock Screen:** Briefly press the Power button.

4.3 Initial Setup

Upon first power-on, follow the on-screen prompts to configure basic settings such as language, time zone, and Wi-Fi connection. A stable Wi-Fi connection is recommended for downloading apps and system updates.

5. OPERATING INSTRUCTIONS

5.1 Navigation

The M302 features a 4.02-inch touchscreen for intuitive navigation. Swipe left/right, up/down, tap, and long-press to interact with the Android 9.0 operating system and applications.

5.2 Music Playback

The device supports various audio formats including MP3, WAV, FLAC, APE, OGG, M4A, AAC, and WMA. Use the pre-installed music player app or other downloaded music applications to play your audio files.

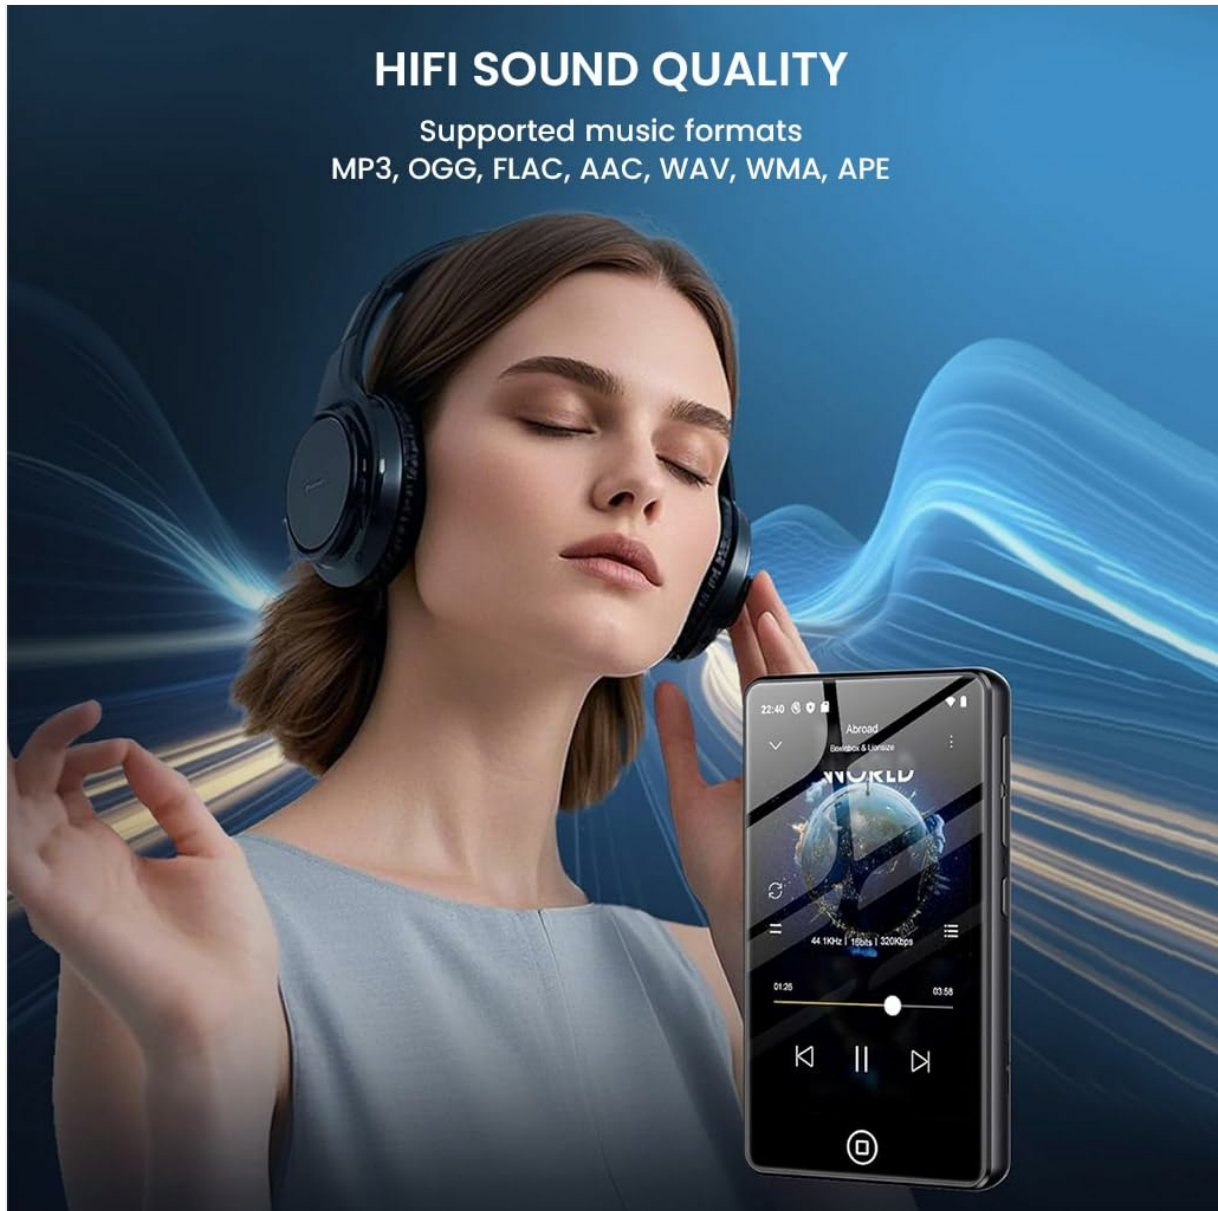


Image 5.1: Music playback on the M302 player.

5.3 Bluetooth Connection

To connect to Bluetooth headphones or speakers:

1. Go to **Settings > Connected devices > Bluetooth**.
2. Turn on Bluetooth.
3. Ensure your Bluetooth accessory is in pairing mode.
4. Select your accessory from the list of available devices to pair.

PORTABLE ANDROID MUSIC PLAYER WITH BLUETOOTH & WIFI SUPPORT



- Faster pairing with all your devices
- Enhanced connection stability



Image 5.2: M302 player demonstrating Bluetooth connectivity.

5.4 Wi-Fi Connection

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired network from the list and enter the password if prompted.

5.5 App Management

The M302 comes pre-installed with apps like Spotify and HiBy Music. You can download additional applications from the Google Play Store. To uninstall an app, long-press its icon on the home screen or app drawer and drag it to the 'Uninstall' option.

PERSONALISE YOUR UNIQUE PLAYER

The MP3 player can install additional apps as needed.
You can free up storage space by removing unnecessary applications.



Image 5.3: Uninstalling an application on the M302 player.

5.6 Storage Management

The device has 16GB of internal storage. You can expand this by inserting a MicroSD card (up to 512GB) into the dedicated slot. To manage files, use the pre-installed File Manager app.

5.7 FM Radio

The M302 includes a built-in FM radio function. Connect wired earphones (which act as an antenna) and open the FM Radio app to scan for and listen to local stations.

5.8 Voice Recorder

Utilize the integrated voice recorder for capturing audio notes or lectures. Open the Voice Recorder app and follow the on-screen instructions to start, pause, and save recordings.

5.9 Video Playback

The 4.02-inch HD touchscreen supports video playback. Use pre-installed apps like VLC or other video players to watch your favorite videos. Supported formats include RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, TS.

4.02" HD TOUCHSCREEN DISPLAY

RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, TS



Image 5.4: Video playback on the M302 player.

6. MAINTENANCE

6.1 Cleaning

To clean the device, use a soft, dry, lint-free cloth. Avoid using abrasive cleaners, solvents, or aerosol sprays, as these may damage the screen or casing. Do not expose the device to excessive moisture.

6.2 Software Updates

The M302 supports manual system updates via Wi-Fi. Regularly check for updates to improve functional compatibility and overall performance. To update, go to **Settings > System > System update** and follow the on-screen instructions.

WIRELESS UPDATES, NO COMPUTER REQUIRED

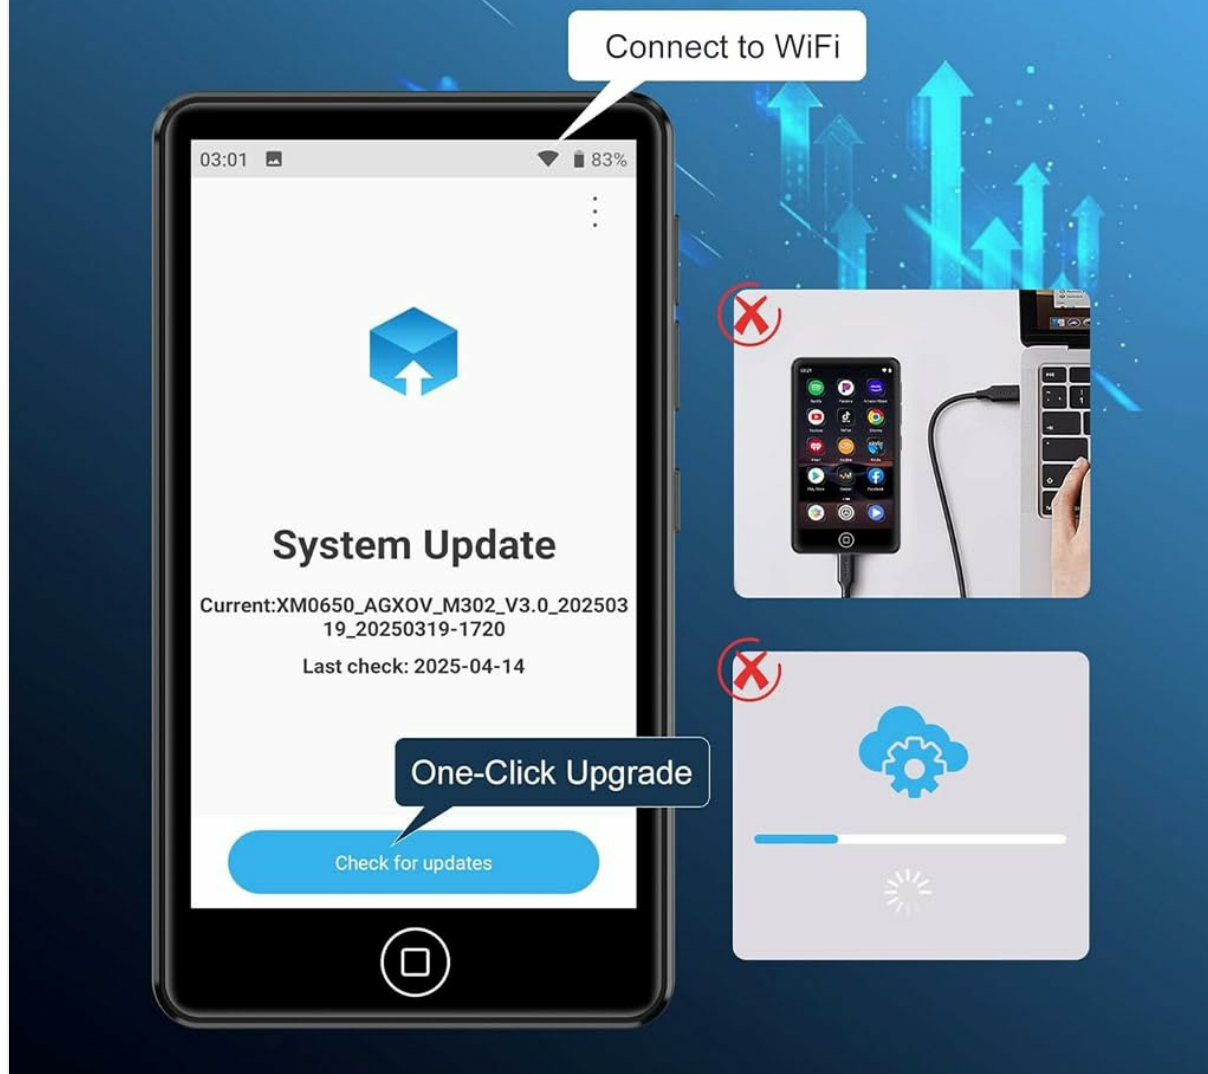


Image 6.1: System update interface on the M302 player.

7. TROUBLESHOOTING

If you encounter issues with your AUDIOCULAR M302, refer to the following common solutions:

- **Device not powering on:** Ensure the device is fully charged. Connect it to a power source and try again.
- **Screen unresponsive:** Try restarting the device by holding the Power button for approximately 10-15 seconds until it powers off and then on again.
- **Cannot connect to Wi-Fi/Bluetooth:** Ensure Wi-Fi/Bluetooth is enabled in settings. Restart the device and your router/Bluetooth accessory. Check for interference from other devices.
- **Apps crashing or not installing:** Ensure you have sufficient storage space. Clear the cache of the problematic app or the Google Play Store. Check your Wi-Fi connection stability.
- **Poor audio quality:** Ensure earphones/headphones are properly connected. Test with different audio files or accessories. Check volume settings.
- **Battery drains quickly:** Reduce screen brightness, close unused apps, and disable Wi-Fi/Bluetooth when not in use.

If the issue persists after attempting these steps, please contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the AUDIOCULAR M302 MP3 Player:

Feature	Specification
Model Name	M302
Operating System	Android 9.0
Processor	MTK 8-core processor
Display	4.02 Inches HD Touchscreen
Internal Storage	16 GB
Expandable Storage	Up to 512 GB (MicroSD)
Connectivity	Bluetooth, Wi-Fi, USB Type-C, Aux (3.5mm)
Supported Audio Formats	MP3, WMA, APE, FLAC, OGG, WAV, M4A, AAC
Supported Video Formats	RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, TS
Battery Capacity	2000mAh
Music Playback Time	Up to 45-50 Hours
Video Playback Time	Up to 6-8 Hours
Special Features	FM Radio, Hi-Res Audio, Voice Recorder
Dimensions (D x W x H)	1D x 6W x 10H Centimeters
Item Weight	108 Grams



Image 8.1: Internal components and system architecture of the M302 player.

9. PRODUCT OVERVIEW VIDEO

Watch this video for a visual overview of the AUDIOCULAR M302 MP3 Player's features and functionality.

Your browser does not support the video tag.

Video 9.1: An overview of the AUDIOCULAR M302 MP3 Player, demonstrating its key features and usage scenarios.

10. WARRANTY AND SUPPORT

10.1 Warranty Information

The AUDIOCULAR M302 MP3 Player comes with a **1-year warranty** against manufacturing defects. The included wired earphones are covered by a **6-month limited warranty** against manufacturing defects only.

10.2 Customer Support

For warranty claims, technical assistance, or any other inquiries, please contact our customer support team:

Email: customercare@conceptkart.com

Please provide your product model (M302) and purchase details when contacting support.

© 2026 AUDIOCULAR. All rights reserved.