

[Manuals.plus](#) /

› [Bellemave](#) /

› Bellemave Twin XL Over Twin XL Bunk Bed Instruction Manual

Bellemave Twin XL Over Twin XL Bunk Bed

Bellemave Twin XL Over Twin XL Bunk Bed Instruction Manual

Model: Twin XL Over Twin XL Bunk Bed

Brand: Bellemave

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Bellemave Twin XL Over Twin XL Bunk Bed. This versatile bunk bed features a heavy-duty metal construction and can be converted into a Twin XL loft bed and a separate Twin XL platform bed, offering flexible sleeping arrangements and space-saving solutions.

Please read all instructions carefully before assembly and retain this manual for future reference.



Image: The Bellemave Twin XL Over Twin XL Bunk Bed fully assembled in a bedroom, showcasing its sturdy metal frame and wooden headboard accents.

SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always assemble according to the provided instructions.
- Adult supervision is required when children are using the bunk bed.
- Do not exceed the weight capacity of **350 lbs** for the upper bed.
- Do not exceed the weight capacity of **500 lbs** for the bottom bed.
- Ensure all connections are tight and secure before use.
- This bunk bed has been certified by the Children's Product Certification (CPC).
- Use only mattresses that are 74-75 inches long and 37.5-38.5 inches wide for Twin XL beds.
- The maximum mattress thickness for the upper bunk should not exceed 6 inches to ensure proper guardrail height.

PACKAGE CONTENTS

Your Bellemave Twin XL Over Twin XL Bunk Bed will arrive in two separate boxes. Please ensure all parts are present before beginning assembly. The package includes:

- Metal frame components for upper and lower beds
- Headboard panels (Walnut finish)
- Full-length guardrails for the upper bed
- Integrated side ladders
- Heavy-duty slats for both beds
- All necessary hardware (screws, bolts, tools)
- Assembly instructions manual

If any parts are missing or damaged, please contact customer support immediately.

SPECIFICATIONS

| | |
|---|---|
| Size | Twin XL |
| Material | Metal (Powder Coated Finish) and MDF (Walnut Headboard) |
| Product Dimensions (L x W x H) | 82.7" x 44.1" x 59.1" |
| Upper Bed Weight Capacity | 350 lbs |
| Bottom Bed Weight Capacity | 500 lbs |
| Number of Slats (Upper/Bottom) | 20 / 20 |
| Height between Upper and Lower Bed | 38.8" |
| Included Components | Guardrails, Headboard, Ladder |
| Assembly Required | Yes |

UNIT:INCH

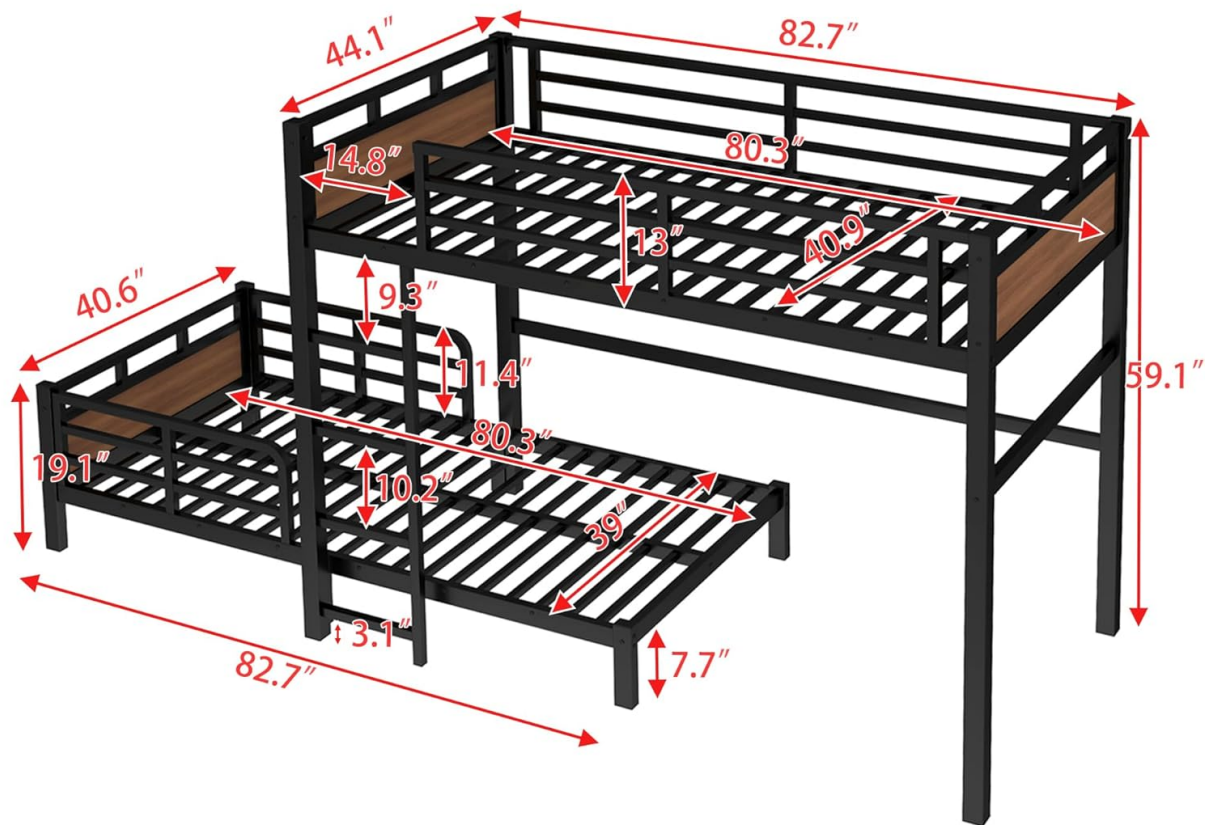


Image: Technical drawing showing the precise dimensions of the bunk bed in inches, including length, width, and height of both beds and the overall structure.

SETUP AND ASSEMBLY

Assembly of the Bellemave Twin XL Over Twin XL Bunk Bed is designed to be straightforward with detailed instructions and numbered parts. It is recommended to assemble the bed with at least two adults.

General Assembly Steps:

1. Unpack all components and verify against the parts list in your included manual.
2. Begin by assembling the base frames for both the upper and lower beds according to the numbered steps.
3. Attach the headboard and footboard panels.
4. Install the support legs and side rails.
5. Secure the heavy-duty slats to the bed frames.
6. For the bunk bed configuration, carefully lift and secure the upper bed frame onto the lower structure, ensuring all connection points are aligned and tightened.
7. Attach the guardrails to the upper bunk and the integrated ladders.
8. Ensure all screws and bolts are fully tightened for stability.

For a visual guide, please refer to the assembly videos below:

Your browser does not support the video tag.

Video: An overview of the Bellemave Twin XL Over Twin XL Bunk Bed, demonstrating its features and design in a room setting.

Your browser does not support the video tag.

Video: A general installation guide for heavy-duty bunk beds, showing the step-by-step assembly process.



Image: A detailed view of the sturdy metal guardrails and the walnut-finished headboard, highlighting the secure construction.

OPERATING INSTRUCTIONS (CONVERTIBLE FEATURES)

The Bellemave Twin XL Over Twin XL Bunk Bed offers a convertible design, allowing it to be used as a traditional bunk bed, or separated into a Twin XL loft bed and a Twin XL platform bed.

Converting to Loft Bed and Platform Bed:

1. Ensure both beds are empty and free of mattresses and bedding.
2. Carefully loosen and remove the connecting hardware that joins the upper bunk to the lower structure. It is recommended to have at least two adults for this step.
3. Gently lift and separate the upper Twin XL bed, which will function as a loft bed.
4. The lower Twin XL bed can then be moved and used as a standalone platform bed.
5. Ensure all removed hardware is stored safely for potential future reassembly into a bunk bed.



Image: The bunk bed reconfigured into a high loft bed and a separate, lower platform bed, demonstrating its versatility.



Image: A view of the bunk bed with the lower Twin XL bed detached and positioned as a standalone bed, separate from the upper loft bed.

MAINTENANCE

Proper maintenance will ensure the longevity and safety of your bunk bed.

- **Regular Inspection:** Periodically check all bolts, screws, and connections to ensure they are tight. Re-tighten as necessary to prevent wobbling and noise.
- **Cleaning:** Wipe metal surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish. For wooden headboard panels, use a wood-safe cleaner.
- **Weight Distribution:** Ensure weight is evenly distributed on both bunks and do not exceed the stated weight capacities.
- **Moving the Bed:** When moving the bed, lift it rather than dragging it to prevent damage to the frame and floor.



Image: An illustration highlighting the noise-free design of the bunk bed, emphasizing reinforced connection structures and sturdy materials.

TROUBLESHOOTING

If you encounter any issues with your bunk bed, refer to the following common solutions:

- **Wobbling or Instability:** Check all bolts and screws. Re-tighten any loose fasteners. Ensure the bed is placed on a level surface. The bed frame includes anti-tip fittings to enhance stability; ensure these are properly installed.
- **Squeaking Noises:** Squeaking often indicates loose connections. Systematically tighten all bolts and screws. Applying a small amount of lubricant (e.g., silicone spray) to metal-on-metal contact points can also help.
- **Difficulty Assembling:** Review the assembly instructions carefully. Ensure all parts are correctly oriented and that you are using the correct hardware for each step. Do not force parts together. If a part appears bent or damaged, contact customer support.
- **Missing Parts:** If you find any parts missing upon unboxing, please refer to the 'Warranty and Support' section to contact us for replacements.

WARRANTY AND SUPPORT

For any questions, concerns, or issues regarding your Bellemave Twin XL Over Twin XL Bunk Bed, including warranty information or replacement parts, please contact our customer support team.

Email: US-VC@bellemavehome.com

Please provide your product model number and purchase date when contacting support to ensure efficient service.