

carori HPC-610-SDP

CARORI 9-in-1 Electric Pressure Cooker

MODEL: HPC-610-SDP

Instruction Manual

1. Product Overview

The CARORI 9-in-1 Electric Pressure Cooker is a versatile kitchen appliance designed to simplify your cooking experience. It combines multiple functions into one unit, offering convenience and efficiency for a variety of meals. With its intuitive IMD touchscreen and advanced safety features, preparing delicious and healthy dishes is easier than ever.

- **9-in-1 Cooking:** One appliance, multiple functions, includes pressure cook, steam, slow cook, sauté, sterilize, bake, warm food, and more. If you want to cook different dishes, only one pot is enough.
- **Dual Inner Pots:** Switch between two included inner pots: a stainless steel pot for browning and high-heat cooking, and a non-stick ceramic pot for easy, oil-free meals. Enjoy the flexibility of using either pot depending on what you're cooking.
- **IMD Touchscreen:** The full-touch digital panel offers an intuitive and elegant interface, no knobs or stiff buttons. Easily access 12 presets for rice, soups, beans, poultry, cake, and more with one gentle press.
- **Fast Cooking and Slow Cooking:** With 1000W of power, this electric pressure cooker cooks meals up to 70% faster than traditional methods, perfect for busy days. Or choose slow cook mode to gently simmer your food for rich, tender results.
- **16+ Safety Features:** Designed with advanced safety, pressure control, secure lid locking, steam release button, overheat protection, and anti-blockage vents all ensure a safe cooking experience every time.
- **Family-size 6 Qt Capacity:** With a generous 6-quart capacity, this cooker easily serves 5–6 people or prepares up to 24 cups of rice, suitable for everyday meals or special occasions like holidays and dinner parties.
- **24-Hour Delay Start and Keep Warm Function:** Meal planning made easy, set it ahead of time to cook whenever you need. Wake up to a ready breakfast or come home to a warm dinner, automatically kept at serving temperature.
- **Quick Cleanup:** Both inner pots are removable and dishwasher-safe. The stainless steel pot resists staining, while the non-stick ceramic pot wipes clean with ease, so post-meal cleanup is no longer a chore.

2. What's in the Box

Your CARORI Electric Pressure Cooker package includes the following items:

- 1 Electric Pressure Cooker Unit
- 1 Stainless Steel Inner Pot
- 1 Ceramic Non-stick Inner Pot
- 1 Condensation Cup
- 1 Steam Rack
- 1 Rice Spoon
- 1 Measuring Cup
- 1 Recipe Booklet
- 1 User Guide
- 1 Power Cord



Image: All components included in the CARORI Electric Pressure Cooker package.

3. Product Features

Dual Inner Pots for Versatility

Ceramic Non-stick Pot

Perfect for sticky dishes
and easy cleaning



One Cooker, Two Inner Pots

Switch pots to keep cooking,
no washing needed between dishes



Stainless Steel Pot

No coating suitable for hearty
stews, meats and soups

CARORI

CARORI

CARORI

CARORI

CARORI

Image: The two distinct inner pots for different cooking needs.

The cooker comes with two specialized inner pots: a non-stick ceramic pot ideal for delicate foods and easy cleanup, and a durable stainless steel pot perfect for searing and high-heat cooking. This allows for seamless transitions between dishes without immediate washing.

Intuitive IMD Touchscreen

IMD Touch Screen

Touch control and an intuitive display make cooking easy



Image: Detailed view of the digital IMD touchscreen panel.

The full-touch digital panel provides a modern and easy-to-use interface. With 12 preset cooking programs, you can effortlessly select the desired function for your meal, eliminating the need for complex manual adjustments.

Versatile 9-in-1 Cooking Functions

9-in-1 Functions

Pressure cook, steam, sauté, slow cook, sous vide and more!

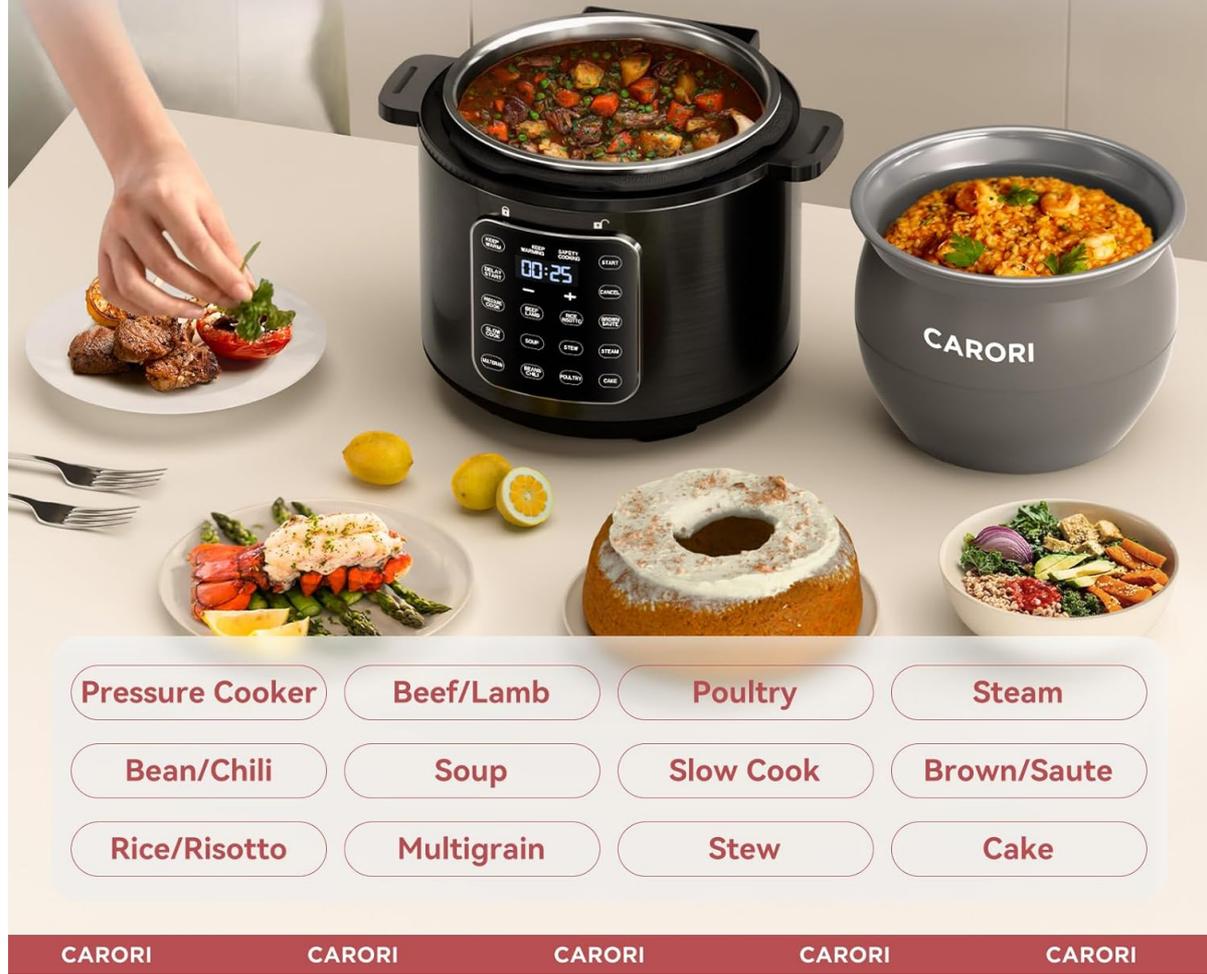


Image: An array of meals demonstrating the cooker's 9-in-1 capabilities.

This appliance offers nine distinct cooking functions, including pressure cook, steam, sauté, slow cook, and more. This multi-functionality allows you to prepare a wide range of dishes, from tender meats to steamed vegetables, all in one convenient device.

Efficient Fast & Slow Cooking

Up to 70% Faster

Save Time and Enjoy Quick, Delicious Meals Every Day



Image: Visual representation of the cooker's fast cooking speed and high power.

With 1000W of power, the pressure cook function can prepare meals up to 70% faster than traditional methods. Alternatively, the slow cook mode allows for gentle simmering, perfect for developing rich flavors and tender textures.

Convenient Delay Start & Keep Warm

6 Qt Family Size Capacity

Perfect for big meals, batch cooking,
or gatherings of 4-6 people



Image: People enjoying meals made convenient by delay start and keep warm features.

The 24-hour delay start function allows you to program cooking to begin at a later time, ensuring meals are ready when you need them. The automatic keep warm function maintains food at serving temperature after cooking is complete.

Easy Cleanup & Dishwasher Safe

Dishwasher-Safe

Removable nonstick inner pot and lid are dishwasher safe for effortless cleaning



Image: Inner pots and lid being placed into a dishwasher for cleaning. Both the stainless steel and ceramic non-stick inner pots are removable and dishwasher-safe, simplifying post-meal cleanup. The non-stick coating ensures food residue wipes away easily.

4. Setup

1. **Unpack and Inspect:** Carefully remove all components from the packaging. Inspect for any damage. Remove all packaging materials, stickers, and labels.
2. **Clean Components:** Before first use, wash the inner pots, condensation cup, steam rack, rice spoon, and measuring cup with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the cooker base with a damp cloth.
3. **Install Condensation Cup:** Attach the condensation cup to the slot on the back of the cooker base.
4. **Place Inner Pot:** Insert either the stainless steel or ceramic non-stick inner pot into the cooker base. Ensure it sits flat and securely.
5. **Close and Lock Lid:** Align the lid with the cooker base, ensuring the arrow on the lid points to the

