



Manuals.plus /

- › Sweetcrispy /
- › Sweetcrispy Farmhouse TV Stand (Model T-TVS-S58IN) Instruction Manual

Sweetcrispy T-TVS-S58IN

Sweetcrispy Farmhouse TV Stand

MODEL: T-TVS-S58IN

IMPORTANT SAFETY INFORMATION

Always assemble the TV stand with at least two people to ensure stability and prevent injury. Be cautious when handling heavy components, as the stand can support up to 300 lbs. Keep the area around the stand clear of flammable materials and ensure all wires and power supplies are properly managed using the rear cable grommet to prevent fire hazards and electrical shocks. Always follow the provided assembly instructions and safety guidelines for a safe and secure installation.

PRODUCT OVERVIEW

The Sweetcrispy Farmhouse TV Stand is designed to accommodate televisions up to 65 inches, offering a blend of rustic style and practical storage. Constructed from durable engineered wood, it features adjustable shelving, cable management solutions, and smooth-gliding barn doors to keep your living space organized and tidy.



Overall view of the Sweetcrispy Farmhouse TV Stand, Model T-TVS-S581N.

Key Features

- **Premium Engineered Wood:** Built from thick, waterproof, and scratch-resistant engineered wood with a rich farmhouse finish, ensuring lasting durability.
- **Ample & Customizable Storage:** Measuring 57.95" L x 15.24" W x 27.56" H, it provides sufficient space for media players, speakers, decor, and gaming accessories. Two adjustable shelves allow for flexible organization.
- **Sturdy Construction & Cable Management:** Designed to hold up to 300 lbs. A rear cable grommet keeps wires organized and out of sight.
- **Smooth Sliding Barn Doors:** Steel-track barn doors glide effortlessly, allowing you to conceal or display items as needed.

Product Video Overview

Your browser does not support the video tag.

A brief overview of the Sweetcrispy Modern TV Stand, highlighting its features and design.

SPECIFICATIONS

Attribute	Detail
Brand	Sweetcrispy
Model Number	T-TVS-S58IN
Color	Brown
Material	Engineered Wood
Product Dimensions (D x W x H)	14.33"D x 56.77"W x 27.56"H
Weight Capacity (Maximum)	300 Pounds
Number of Shelves	3
Number of Doors	1 (sliding barn door style)
Required Assembly	Yes
Waterproof	Yes
Scratch-Resistant	Yes



Product dimensions and TV size compatibility.

UNIVERSAL FIT
FOR MOST FLAT-SCREEN TVS

Size	Width	Height	Area
32"	27.9in	15.7in	437in ²
42"	36.6in	20.6in	754in ²
50"	43.6in	24.5in	1068in ²
65"	56.7in	31.9in	1805in ²

65"
50"
42"
32"

Universal fit for most flat-screen TVs up to 65 inches.

ASSEMBLY INSTRUCTIONS

Your Sweetcrispy Farmhouse TV Stand comes with clearly labeled hardware, precision-cut panels, and a step-by-step graphic manual. For optimal assembly, it is recommended to have two people.

Video Assembly Guide

Your browser does not support the video tag.

Detailed video guide on how to install the Sweetcrispy TV Stand with Sliding Barn Doors.

Key Assembly Details

- Ensure all components are present and undamaged before beginning assembly.
- Follow the numbered steps in the included graphic manual.
- Use the provided hardware for secure connections. Do not overtighten screws.

VINTAGE

T A B L E T O P

Dark solid wood with natural grain and a sense of age, the warmth of wood exudes a sense of luxury.



Waterproof



Scratch-Resistant



Durable

Details of adjustable shelves, sturdy construction, and cable management.

PRODUCT DETAILS

Pay attention to every detail and make reliable, convenient, and durable products.



Mechanism of the smooth-gliding barn doors.

OPERATING INSTRUCTIONS

Sliding Barn Doors

The TV stand features smooth-gliding barn doors on a steel track. To operate, gently slide the doors left or right along the track to reveal or conceal the storage compartments. Ensure the track is free from obstructions for optimal movement.



Sliding barn doors save space compared to traditional hinged doors.

Adjustable Shelves

The internal shelves are adjustable to accommodate items of various heights. To adjust a shelf, remove any items, lift the shelf, and reposition the shelf pins into the desired pre-drilled holes. Ensure the shelf is level and securely seated on all four pins before placing items on it.



Adjustable shelves for customizable storage.

MAINTENANCE

To maintain the appearance and longevity of your Sweetcrispy TV Stand, wipe it with a dry cloth regularly. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish. Promptly clean any spills to prevent staining or water damage. Periodically check all hardware connections to ensure they remain tight and secure.

TROUBLESHOOTING

Wobbly Stand

- Ensure all screws and fasteners are securely tightened.
- Verify that the stand is placed on a flat, level surface. Adjust furniture levelers if present.

Doors Not Sliding Smoothly

- Check the sliding track for any debris or obstructions.
- Ensure the door rollers are properly seated on the track.
- Confirm that the track is securely attached to the stand.

Missing Parts or Damaged Components

If you find any parts missing or damaged upon opening the package, please contact customer support immediately for assistance.

WARRANTY AND SUPPORT

Sweetcrispy products are designed for quality and durability. For specific warranty details, please refer to the warranty information provided with your purchase or visit the official Sweetcrispy website. If you require further assistance, have questions about assembly, or need to report an issue, please contact Sweetcrispy customer support through the retailer where the product was purchased or via the contact information available on the Sweetcrispy brand store.

You can visit the Sweetcrispy Store for more information: [Sweetcrispy Store on Amazon](#)