

[Manuals.plus](#) /

› [COLAMY](#) /

› COLAMY Tufted Dining Chairs Instruction Manual - Model Dining Chairs-B242

COLAMY Dining Chairs-B242

COLAMY Tufted Dining Chairs Instruction Manual

Model: Dining Chairs-B242

INTRODUCTION

Thank you for choosing COLAMY Tufted Dining Chairs. This manual provides essential information for the safe assembly, operation, and maintenance of your new chairs. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image: Front view of the COLAMY Tufted Dining Chair in beige.

SAFETY INFORMATION

- Ensure proper assembly according to the user manual.
- Do not exceed the maximum weight capacity of **250 pounds**.
- Use on hard, level floors only.
- Keep away from heat sources to prevent fabric damage.
- Periodically check all bolts and connections to ensure they remain tight.

PACKAGE CONTENTS

Your package should contain the following items for a set of 2 chairs:

- 2 x Chair Backrests

- 2 x Chair Seats
- 8 x Chair Legs (typically found zipped inside the seat cushion)
- Hardware Pack (bolts, washers, Allen wrench)
- 1 x User Manual (this document)

If any parts are missing or damaged, please contact customer support.

SETUP AND ASSEMBLY

The chairs require assembly. Please follow these general steps. Refer to the included diagram for visual guidance.

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components listed in the "Package Contents" section are present. *Note: Chair legs and hardware are often stored in a zippered compartment underneath the seat cushion for shipping.*
2. **Attach Front Legs:** Align the front legs with the designated mounting points under the chair seat. Secure them using the provided bolts and washers. Do not fully tighten yet.
3. **Attach Back Legs:** Align the back legs with their respective mounting points. Secure them with bolts and washers. Do not fully tighten.
4. **Attach Backrest:** Connect the chair backrest to the seat frame. Ensure all holes align. Secure with the remaining bolts and washers.
5. **Final Tightening:** Once all components are loosely assembled, place the chair upright on a flat, level surface. Apply gentle downward pressure to ensure all parts are seated correctly, then gradually tighten all bolts evenly until secure. Avoid over-tightening.
6. **Check Stability:** Test the chair for stability. If it wobbles, loosen the bolts slightly, adjust the chair on a flat surface, and re-tighten. The adjustable footpads can also help compensate for minor unevenness.



Image: This diagram illustrates the dimensions of the dining chair and indicates that legs and hardware are located under the seat for assembly.



Image: Detailed view highlighting the tufted back, thick padded seat, and adjustable footpads for stability.

OPERATING INSTRUCTIONS

These dining chairs are designed for indoor use in dining rooms, kitchens, living rooms, or office settings. Each chair has a maximum weight capacity of **250 pounds**. Ensure the chair is placed on a stable, level surface before use. Avoid standing on the chair or using it as a step stool.

MAINTENANCE

- **Cleaning:** The upholstered fabric can be cleaned by wiping with a clean, damp cloth. For spills, blot immediately with a clean, dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Leg Care:** The rubberwood legs can be wiped clean with a soft, dry cloth.
- **Hardware:** Periodically check and re-tighten all assembly hardware to maintain stability and safety.
- **Floor Protection:** The chair legs are equipped with rubber feet to prevent scratching floors. Inspect these periodically for wear and replace if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair wobbles after assembly	Bolts not tightened evenly; uneven floor surface.	Loosen all bolts slightly, place the chair on a flat surface, apply gentle pressure, then re-tighten all bolts evenly. Adjust the footpads if necessary.
Missing parts or hardware	Parts overlooked during unpacking.	Check all packaging materials thoroughly, especially zippered compartments under the seat. If still missing, contact customer support.
Difficulty aligning holes during assembly	Components are not correctly oriented or bolts are overtightened prematurely.	Ensure all parts are oriented as shown in the assembly diagram. Do not fully tighten any bolts until all components are loosely connected.

SPECIFICATIONS

- **Brand:** COLAMY
- **Model Name:** Dining Chairs-B242
- **Color:** Beige
- **Product Dimensions (D x W x H):** 27.17" x 17.72" x 39.76"
- **Seat Height:** 19.69 inches
- **Seat Depth:** 17.52 inches
- **Seat Length:** 17.72 inches
- **Chair Backrest Width:** 16.14 inches
- **Seat Back Interior Height:** 22.05 inches
- **Item Weight:** 31 pounds (per chair)
- **Maximum Weight Recommendation:** 250 pounds
- **Frame Material:** Rubberwood
- **Upholstery Fabric Type:** Linen
- **Fill Material:** Memory Foam, Sponge
- **Included Components:** Dining chairs, user manual

WARRANTY

For warranty information, please refer to the specific terms and conditions provided at the time of purchase or contact COLAMY customer support directly. Keep your proof of purchase for any warranty claims.

SUPPORT

For further assistance, questions, or to report missing/damaged parts, please visit the official COLAMY store or contact their customer service department.

COLAMY Store: <https://www.amazon.com/stores/COLAMYHOME/page/2510A0F4-022E-4520-8326-47A0C7058032>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question