

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GOOLOO](#) /

› [GOOLOO GT160 Dual Tire Inflator & GP4000 Jump Starter Instruction Manual](#)

## GOOLOO GT160

# GOOLOO GT160 Dual Tire Inflator Portable Air Compressor & GOOLOO GP4000 Jump Starter Instruction Manual

Model: GT160 & GP4000

[Overview](#) [What's in the](#)

[Box](#) [Setup](#) [Operating](#) [Maintenance](#) [Specifications](#) [Troubleshooting](#) [Warranty & Support](#)

## PRODUCT OVERVIEW

The GOOLOO GT160 Dual Tire Inflator Portable Air Compressor and GOOLOO GP4000 Jump Starter is a versatile and essential tool for vehicle owners. This compact unit combines a powerful dual-cylinder tire inflator, a high-capacity power bank, and an integrated LED flashlight, offering comprehensive solutions for roadside emergencies, daily maintenance, and outdoor adventures. The GT160 inflator features rapid inflation capabilities, a vibrant color display for clear readings, and intelligent auto shut-off to prevent over-inflation. The GP4000 jump starter provides reliable power to start most 12V vehicles and can also charge various electronic devices.

## Key Features:

- 400% Faster Inflation:** Dual-cylinder design (22mm x 2) delivers up to 160 PSI, inflating a standard tire from 30 PSI to 36 PSI in under 30 seconds (250/55R16).
- Extended Runtime:** Powered by a 10,000mAh rechargeable battery, providing up to 25 minutes of continuous use for multiple inflations.
- Vibrant Color Screen:** Dynamic LED color display with 2000 nits brightness and rotating indicator ring for real-time tracking and clear visibility in direct sunlight.
- Preset Modes & Auto Shut-Off:** Offers 4 preset inflation modes (car, motorcycle, bicycle, ball), 1 custom mode, and 3 selectable pressure units (PSI, BAR, kPa). Automatically stops inflation when preset pressure is reached.
- 3-in-1 Multifunction:** Combines a car tire air pump, power bank, and LED flashlight.
- Organized Storage:** Integrated magnetic storage design keeps nozzles securely in place.
- GP4000 Jump Starter:** Capable of jump starting most 12V vehicles (All Gas, 10L Diesel) up to 60 times on a single charge.
- Power Bank Functionality:** Provides multiple charges for devices like iPhone 12 (6 charges), Galaxy S20 (4.5 charges), and iPad mini (2.5 charges).
- Quality Metal Clamps:** Sturdy copper material for reliable jump starting connections.

## WHAT'S IN THE Box

- GOOLOO GT160 Dual Tire Inflator Portable Air Compressor
- GOOLOO GP4000 Jump Starter
- Air Hose (flexible, with screw-on connector)
- USB-C Charging Cable
- Car Charger (for GP4000)
- Various Nozzle Adapters (for balls, bikes, etc.)
- Carry Bag
- User Manual / Quick Reference Guide

## SETUP

### Charging the GT160 Inflator:

1. Connect the provided USB-C charging cable to the input port on the GT160.
2. Plug the other end of the USB-C cable into a compatible USB power adapter (not included) or a USB port.
3. The battery indicator on the screen will show charging progress. Ensure the device is fully charged before first use for optimal performance.

### Charging the GP4000 Jump Starter:

1. Connect the car charger or wall charger to the input port on the GP4000.
2. Plug the charger into a power source.
3. The LED indicators will show the charging status. Fully charge before first use.

## OPERATING INSTRUCTIONS

### Using the GT160 Tire Inflator:

1. **Attach Air Hose:** Screw the flexible air hose clockwise into the output port on the top of the GT160 until snug.
2. **Power On:** Press and hold the power button to turn on the inflator. The screen will display the current mode and PSI.
3. **Select Mode:** Use the mode selection button to cycle through preset modes (car, motorcycle, bicycle, ball) or a custom setting.
4. **Set Pressure:** Use the '+' and '-' buttons to adjust the target PSI for your tire or inflatable. The device will not inflate if the current pressure is already at or above the set target.
5. **Connect to Tire:** Remove the valve cap from your tire. Ensure the air hose connector is in the unlocked position, then firmly attach it to the tire valve stem. Flip the lever to lock it in place.

6. **Start Inflation:** Press the start button. The inflator will begin pumping and automatically stop once the preset pressure is reached.
7. **Disconnect:** Once inflation is complete, unlock the lever and quickly remove the air hose from the valve stem. Replace the valve cap.



Image: GOOLOO GT160 inflating a car tire, demonstrating the auto-shutoff feature.

# SUNLIGHT-READABLE COLOR

Crystal-Clear Outdoor Readouts



Max Pressure: 160 PSI. Mode PSI values are factory-default presets for reference only.

Image: GOOLOO GT160 display showing car, motorcycle, bicycle, ball, and custom modes with corresponding PSI settings.

## Using the LED Flashlight:

- Press the light button to turn on the LED flashlight.
- Press again to cycle through different light modes (e.g., steady, flashing).
- Press and hold the light button to turn off the flashlight.

## Using the GT160 as a Power Bank:

- Connect your device's charging cable to the USB output port on the GT160.

- The GT160 will automatically begin charging your device.

## Using the GP4000 Jump Starter:

1. **Connect Clamps:** Attach the red clamp to the positive (+) terminal of the vehicle battery and the black clamp to the negative (-) terminal.
2. **Power On:** Turn on the GP4000 jump starter.
3. **Start Vehicle:** Start your vehicle.
4. **Disconnect:** Once the vehicle starts, disconnect the clamps from the battery.

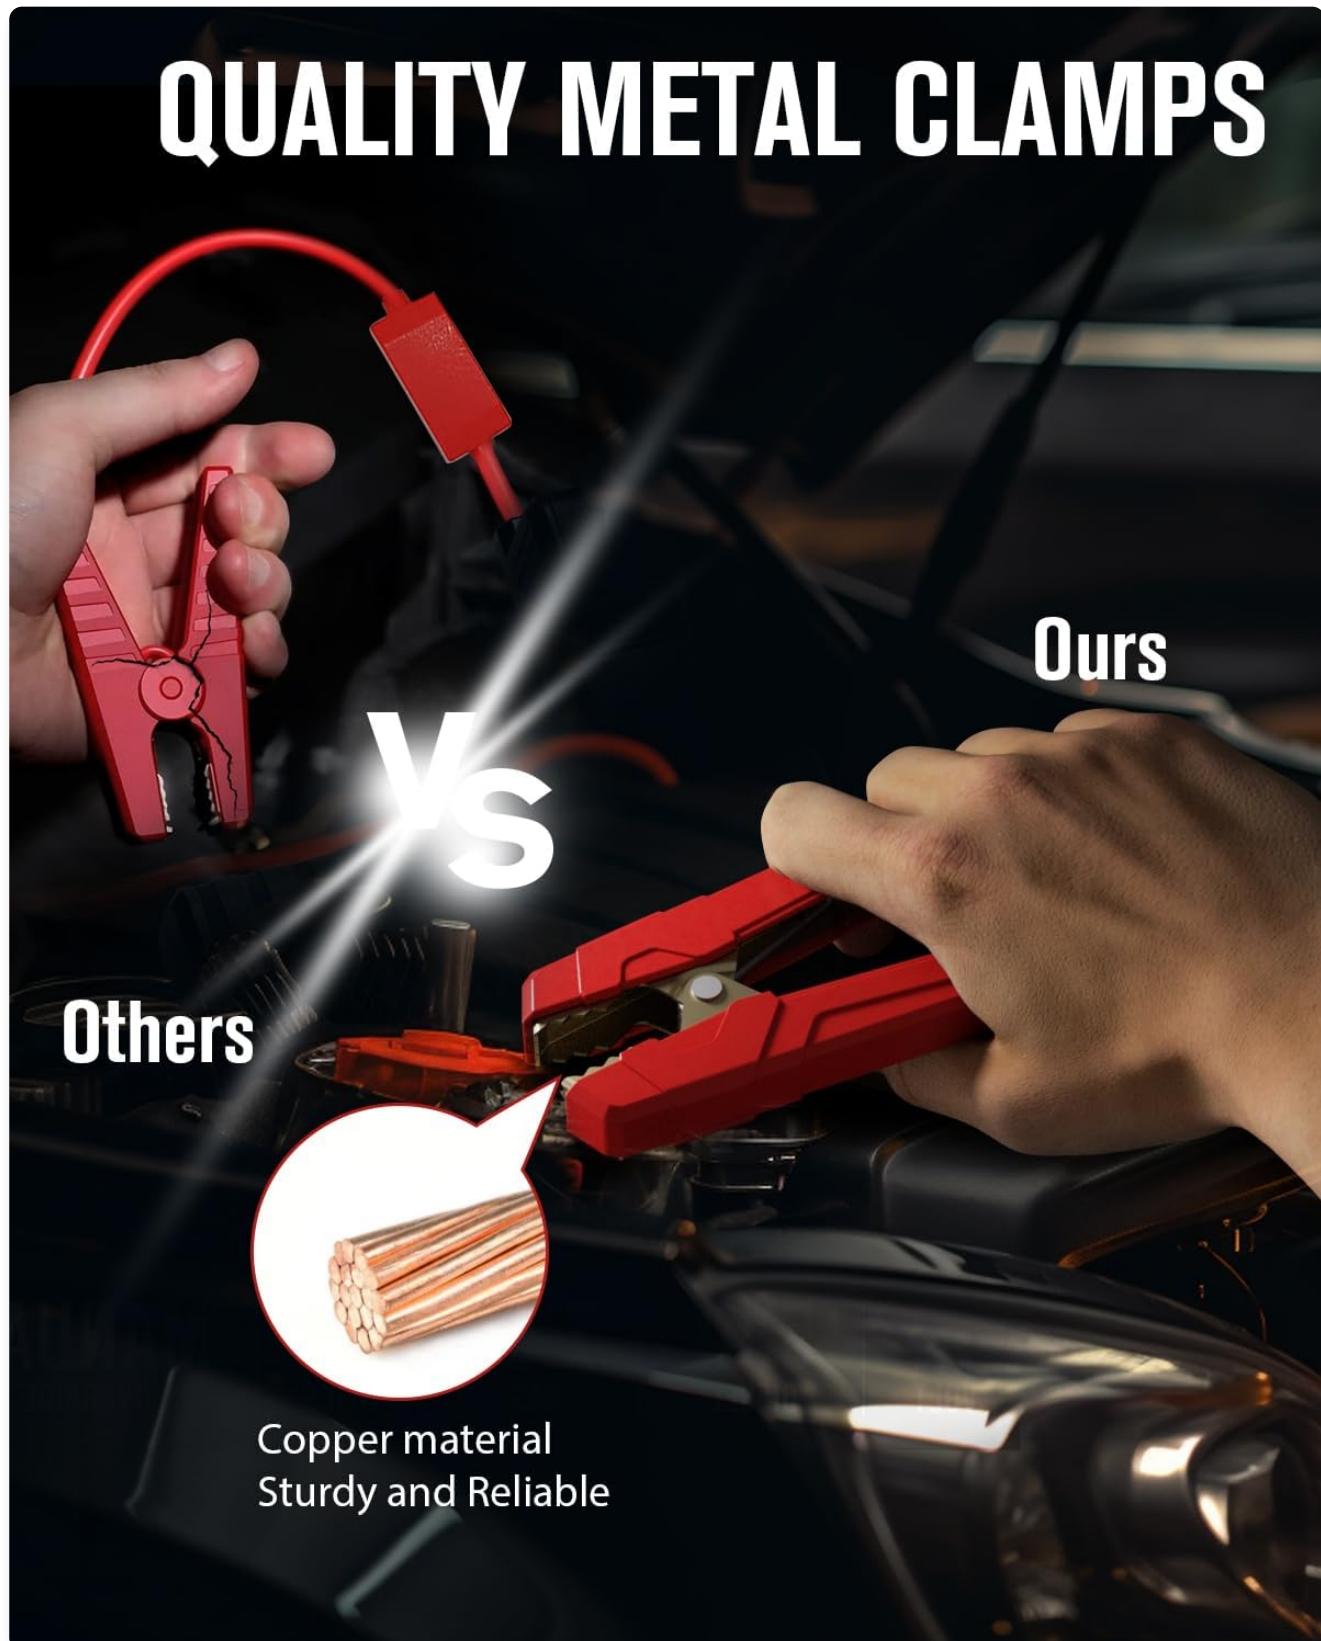


Image: GOOLOO GP4000 jump starting a vehicle with red and black clamps connected to the car battery.

# SPECIFICATIONS



Image: GOOLOO GP4000 showing its specifications with labeled ports for In/Out Type-C, Quick Charging Output, 15V/10A Output, LED Indicator, and LED Light.

## MAINTENANCE

- Regularly charge both the GT160 and GP4000, especially if stored for extended periods, to maintain battery health.
- Store the devices in a cool, dry place away from direct sunlight and extreme temperatures.
- Keep the air hose and nozzle adapters clean and free from debris.
- Inspect the jump starter clamps for any damage or corrosion before each use.

## SPECIFICATIONS

Brand	GOOLOO
Model (Inflator)	GT160
Model (Jump Starter)	GP4000
Max Inflation Pressure	160 PSI
Battery Capacity (GT160)	10,000mAh
Continuous Use (GT160)	Up to 25 minutes
Screen Brightness	2000 nits
Jump Starter Compatibility	Most 12V vehicles (All Gas, 10L Diesel)
Jump Starts per Charge (GP4000)	Up to 60 times
ASIN	B0FNN2YJHF
Date First Available	July 1, 2025

## TROUBLESHOOTING

- **Inflator not turning on:** Ensure the device is charged. Press and hold the power button for a few seconds.
- **Inflator not pumping:** Check if the air hose is securely attached to both the inflator and the tire valve. Ensure the preset PSI is higher than the current tire pressure.
- **Jump Starter not working:** Verify that the clamps are correctly connected to the battery terminals (red to positive, black to negative). Ensure the jump starter is sufficiently charged.
- **Inaccurate pressure reading:** Ensure the air hose is fully and correctly attached to the tire valve.

## WARRANTY & SUPPORT

For warranty information, technical support, or any product-related inquiries, please refer to the official GOOLOO website or contact their customer service directly. Keep your purchase receipt for warranty claims.

© 2025 GOOLOO. All rights reserved.