

TUSY ACCA (XFT-001 & XFT-11/12/13/14)

TUSY 71-inch TV Stand Storage Set Instruction Manual

Model: ACCA (XFT-001 & XFT-11/12/13/14)

Brand: TUSY

1. INTRODUCTION AND OVERVIEW

This manual provides detailed instructions for the assembly, operation, and maintenance of your TUSY 71-inch TV Stand Storage Set. This comprehensive 4-piece furniture set includes two tall bookcases and two side cabinets, designed to offer versatile storage and display solutions for your living space. The set features a combination of glass and wood doors, along with drawers, allowing for a customizable arrangement to suit your needs.

Please read this manual thoroughly before beginning assembly or use to ensure proper installation and safe operation.

2. SAFETY INFORMATION

Important Safety Instructions:

- **Anti-Tip Kit:** Ensure the unit is securely anchored to the wall using the included anti-tip kit to prevent tipping. This is especially critical in households with children and pets to prevent serious injury.
- **Weight Capacity:** Do not exceed the recommended weight capacity for shelves and cabinet tops. Overloading can lead to structural damage or tipping.
- **Assembly:** Assemble the unit on a soft, clean surface to prevent scratches. Ensure all hardware is tightened securely before use. Periodically check and re-tighten all connections.
- **Placement:** Place the furniture on a level surface to ensure stability. Uneven surfaces can cause the unit to wobble or become unstable.
- **Children:** Do not allow children to climb on or play with the furniture. Keep small parts and assembly hardware out of reach of children.
- **Ventilation:** If placing electronic devices inside cabinets, ensure adequate ventilation to prevent overheating.

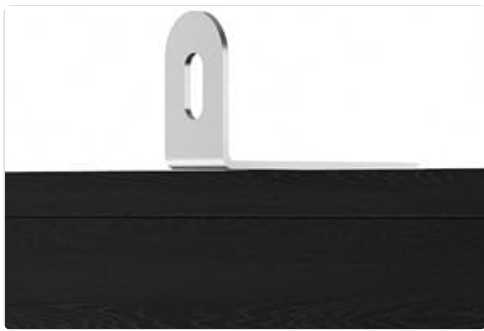


Image: Anti-tip bracket for securing the furniture to a wall.

3. PACKAGE CONTENTS

Your TUSY 71-inch TV Stand Storage Set includes the following main components:

- 2 x Tall Bookcases (with glass doors)
- 2 x Side Cabinets (specific style depends on your selection: wood doors, glass doors, drawers, or combination)
- All necessary assembly hardware (screws, dowels, cam locks, hinges, handles, etc.)
- Installation Manual
- Anti-tip kit

Please verify all parts are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

4. SPECIFICATIONS

Feature	Detail
Brand	TUSY
Model Name	TUSY Entertainment Center with Bookcase
Model Numbers	XFT-001 & XFT-11/12/13/14 (ACCA Set)
Color	Black (as per current product)
Material	Engineered Wood
Finish Type	Painted
Mounting Type	Floor Mount
Overall Dimensions (W x D x H)	110.3 x 15.7 x 71 inches
Tall Bookcase Dimensions (each)	15.7" D x 23.6" W x 71" H
Side Cabinet Dimensions (each)	15.7" D x 31.5" W x 31.5" H
Number of Pieces	4 (2 Tall Bookcases, 2 Side Cabinets)
Item Weight	320 Pounds (total)
Assembly Required	Yes



Image: Detailed dimensions of the TUSY 71-inch TV Stand Storage Set components.

5. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of your TUSY TV Stand Storage Set is designed to be straightforward. The product comes with pre-drilled parts and a tool-assembly process. Follow the steps outlined in the included installation manual carefully. Pieces are designed to fit smoothly without requiring excessive force.

5.1 Before You Begin

- Clear a spacious area for assembly.
- Lay out all components and hardware. Refer to the parts list in your separate printed manual to identify each piece.
- Use a soft blanket or cardboard to protect the furniture surfaces and your floor during assembly.
- Gather necessary tools (typically a screwdriver and possibly a hammer, as specified in your manual).

5.2 Assembly Steps (General Guidelines)

1. **Assemble Base Units:** Start by assembling the base frames for both the tall bookcases and side cabinets according to the diagrams in your manual.
2. **Attach Side Panels:** Secure the side panels to the base units using the provided hardware (e.g., cam locks and dowels).
3. **Install Shelves:** Insert shelf pins into the desired holes and place the adjustable shelves. Ensure fixed shelves are securely fastened.
4. **Attach Back Panels:** Fasten the back panels to the units.
5. **Install Doors and Drawers:** Attach hinges to doors and mount them to the cabinets. Install drawer slides and assemble drawers, then insert them into their respective compartments.
6. **Attach Handles/Knobs:** Secure the handles or knobs to all doors and drawers.
7. **Connect Units (Optional):** If combining units, use the provided connectors to secure them together for a seamless and stable setup.
8. **Install Anti-Tip Kit:** This is a crucial step. Follow the instructions to securely attach the anti-tip kit to the top of the furniture and to a wall stud.

For detailed, step-by-step instructions with diagrams, please refer to the [Installation Manual](#) included in your package.



Image: Illustration of a person assembling a cabinet component.

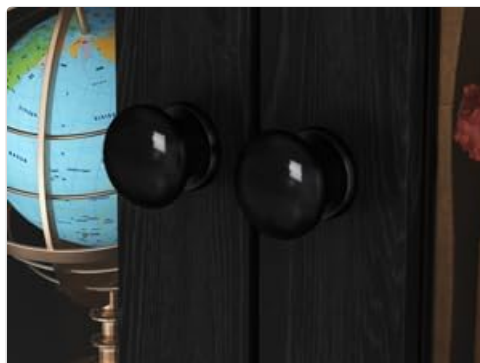


Image: Close-up view of a black cabinet knob on a door.

6. OPERATING INSTRUCTIONS

Once assembled and securely anchored, your TUSY TV Stand Storage Set is ready for use.

- **Storage:** Utilize the various compartments, shelves, and drawers to organize your media devices, books, decorative items, and other belongings.
- **Adjustable Shelves:** The tall bookcases and some side cabinets may feature adjustable shelves. To adjust, remove items, lift the shelf, reposition the shelf pins to the desired height, and then place the shelf back onto the pins.
- **Doors and Drawers:** Open and close doors and drawers gently to prevent wear and tear. Ensure nothing obstructs their movement.
- **TV Placement:** Place your television centrally on the side cabinets. Ensure the TV base fits within the cabinet dimensions and that the weight does not exceed the cabinet's capacity.



Image: The TUSY TV Stand Storage Set arranged in a living room, showcasing its storage capabilities.



Image: A close-up of the tall bookcase section, displaying items stored on shelves behind glass doors.

7. MAINTENANCE

Proper care and maintenance will extend the life and appearance of your furniture.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Clean spills immediately with a dry cloth to prevent staining or water damage.
- **Hardware:** Periodically check all screws, bolts, and connections to ensure they remain tight. Re-tighten as necessary to maintain stability.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration.
- **Heat and Moisture:** Keep the furniture away from direct heat sources and areas of high humidity. Use coasters under drinks to protect surfaces.

8. TROUBLESHOOTING

If you encounter any issues with your TUSY TV Stand Storage Set, refer to the following common solutions:

- **Wobbly Unit:**

- Ensure the furniture is placed on a level surface.
- Check and re-tighten all assembly hardware.
- Verify that the anti-tip kit is correctly installed and secured to the wall.

- **Doors Not Aligning:**

- Adjust the hinges. Most furniture hinges allow for minor adjustments to align doors horizontally, vertically, and in depth. Refer to your specific hinge type for adjustment screws.
- Ensure the cabinet frame is square and all connections are tight.

- **Drawers Sticking:**

- Check that the drawer slides are correctly installed and aligned.
- Ensure no objects are obstructing the drawer's path.
- Verify that the drawer is not overloaded.

- **Missing Parts or Damaged Components:**

- Do not proceed with assembly. Contact TUSY customer support immediately for replacement parts.

9. WARRANTY INFORMATION

Specific warranty details for the TUSY 71-inch TV Stand Storage Set may vary. Please refer to the warranty card included with your product or visit the official TUSY website for the most up-to-date warranty information. Generally, warranties cover manufacturing defects under normal use.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact TUSY customer support. Our professional service team is available to help you.

Contact Information:

- Refer to your product packaging or the included manual for specific contact details (phone number, email address).
- Visit the official TUSY website: [TUSY Store on Amazon](#) (for general inquiries and product information).

When contacting support, please have your model number (ACCA or XFT-001 & XFT-11/12/13/14) and purchase date available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question