
[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA XRT270 Voice Remote Control User Manual

ASHATA XRT270

ASHATA XRT270 Voice Remote Control User Manual

Model: XRT270

1. INTRODUCTION

This manual provides detailed instructions for the ASHATA XRT270 Voice Remote Control, a replacement remote designed for various TV series including D, M, P, and V Series 4K FHD TVs. It features voice control and dedicated shortcut buttons for enhanced user experience.



Figure 1: ASHATA XRT270 Voice Remote Control in a typical usage scenario.



Figure 2: Key features of the ASHATA XRT270 Voice Remote Control.

2. SETUP

2.1 Battery Installation

The ASHATA XRT270 Voice Remote Control requires two (2) AAA batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 3: Open battery compartment for AAA battery installation.



Figure 4: Detailed view of the battery compartment.

2.2 Pairing the Remote Control

Before using the remote for the first time, or if you are replacing an old remote, you must pair it with your TV.

1. Ensure your TV is powered on.
2. If you are replacing an old remote, ensure it is disconnected or removed from the TV's pairing list (refer to your TV's user manual for specific instructions).
3. Simultaneously press and hold the **Microphone button** and the **Mute button** on the new remote control for approximately 5 seconds.
4. Release the buttons when the indicator light on the remote control begins to flash. This indicates the remote is in pairing mode.
5. Follow any on-screen prompts that may appear on your TV to complete the pairing process.

Once successfully paired, the indicator light will stop flashing, and the remote control will be ready for use.

3. OPERATING INSTRUCTIONS

3.1 Basic Functions

- **Power Button:** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI 1, HDMI 2, AV, etc.).
- **Navigation Pad (Directional Buttons & OK):** Used to navigate menus and select items.
- **Volume Up/Down:** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's main home screen or smart TV interface.
- **Settings Button:** Opens the TV's settings menu.

3.2 Voice Control Function

The remote features a voice control function, allowing you to issue commands to your TV using your voice.

1. Press and hold the **Microphone button** (usually located near the top-center of the remote).
2. Speak your command clearly into the remote. Examples include:
 - "Change to HDMI 1"
 - "Open Netflix"
 - "Search for action movies"
 - "Set volume to 20"
3. Release the Microphone button after speaking your command.



Figure 5: Examples of voice commands for the remote control.



Figure 6: Location of the Microphone button for voice control.

3.3 Shortcut Buttons

The remote includes several dedicated shortcut buttons for quick access to popular streaming services and features:

- **Netflix:** Direct access to the Netflix application.
- **Disney+:** Direct access to the Disney+ application.
- **Prime Video:** Direct access to the Prime Video application.
- **WatchFree+:** Provides access to a large amount of content from hundreds of unpaid channels.

Multiple Functions

The watchfree key provides a large amount of content from hundreds of unpaid channels; The voice function allows you to easily search, play, and change input sources with just voice commands; Advanced Bluetooth technology allows you to control the TV from anywhere in the room



Figure 7: Shortcut buttons for quick access to streaming services and WatchFree+.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or the indicator light fails to illuminate during use. Always replace both AAA batteries simultaneously with new ones.

4.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as this can damage the remote's electronics.

5. TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are correctly installed and not depleted. Replace if necessary.
- Confirm the remote is properly paired with your TV. Refer to Section 2.2 for pairing instructions.

- Ensure there are no obstructions between the remote and the TV.
- **Voice function not working:**
 - Verify the remote is paired. Voice functionality often relies on a stable connection.
 - Speak clearly and directly into the microphone.
 - Check your TV's settings to ensure voice control is enabled.
- **Pairing fails:**
 - Ensure any old remotes are unpaired or removed from the TV's device list.
 - Restart your TV and try the pairing process again.
 - Ensure new batteries are used.

6. SPECIFICATIONS

Feature	Detail
Model Number	XRT270
Product Material	ABS, Silicone
Product Color	Black
Battery Type	2 x AAA Battery (Not Included)
Transfer Distance	Over 40 ft
Package Dimensions	5.91 x 1.97 x 1.18 inches
Item Weight	2.19 ounces
Max Number of Supported Devices	1

6.1 Compatibility

This remote control is compatible with TV models that support voice function, including but not limited to:

- D Series: D24fM-K01, D32fM-K01, D40fM-K09, D43fM-K04
- M Series: M43Q6-J04, M43Q6M-K04, M50Q6-J01, M50Q7-J01, M50QXM-K01, M55Q6-J01, M55Q6-L4, M55Q6M-K01, M55Q7-J01, M58Q7-J01, M65Q6-L4, M65Q6-J09, M65Q6M-K04, M65Q7-J01, M65QXM-K03, M70Q6M-K03, M70Q7-J03, M75Q7-J03, M75Q6M-K03, M75Q6-L4, M75QXM-K03
- P Series: P65Q9-J01, P75Q9-J01
- V Series: V435-J01, V435M-K04, V436-J04, V505M-K09, V506-J09, V555M-K01, V556-J01, V585M-K01, V586-J01, V655M-K03, V655M-K04, V656-J09, V705M-K03, V706-J03, V755M-K03, V756-J03, VQP65C-84, VQP75C-84

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. Specific warranty terms may vary.

