

[manuals.plus](#) /› [Vornado](#) /› [Vornado MVH \(2025\) Whole Room Space Heater Instruction Manual](#)

Vornado MVH (2025)

Vornado MVH (2025) Whole Room Space Heater Instruction Manual

Model: MVH (2025)

1. IMPORTANT SAFEGUARDS

Please read all instructions before using this heater. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Placement:** Always place the heater on a stable, level surface.
- **Clearance:** Maintain at least 3 feet (0.9 meters) clearance from combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains.
- **Power Cord:** Do not run the power cord under carpeting or cover it with throw rugs, runners, or similar coverings. Arrange the cord away from traffic areas where it will not be tripped over.
- **Overheat Protection:** The heater is equipped with an automatic safety shut-off system that activates if the unit overheats.
- **Tip-Over Protection:** An integrated tip-over switch automatically shuts off the heater if it is accidentally knocked over.
- **Cool-Touch Exterior:** The exterior casing is designed to remain cool to the touch during operation, reducing the risk of burns.
- **Indoor Use Only:** This product is designed for indoor use only. Do not use outdoors.
- **Voltage Requirements:** Built to meet U.S. voltage requirements. Certified, safety-tested, and warrantied for use only in the U.S.

2. PRODUCT OVERVIEW

The Vornado MVH (2025) Space Heater utilizes Vortex Heat Circulation to efficiently warm all the air in small to medium-sized rooms. It functions like a mini forced-air furnace, providing consistent and gentle warmth without the noise of traditional heaters. This portable heater is ideal for bedrooms, living rooms, offices, or any indoor space requiring reliable heating.

Gentle heat. Powerful results.



Powerful Vortex Heat



Keeps Everyone Comfortable



Cool Touch Case



Image: The Vornado MVH (2025) Space Heater in a modern living room, illustrating its Vortex Heat Circulation technology that distributes warm air evenly throughout the space.

Advanced safety features.



Tip-over
Protection



Over Heat
Shut-Off



V-0
Flame Retardant



Image: A hand touching the cool-touch exterior of the Vornado MVH (2025) Space Heater, with icons indicating tip-over protection, overheat shut-off, and V-0 flame retardant materials.

3. SETUP

Setting up your Vornado MVH (2025) Space Heater is straightforward. Follow these steps for safe and effective operation:

- 1. Unpack:** Carefully remove the heater from its packaging. Retain packaging for off-season storage.
- 2. Inspect:** Check the heater for any signs of damage. If damaged, do not use and contact Vornado Customer Service.
- 3. Placement:** Place the heater on a firm, level surface. Ensure there are no obstructions to the airflow on the front or rear of the unit.
- 4. Power Connection:** Plug the power cord directly into a standard 120V AC wall outlet. Avoid using extension cords, power strips, or surge protectors, as these can overheat and create a fire hazard.

5. **Initial Use:** During initial use, a slight odor may be present due to the manufacturing process. This is normal and will dissipate quickly.

4. OPERATING INSTRUCTIONS

Your Vornado MVH (2025) Space Heater features simple controls for personalized comfort.

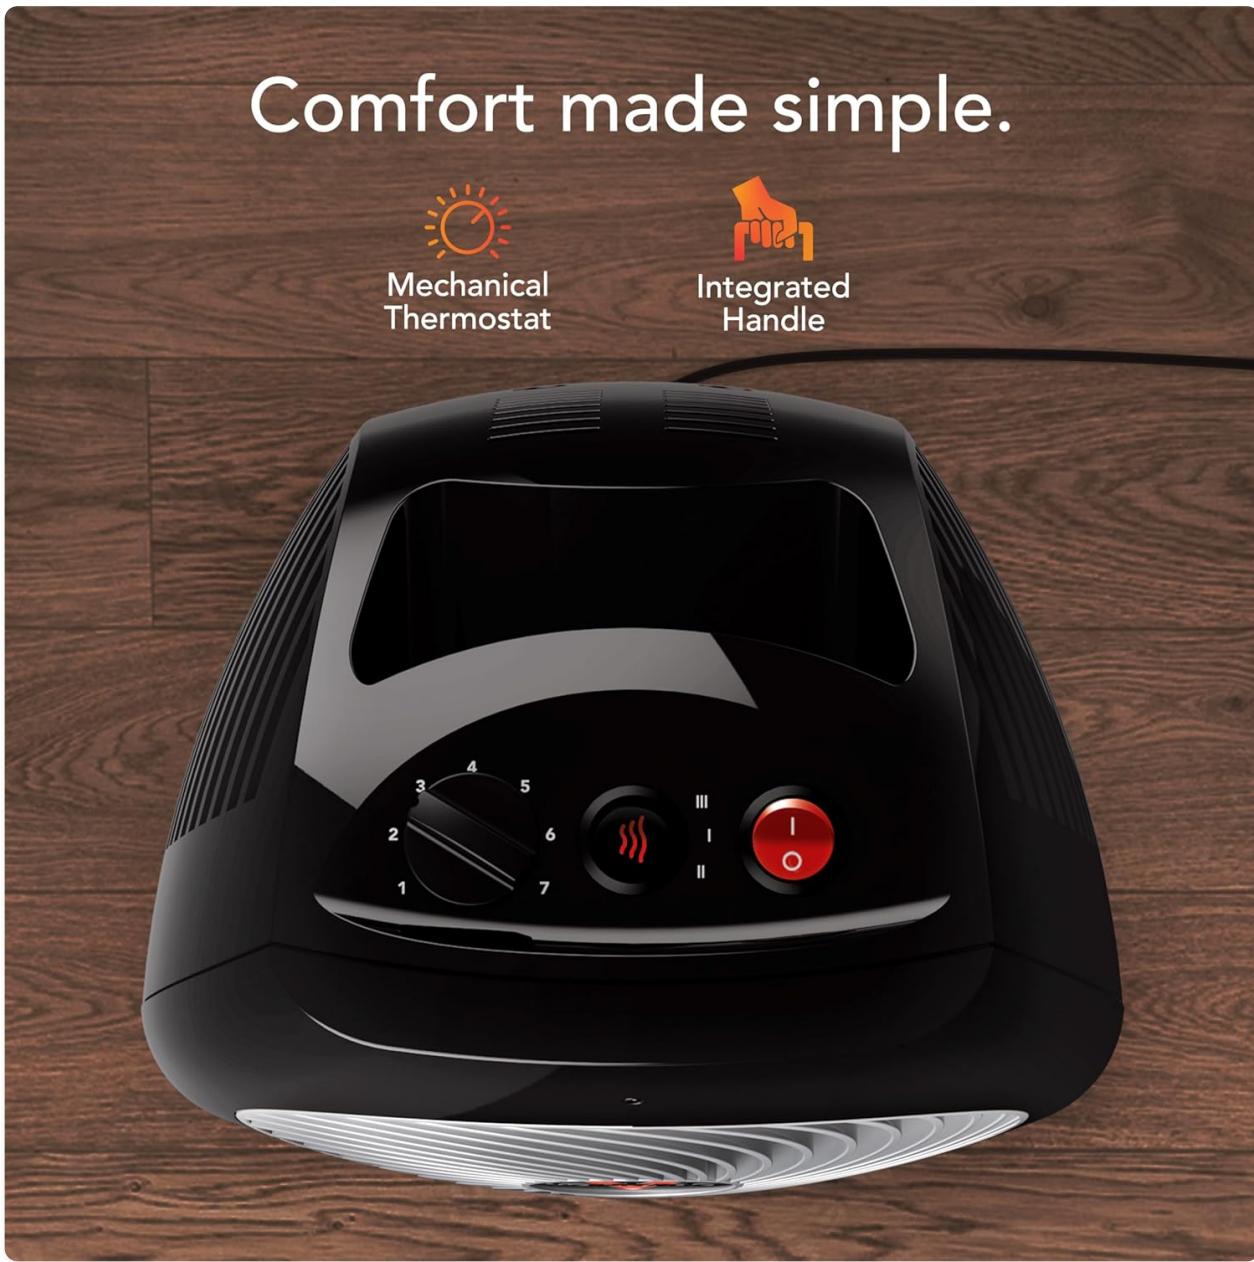


Image: A close-up of the top panel of the Vornado MVH (2025) Space Heater, showing the mechanical thermostat dial (1-7), the 3 heat settings switch (I, II, III), and the power button.

1. **Power On/Off:** Press the red power button to turn the heater on or off. The indicator light will illuminate when the unit is powered on.
2. **Select Heat Setting:** Choose from three heat modes using the rocker switch:
 - **I (Low):** For minimal heat output.
 - **II (Medium):** For moderate heat output.
 - **III (High):** For maximum heat output and faster room warming.
3. **Adjust Thermostat:** The adjustable thermostat offers 7 settings (1-7) to maintain your desired room temperature. Turn the dial clockwise to increase the desired temperature and counter-clockwise to decrease it.

decrease it. The heater will cycle on and off automatically to maintain the set temperature.

Comfort, your way.

3 **HEAT**
Settings



Image: The Vornado MVH (2025) Space Heater positioned in a living room, emphasizing its ability to provide customized comfort with 3 heat settings.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your Vornado MVH (2025) Space Heater.

- **Cleaning:** Always unplug the heater before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use gasoline, thinners, or other harsh chemicals.
- **Dust Removal:** Use a vacuum cleaner with a brush attachment to remove dust from the air intake and exhaust grilles.
- **Storage:** When not in use, store the heater in its original packaging in a cool, dry place.

6. TROUBLESHOOTING

If your Vornado MVH (2025) Space Heater is not operating as expected, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power, unit tipped over, or internal safety shut-off activated.	Ensure unit is plugged into a working outlet. Check if the unit has been tipped over and reset it by placing it upright. If overheated, unplug for 30 minutes to reset.
Heater produces insufficient heat.	Low heat setting selected, thermostat set too low, or room size is too large.	Increase heat setting (I, II, or III) and/or adjust the thermostat dial to a higher number. Ensure the heater is appropriate for the room size.
Unusual odor during operation.	Dust accumulation on heating element or initial use odor.	Clean the heater as described in the Maintenance section. Initial odors will dissipate with use.

7. SPECIFICATIONS

- **Brand:** Vornado
- **Model:** MVH (2025)
- **Part Number:** EH1-0231-06
- **Color:** Black
- **Product Dimensions:** 9.2"D x 10.4"W x 10.6"H
- **Item Weight:** 4.06 pounds
- **Power:** 120 Volts
- **Heat Settings:** 3 (Low, Medium, High)
- **Special Features:** Adjustable Thermostat, Fast Heating, Overheat Protection, Tip-Over Protection
- **Indoor/Outdoor Usage:** Indoor
- **Recommended Uses:** Home Environment, Home Heating, Whole Room Heating

8. WARRANTY AND SUPPORT

Vornado stands behind its products with a strong commitment to quality and customer satisfaction.

- **Warranty:** This Vornado heater comes with a 5-year satisfaction guarantee. If the product does not meet your expectations, Vornado will replace it.
- **Support:** Products are designed and supported in Andover, KS. For assistance, please refer to the contact information provided in your product packaging or visit the official Vornado website.

Peace of mind.

5 YEAR
Guarantee

ETL Listed

Est.
1945
Kansas, USA



Image: The Vornado MVH (2025) Space Heater on a wooden floor near a white wall, accompanied by icons highlighting its 5-year guarantee, ETL listing, and origin in Kansas, USA since 1945.