

Maestri House A310

Maestri House Coffee Mug Warmer (Model A310) Instruction Manual

INTRODUCTION

Thank you for choosing the Maestri House Coffee Mug Warmer, Model A310. This device is designed to keep your beverages and flameless scented candles at your preferred temperature, ensuring a consistently warm experience. Please read this manual thoroughly before use to ensure safe and optimal operation.

SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions.

- This appliance is ETL Listed (Control Number: 5033931), indicating compliance with North American safety standards.
- Do not immerse the warmer in water or other liquids.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only on a flat, stable, heat-resistant surface.
- Keep out of reach of children.
- Do not use for purposes other than intended.

PRODUCT OVERVIEW

The Maestri House Coffee Mug Warmer features a sleek design with intuitive controls for a personalized

warming experience.

Gift Idea: Coffee Enthusiast's Heat Pad



Image: Maestri House Coffee Mug Warmer with labeled control panel and heating surface.

Key Features:

- **4 Temperature Settings:** Choose from 104°F, 131°F, 149°F, and 176°F (40°C, 55°C, 65°C, 85°C) for precise warmth.
- **1-12 Hour Timer:** Customize the heating duration to suit your needs.
- **Automatic Shut-Off:** The device defaults to automatically shut off after 4 hours of continuous use for safety and energy efficiency.
- **Touch Control LCD Display:** Easy-to-use interface for setting temperature and timer.
- **Versatile Compatibility:** Suitable for various cup materials and sizes, and flameless scented candles.

SETUP

1. Unpack the Maestri House Coffee Mug Warmer and place it on a stable, flat, and heat-resistant surface.
2. Ensure the power cord is free from damage.
3. Plug the power cord into a standard 120V AC electrical outlet. The LED display will illuminate, indicating the device is in standby mode.

OPERATING INSTRUCTIONS

Power On/Off:

Press the **Power Button** () to turn the warmer on or off. When turned on, the display will show the last used temperature setting.

Setting Temperature:

1. With the warmer on, press the **Temperature Control Button** () to cycle through the four available temperature settings: 104°F, 131°F, 149°F, and 176°F.
2. The selected temperature will be displayed on the LED screen. The warmer will begin heating to this temperature.

Precise 4 Temp Control Options



Image: Visual representation of the four temperature settings and their suggested uses.

Setting the Timer:

1. With the warmer on, press the **Time Setting Button** () to adjust the operating duration.
2. Each press will increase the timer by one hour, from 1 hour up to 12 hours.
3. The selected time will be displayed on the LED screen. The warmer will operate for the set duration and then automatically shut off.
4. If no timer is set, the warmer will automatically shut off after 4 hours of continuous operation.

Cozy 12 Hours

Lasting Heating

Customize warmth with our 12-level timer



Image: Coffee mug on warmer with a clock graphic illustrating the 1-12 hour timer function.

Video Demonstration:

Your browser does not support the video tag.

Video: Official Maestri House demonstration of the coffee mug warmer's features and operation.

COMPATIBILITY

The Maestri House Coffee Mug Warmer is designed for use with a variety of containers and items:



Touch Control Cup Warmer

Touch-enabled cup warmer
adds modern flair to your
warm beverage enjoyment



Image: Guide to compatible and incompatible cup types and materials.

Suitable For:

- **Cup Materials:** Glass, Ceramic, Stainless Steel, and other flat-bottomed, heat-conductive materials.
- **Cup Types:** Flat-bottomed mugs, mini coffee pots, feeding bottles.
- **Other Uses:** Flameless scented candles.

Not Suitable For:

- Vacuum insulated cups.
- Double-walled glass cups.
- Bagged drinks.
- Plastic cups or containers.

For optimal performance, use cups with a flat bottom to ensure maximum contact with the heating plate.

MAINTENANCE

Cleaning:

1. Always unplug the warmer and allow it to cool completely before cleaning.
2. Wipe the heating plate and exterior surfaces with a soft, damp cloth.
3. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface.
4. Do not immerse the warmer in water or place it under running water.

Storage:

Store the warmer in a cool, dry place when not in use. Ensure the cord is not tightly wrapped around the unit to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Warmer does not turn on.	Not plugged in or power outlet issue.	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another device.
Beverage is not warm enough.	Incorrect temperature setting or incompatible cup.	Increase the temperature setting. Ensure you are using a flat-bottomed, heat-conductive cup (glass, ceramic, stainless steel). Avoid insulated cups.
Warmer turns off unexpectedly.	Timer expired or 4-hour auto shut-off activated.	Check the timer setting. If no timer was set, the device will automatically power off after 4 hours. Turn the warmer back on if needed.
Display is not working.	Power issue or internal malfunction.	Unplug the device, wait a few minutes, then plug it back in. If the issue persists, contact customer support.

SPECIFICATIONS

Model Number: A310
Brand: Maestri House
Power Source: Corded Electric
Voltage: 120 Volts (AC)
Maximum Temperature: 176 Degrees Fahrenheit (85°C)
Heating Plate Diameter: Approximately 90mm (3.54 inches)
Certifications: ETL Listed (Control Number: 5033931)

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Maestri House customer service. Refer to the product packaging or the official Maestri House website for the most current contact details.
Please retain your purchase receipt as proof of purchase for any warranty claims.

