

SUNCROWN B0FNQF4ZFL

SUNCROWN 10-12 Gun Safe Instruction Manual

Model: B0FNQF4ZFL

1. INTRODUCTION

Thank you for choosing the SUNCROWN 10-12 Gun Safe. This manual provides essential information for the safe and effective installation, operation, and maintenance of your new gun safe. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INFORMATION

- Always store firearms unloaded and locked within the safe.
- Keep the safe locked and secured at all times when not in use.
- Store ammunition separately from firearms.
- Do not store the emergency keys inside the safe. Keep them in a secure, separate location known only to authorized users.
- Ensure the safe is mounted securely to prevent unauthorized removal or tipping.
- Keep children away from the safe and do not allow them to play with the safe or its keys/keypad.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- SUNCROWN 10-12 Gun Safe Unit

- Digital Keypad (pre-installed)
- 2 x Emergency Keys
- Expansion Screws (for mounting)
- 1 x Gray Carpet (for interior base)
- 1 x Adjustable Shelf
- Pistol Bag (quantity may vary)

GUN SAFE FOR RIFLE

- HEIGHT : 55.2 IN
- WIDTG : 21 IN
- DEEP : 15.2 IN



Expansion screw



2 x Emergency Keys



1 x Gray Carpet



1 x Adjustable Shelves

**LARGER DIMENSIONS REDUCE
MORE FLOOR SPACE**

Image: Overview of the SUNCROWN Gun Safe, showing its dimensions and the included accessories such as expansion screws, emergency keys, gray carpet, and an adjustable shelf.

4. PRODUCT OVERVIEW

The SUNCROWN 10-12 Gun Safe is designed for secure storage of firearms and valuables. It features a robust construction and multiple security measures.

Key Features:

- **Spacious Interior:** Accommodates 6-8 rifles and 4 pistols. Adjustable brackets allow for customization based on firearm length. Additional storage for magazines, accessories, scopes, and binoculars.
- **Durable Construction:** Made from strong cold-rolled steel, providing rust, dust, and water protection.
- **Digital Keypad Access:** Quick entry using a programmable numeric code.
- **Emergency Access:** Two emergency keys are provided for access in case of low battery or forgotten code.
- **Enhanced Security:** Features a silent mode, and an alarm system that activates after three consecutive incorrect password attempts, locking the system for 1 minute.
- **Mounting Options:** Pre-drilled holes on the back and bottom for secure floor or wall mounting.

Internal Components:

- Moveable Stock supports for rifles.
- Adjustable Shelves for flexible storage.
- Battery compartment for keypad power.
- Keyboard Lock mechanism.
- Internal Light for visibility.
- Cartridge Case for ammunition or small items.



Image: The SUNCROWN Gun Safe shown from the exterior (closed) and with the door open, revealing the interior storage layout for rifles and pistols.

FREE ALLOCATION SPACE

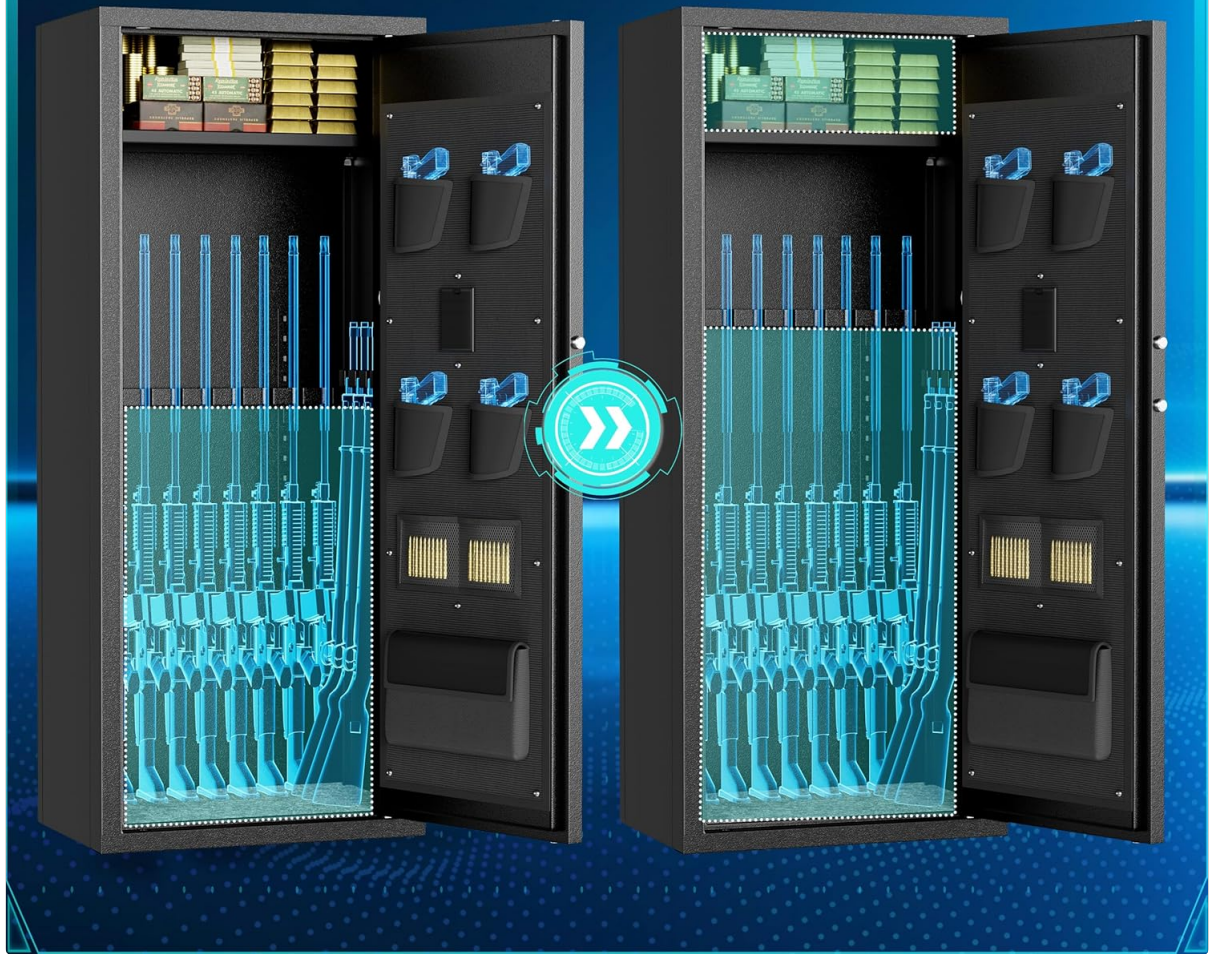


Image: Two SUNCROWN Gun Safes with their doors open, illustrating the flexible and adjustable interior space for various firearm lengths and accessories.



Image: A close-up view highlighting the robust door thickness (20mm and 30mm) of the SUNCROWN Gun Safe, demonstrating its drill-resistant construction.



Image: A detailed view of the SUNCROWN Gun Safe's interior, labeling key components such as the moveable stock, adjustable shelves, battery compartment, keyboard lock, internal light, and cartridge case.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment on the back of the digital keypad.
2. Insert the required batteries (typically AA, not included) according to the polarity markings.
3. Close the battery compartment cover securely.

5.2 Mounting the Safe

For optimal security, it is highly recommended to mount the safe to a floor or wall using the provided expansion screws.

1. Choose a discreet and secure location for the safe.

2. Open the safe door to 120 degrees for easy access to the pre-drilled holes on the back and bottom.
3. Position the safe and mark the drilling points on the floor or wall through the pre-drilled holes.
4. Drill pilot holes at the marked locations.
5. Align the safe with the drilled holes and secure it using the expansion screws. Tighten all screws firmly.



Image: The SUNCROWN Gun Safe discreetly placed inside a wooden closet, demonstrating a potential secure installation location.



Image: The SUNCROWN Gun Safe positioned in a modern home office or gaming room, illustrating its compact design for various indoor environments.

6. OPERATING INSTRUCTIONS

6.1 Setting Your Personal Code

Refer to the specific instructions provided with your safe for detailed steps on setting the initial code. Generally, this involves pressing a reset button inside the safe, entering a new code, and confirming it.

6.2 Unlocking the Safe

1. **Using the Digital Keypad:** Enter your programmed personal code on the keypad. If the code is correct, the safe will unlock, and you can turn the knob to open the door.
2. **Using Emergency Keys:** If the battery is low or you forget your code, insert one of the emergency keys into the keyhole, turn it, and then turn the knob to open the door. **Do not store emergency keys inside the safe.**

2 UNLOCKING METHODS

- Quick Access
- Biometric Rifle Safe
- Gun Cabinet with Electronic Keyboard Lock and Key



Digital keyboard

Knob



Digital Keyboard Unlock



Spare Key Unlock

Image: Illustration of the two unlocking methods for the SUNCROWN Gun Safe: using the digital keypad and using the spare emergency key.

6.3 Alarm System

The safe is equipped with an alarm system for enhanced security:

- **Wrong Access Alarm:** If an incorrect password is entered 3 consecutive times, the system will lock for 1 minute, and an alarm will sound. During this time, the keypad cannot be used; only the emergency key can open the safe.
- **One-Click Alarm:** Pressing the '#' key on the keypad can activate an alarm state, causing the gun cabinet to vibrate and sound an alert.
- **Low Battery Alert:** When the battery is low, the keypad will indicate this (e.g., a 'LOW.VOLT' light). Replace batteries promptly.



Image: A visual representation of the SUNCROWN Gun Safe's alarm system, detailing features like wrong access alarm, one-click alarm, and emergency key release.

7. MAINTENANCE

- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace the keypad batteries annually or when the low battery indicator appears. Use high-quality alkaline batteries.
- **Door Hinges:** Periodically check door hinges for smooth operation. Lubricate if necessary with a light oil.
- **Interior:** Ensure the interior remains dry to prevent rust or damage to stored items.

8. TROUBLESHOOTING

- **Safe will not open with code:**

- Ensure batteries are fresh and correctly installed.
- Verify you are entering the correct code.
- If the system is locked due to incorrect attempts, wait for the 1-minute lockout period to expire or use the emergency key.

- **Keypad is unresponsive:**

- Replace batteries immediately.
- If still unresponsive, use the emergency key to open the safe and contact customer support.

- **Alarm sounds unexpectedly:**

- Check if the '#' key was accidentally pressed.
- Ensure no unauthorized attempts were made to open the safe.

9. SPECIFICATIONS

Feature	Detail
Brand	SUNCROWN
Model Number	B0FNQF4ZFL
Product Dimensions (D x W x H)	15.2" x 21" x 55.2"
Lock Type	Electronic Combination Lock
Color	Black
Capacity	Approx. 500 Pounds (weight capacity)
Material	Aluminum (frame), Cold Rolled Steel (body)
Special Feature	Lockable
Mounting Type	Floor Mount
Item Weight	67 pounds

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official SUNCROWN website. Keep your purchase receipt as proof of purchase.

