

SakerPlus GJ50898-X41265

SakerPlus Wireless Multi-Functional Electric Vegetable Cutter & Shredder

MODEL: GJ50898-X41265

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your SakerPlus Wireless Multi-Functional Electric Vegetable Cutter and Shredder. Please read this manual thoroughly before first use and retain it for future reference.

Key Features:

- **Wireless and Portable:** Equipped with an 800mAh rechargeable battery, offering convenience and portability for various settings.
- **Multi-Functional:** Designed for chopping, slicing, and shredding a variety of vegetables and fruits.
- **One-Button Operation:** Simple and intuitive operation for quick food preparation.
- **Easy to Clean:** IPX5 waterproof design allows for direct rinsing, and removable stainless steel blades ensure thorough cleaning.

2. SETUP

2.1 Unpacking

Carefully remove all components from the packaging. Ensure all parts listed in the package contents are present and undamaged. Keep packaging materials for future storage or transport.

2.2 Charging the Device

Before first use, fully charge the device. Connect the provided USB charging cable to the charging port on the handle and to a suitable USB power source. The indicator light will show charging status (e.g., red for charging, green for fully

charged).



Image: Close-up of the SakerPlus Electric Vegetable Cutter's USB charging port, showing both red (charging) and green (charged) indicator lights.

2.3 Assembly

Attach the desired blade or accessory (chopping blade, slicing blade, whisk, or cleaning brush) to the main unit. Ensure it is securely fastened before use.



Image: The SakerPlus Electric Vegetable Cutter disassembled, displaying the main motor unit, the chopping blade attachment, and the slicing disc attachment.

3. OPERATING INSTRUCTIONS

3.1 Chopping Function

For chopping, attach the chopping blade to the main unit and place it into the transparent container. Add ingredients such as garlic, chili, or meat into the container. Press and hold the power button on top of the unit to activate the blades. Release the button to stop. The duration of pressing determines the fineness of the chop.



Image: The SakerPlus Electric Vegetable Cutter in use, chopping garlic cloves within its transparent container. A hand is pressing the power button on the top.

3.2 Slicing Function

To slice, attach the slicing disc. Insert long, thin ingredients like green onions, carrots, or celery directly into the feeding port on top of the unit. The device will slice them directly into your desired bowl or pan. Use the plunger to push ingredients through safely.



Spatula can easy to take food out.



Feeding port: Easy to add food, no need to open lid. Long strip food, such as pepper, cowpea, yam, etc. could be directly stuffed



Open type slicing deign: Cook directly no need a container



Whole body Waterproof, Rinse, don't be soaked.

Image: The SakerPlus Electric Vegetable Cutter slicing green onions directly into a bowl. A hand is guiding the green onions into the feeding port.



Image: The SakerPlus Electric Vegetable Cutter slicing celery directly into a bowl. A hand is guiding the celery into the feeding port.

3.3 Whisking Function (if applicable)

If your model includes a whisk attachment, secure it to the main unit. Use it for whisking eggs or light batters in a separate bowl. Press and hold the power button to activate.

3.4 General Operation Tips

- Ensure the device is fully charged for optimal performance.
- Do not overload the container with ingredients.
- For best results, cut larger ingredients into smaller pieces before feeding them into the device.
- Always use the plunger when slicing to keep fingers away from blades.

Your browser does not support the video tag.

Video: Demonstrates the use of the electric vegetable cutter for slicing various ingredients like green onions, garlic, and chili. It also shows the cleaning brush attachment in action.

Your browser does not support the video tag.

Video: Shows the electric vegetable cutter in action, slicing green onions and carrots, and chopping garlic. It highlights the ease of use and the uniform slices produced.

4. MAINTENANCE

4.1 Cleaning the Device

The SakerPlus Electric Vegetable Cutter is IPX5 waterproof. After use, detach the blade/attachment and the transparent container from the main motor unit. Rinse all parts directly under running water. For thorough cleaning, attach the cleaning brush to the main unit and use it to scrub surfaces like cutting boards or countertops.



Image: The SakerPlus Electric Vegetable Cutter being rinsed under running water, demonstrating its waterproof design.



Image: The SakerPlus Electric Vegetable Cutter with the cleaning brush attachment scrubbing a countertop, showing its versatility beyond food preparation.

- Ensure the charging port cover is securely closed before rinsing the main unit.
- The stainless steel blades are removable for safe and easy cleaning. Handle blades with care as they are sharp.
- Allow all parts to dry completely before reassembling or storing.

Your browser does not support the video tag.

Video: A detailed demonstration of how the vegetable chopper works, including assembly, chopping various ingredients, and cleaning the device under running water.

5. TROUBLESHOOTING

If you encounter any issues with your SakerPlus Electric Vegetable Cutter, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or not charged.	Ensure the device is fully charged. Check the charging indicator light.
Ingredients are not chopping/slicing effectively, or turn mushy.	Overloading, ingredients too large, or incorrect attachment.	Reduce the amount of ingredients. Cut larger items into smaller, manageable pieces. Ensure the correct blade/slicing disc is installed for the task. Avoid prolonged continuous operation which can over-process ingredients.
Device jams or stops during operation.	Overloading or hard ingredients.	Turn off the device, clear any jammed ingredients, and restart with smaller quantities. Avoid extremely hard ingredients.
Food is not dispensing properly from the slicing port.	Obstruction in the chute or improper use of plunger.	Ensure the slicing port is clear. Use the plunger to gently guide ingredients through.

6. SPECIFICATIONS

Feature	Detail
Brand	SakerPlus
Model Number	GJ50898-X41265
Product Dimensions	6.3"L x 6"W x 13.4"H
Material	ABS Environmental Friendly Plastic, Stainless Steel (Blades)
Color	Green
Special Feature	Multipurpose, Wireless, USB Rechargeable
Recommended Uses	Potatoes, Sweet Potato, French Fry, Onion, Cucumber, Zucchini, Celery, Lemon, Carrot, Apple, Orange slice, Food, Vegetable, Fruit slicer
Product Care Instructions	Dishwasher Safe (components), IPX5 Waterproof (main unit)
Item Weight	1.43 Pounds
Blade Length	13 Centimeters
Operation Mode	Electric (Rechargeable)
UPC	757940665324

7. WARRANTY & SUPPORT

This product may be eligible for various protection plans and return policies. Please refer to your purchase documentation or contact the retailer for specific details regarding warranty coverage, return periods, and customer support options.

Typically, a 30-day return/replacement policy is offered. Extended protection plans (e.g., 3-Year or 4-Year) may be available for purchase separately.

For technical assistance or product inquiries, please contact SakerPlus customer service through their official channels or the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question