

[manuals.plus](#) /› [KAER](#) /› [KAER 13-15 Biometric Gun Safe Instruction Manual](#)

## KAER 1400LI-NEW

# KAER 13-15 Biometric Gun Safe Instruction Manual

Model: 1400LI-NEW | Brand: KAER

## 1. INTRODUCTION

---

Thank you for choosing the KAER 13-15 Biometric Gun Safe. This safe is designed to provide secure storage for your firearms and valuables, featuring multiple access methods including biometric fingerprint, digital keypad, and emergency key. This manual provides essential information for the safe's assembly, operation, maintenance, and troubleshooting to ensure optimal performance and security.

## 2. SAFETY INFORMATION

---

Proper installation and use are crucial for the security and safety of this gun safe. Please read and understand all instructions before assembly and operation.

- **Secure Mounting:** For maximum security, the safe must be securely bolted to a wall or floor using the provided mounting bolts. This prevents unauthorized removal or tipping.
- **Child Safety:** Always store firearms unloaded and locked away from children. Keep emergency keys and access codes in a secure location inaccessible to unauthorized individuals.
- **Alarm System:** The safe features an anti-tamper alarm that triggers after multiple incorrect entry attempts or if the safe is subjected to impact.
- **Emergency Access:** Familiarize yourself with all access methods, including the emergency key, to ensure access during power failure or electronic lock malfunction.

# NIGHTTIME SECURITY THAT GUARDS WHILE YOU REST



## INTRUDER LOCKOUT

BLASTS a piercing 30-second siren after multiple failed entries. ONLY YOU can stop it.



## INSTANT IMPACT ALARM

Senses ANY tampering IMMEDIATELY – triggering a full 30-second siren to STOP intruders in their tracks.

Figure 2.1: Security features including intruder lockout and instant impact alarm.

## 3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Unassembled Gun Safe Panels
- 2 Removable Gun Racks
- Emergency Keys
- External Battery Box
- Mounting Bolts
- Instruction Manual
- Gloves
- Screwdriver

## 4. ASSEMBLY INSTRUCTIONS

The KAER 13-15 Biometric Gun Safe is shipped unassembled. Follow these steps carefully for proper assembly. It is recommended to have two people for assembly.

1. Unpack all components and verify against the package contents list.
2. Connect the back plate (B) and the left side plate (C), screwing in the screws (N) in order.
3. Connect the left and right side panels (C) to the door panel (E) and screw in the screws (N) in turn.
4. Install the top plate (D), screwing in the screws (N).
5. Install the bottom plate (A), paying attention to the narrow front and wide back.
6. Install the partition board (F) using the adjustment buckle (Q).
7. Install the hole plate and screw in the bottom screws to fix.
8. Insert the butt plate into the gun rack.
9. Once assembled, choose a secure location and bolt the safe to the wall or floor using the provided mounting hardware.



Figure 4.1: Wall or floor mounting diagram.

# 13-15 GUNS LARGE SAFE



Figure 4.2: Safe dimensions for placement planning.

## Assembly Video Guide

Video 4.1: Detailed assembly instructions for the KAER 13-15 Biometric Gun Safe, including panel connections and internal setup.

## 5. OPERATING THE SAFE

Your KAER gun safe offers multiple secure access options.



Figure 5.1: Overview of the 4-way quick access system.

## Initial Setup (Password & Fingerprint)

- Install Batteries:** Open the safe using the emergency key. Install 4 AA batteries into the external battery box.
- Set Initial Password:** Enter the initial password (e.g., 123456) on the digital keypad and turn the knob to open.
- Modify Password:** With the door open, press the 'Setting Button' inside the door. Enter your new personal password (3-12 digits) on the keypad, then press '#'.  
Note: The safe can store up to 30 fingerprints.
- Fingerprint Setting:** Press the 'Setting Button' inside the door. Place your finger on the fingerprint scanner, lift and lower it 4 times until the green/yellow light indicates successful setup. The safe can store up to 30 fingerprints.

## Access Methods

- Biometric Fingerprint:** Place your registered finger on the scanner. The safe will unlock in approximately 0.1 seconds.
- Digital Keypad:** Enter your personal password on the keypad, then press '#'. Turn the knob to open.
- Emergency Key:** In case of battery failure or forgotten password, use the emergency key to manually open the safe.

## Alarm System

- **Anti-Tamper Alarm:** The alarm will sound after 3-5 incorrect password or fingerprint attempts. It will also activate if the safe experiences significant impact.
- **Alarm Off:** To turn off the alarm, enter the correct password or use a registered fingerprint.
- **Mute Setting:** To turn the alarm sound on/off, press "11#" on the keypad.

## Operating Video Guide

Video 5.1: Instructions for setting up the digital password, fingerprint, and managing alarm modes.

## 6. FEATURES AND CUSTOMIZATION

---

The KAER 13-15 Biometric Gun Safe offers flexible storage solutions to meet your needs.

- **Spacious Interior:** Designed to securely hold 13-15 rifles, pistols, and ammunition.
- **Customizable Storage:** Features removable shelves and adjustable partitions to accommodate various firearm sizes, including scoped rifles, AR15s, and shotguns.
- **Door Storage:** Integrated pistol pockets and additional storage compartments on the inside of the door provide convenient access to smaller items.
- **LED Lighting:** Interior LED lighting illuminates the safe's contents for easy visibility.

# DETAILED SHOWCASE



Figure 6.1: Detailed showcase of internal features and customization options.

## 7. MAINTENANCE

Regular maintenance ensures the longevity and reliable operation of your safe.

- **Battery Replacement:** Replace the 4 AA batteries in the external battery box when the low battery indicator appears or if the electronic lock becomes unresponsive.
- **Cleaning:** Clean the exterior and interior of the safe with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Security Check:** Periodically check the mounting bolts to ensure they are tight and secure.
- **Fingerprint Sensor:** Keep the fingerprint sensor clean and dry for optimal performance.

## 8. TROUBLESHOOTING

Refer to this section for solutions to common issues.

- **Electronic Lock Not Responding:** Check the batteries in the external battery box. Replace if necessary. Use the emergency key for immediate access.
- **Fingerprint Not Recognized:** Ensure your finger is clean and dry. Try re-registering your fingerprint if

the issue persists.

- **Alarm Triggering Unexpectedly:** Verify that no unauthorized attempts have been made. Check for any impacts to the safe. If the alarm continues without cause, contact customer support.
- **Door Not Closing Properly:** Ensure no items are obstructing the door or locking bolts. Check for any damage to the hinges or frame.

## 9. SPECIFICATIONS

---

Feature	Specification
Brand	KAER
Product Dimensions	15.2"D x 21"W x 55.2"H
Lock Type	Biometric, Electronic Combination Lock, Key
Color	BLACK
Capacity	6 Cubic Feet (Holds 13-15 guns)
Material	Alloy Steel
Special Feature	Alarm System
Mounting Type	Wall Mount (bolts included)
Item Weight	76.3 Pounds
Item Model Number	1400LI-NEW

## 10. WARRANTY AND SUPPORT

---

For warranty information, technical support, or any questions regarding your KAER 13-15 Biometric Gun Safe, please contact the manufacturer or your retailer. Keep your purchase receipt for warranty claims.