

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BEISHI](#) /

› [BEISHI Design Corner Tripod Easel TV Stand Instruction Manual \(Model: B0FNQVPL5Y\)](#)

## BEISHI B0FNQVPL5Y

# BEISHI Design Corner Tripod Easel TV Stand Instruction Manual

Model: B0FNQVPL5Y

Brand: BEISHI

## INTRODUCTION

Thank you for choosing the BEISHI Design Corner Tripod Easel TV Stand. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new TV stand. Please read these instructions carefully before beginning assembly and keep them for future reference.

## SAFETY INFORMATION

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or defective.
- Follow all assembly steps in the correct order. Improper assembly can lead to instability and potential injury.
- Do not exceed the maximum weight capacity of 110 lbs (50 kg).
- This stand is designed for most 32-75 inch flat and curved LED LCD screens with compatible VESA patterns. Verify your TV's VESA pattern and weight before installation.
- Keep children and pets away from the assembly area.
- Place the TV stand on a stable, level surface to prevent tipping.
- Use the anti-tip safety kit (if included) to secure the TV stand to the wall, especially in households with children.

## PACKAGE CONTENTS

Please check that all parts are included in your package. If any parts are missing or damaged, please contact customer support.

Components typically include:

- Tripod Legs (Beech Wood)
- Central Support Column (Metal)
- TV Mounting Brackets (Metal)

- Soundbar Shelf (Metal)
- Hardware Kit (Screws, washers, spacers, Allen wrench)
- Cable Management Clips

## ASSEMBLY INSTRUCTIONS

---

Follow these steps carefully to assemble your BEISHI TV stand. It is recommended to have a second person assist with lifting the TV.

### Step 1: Assemble the Base

Attach the three beech wood legs to the central metal hub. Ensure all screws are tightened securely. The legs form a stable tripod structure.

### Step 2: Attach the Central Support Column

Secure the central metal support column to the assembled tripod base using the provided hardware. Ensure it is firmly attached and upright.

### Step 3: Install the Soundbar Shelf


Mount the soundbar shelf to the central support column at your desired height. This shelf provides convenient storage for a soundbar or other media devices.



Image: The soundbar shelf is securely attached to the central column, providing a stable platform for media devices.

#### Step 4: Attach TV Mounting Brackets to TV

Identify the correct screws and spacers from the hardware kit that match your TV's VESA mounting holes. Attach the two vertical TV mounting brackets to the back of your television. Ensure they are aligned and securely fastened.

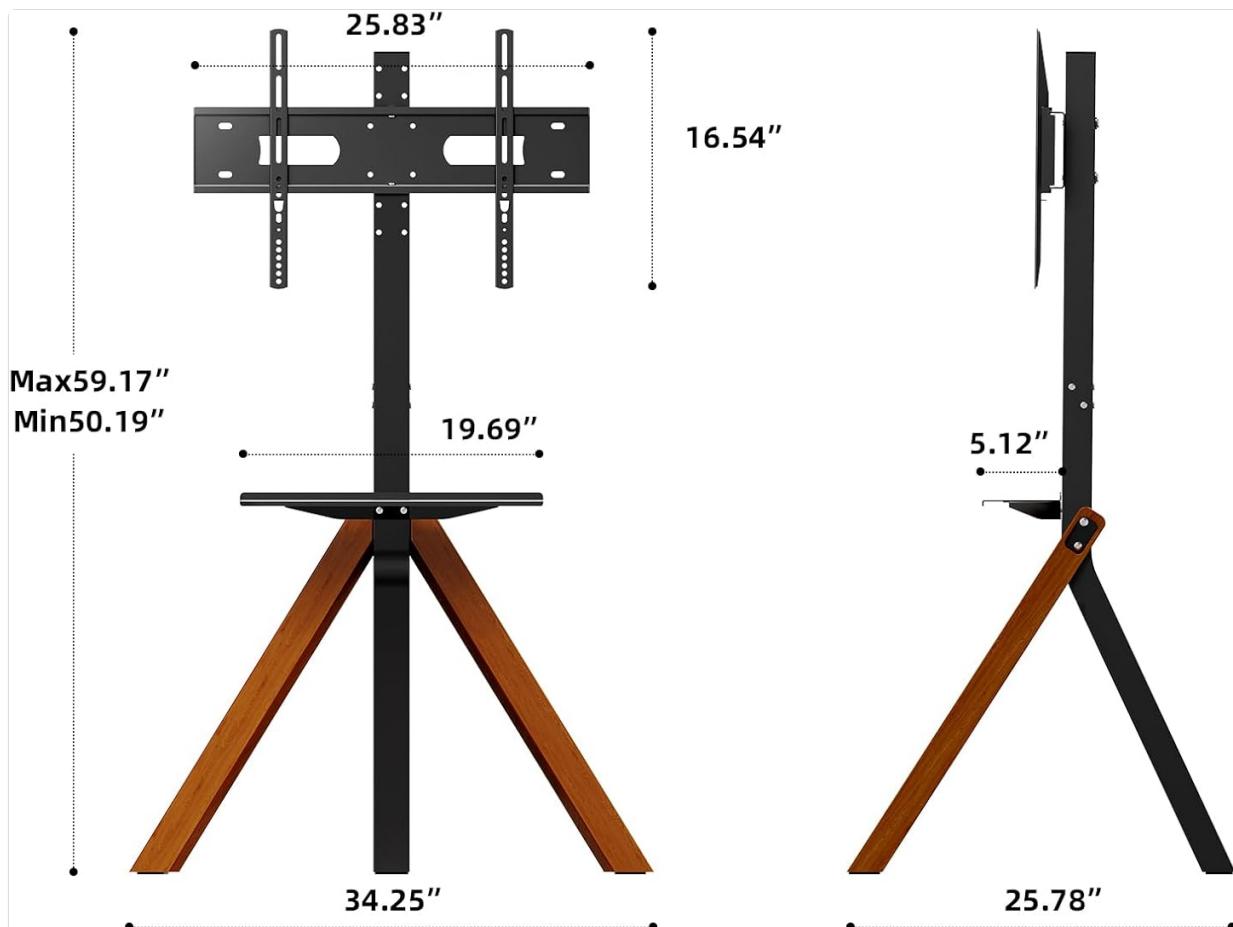


32"-75"



TV CAPACITY

### BACK OF TV

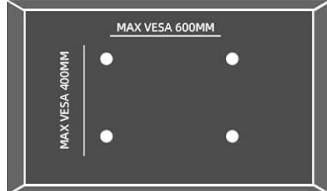

### VESA COMPATIBILITY

600x400mm	600x200mm
400x400mm	400x300mm
400x200mm	300x300mm
300x200mm	200x200mm
200x100mm	100x100mm

Image: A detailed diagram illustrating the TV stand's dimensions and VESA compatibility, including supported VESA patterns like 200x100mm up to 600x400mm.

## Step 5: Mount the TV to the Stand

With assistance, carefully lift your TV and hook the attached mounting brackets onto the horizontal bars of the central support column. Ensure the TV is level and securely seated. Tighten any locking mechanisms on the brackets to prevent accidental dislodgement.

Your browser does not support the video tag.

Video: An official seller video demonstrating the assembly process of the BEISHI Corner TV Stand, including attaching the TV to the stand.

## Step 6: Cable Management

Use the provided cable management clips to neatly route and secure all cables along the central support column and down one of the rear legs. This helps maintain a clean appearance and prevents tripping hazards.

## OPERATING INSTRUCTIONS

### Height Adjustment

The TV mounting brackets can be adjusted vertically along the central column to achieve your preferred viewing height. Loosen the securing screws on the brackets, slide the TV to the desired position, and then re-tighten the screws firmly.

# Height Adjustable

For better viewing experience.

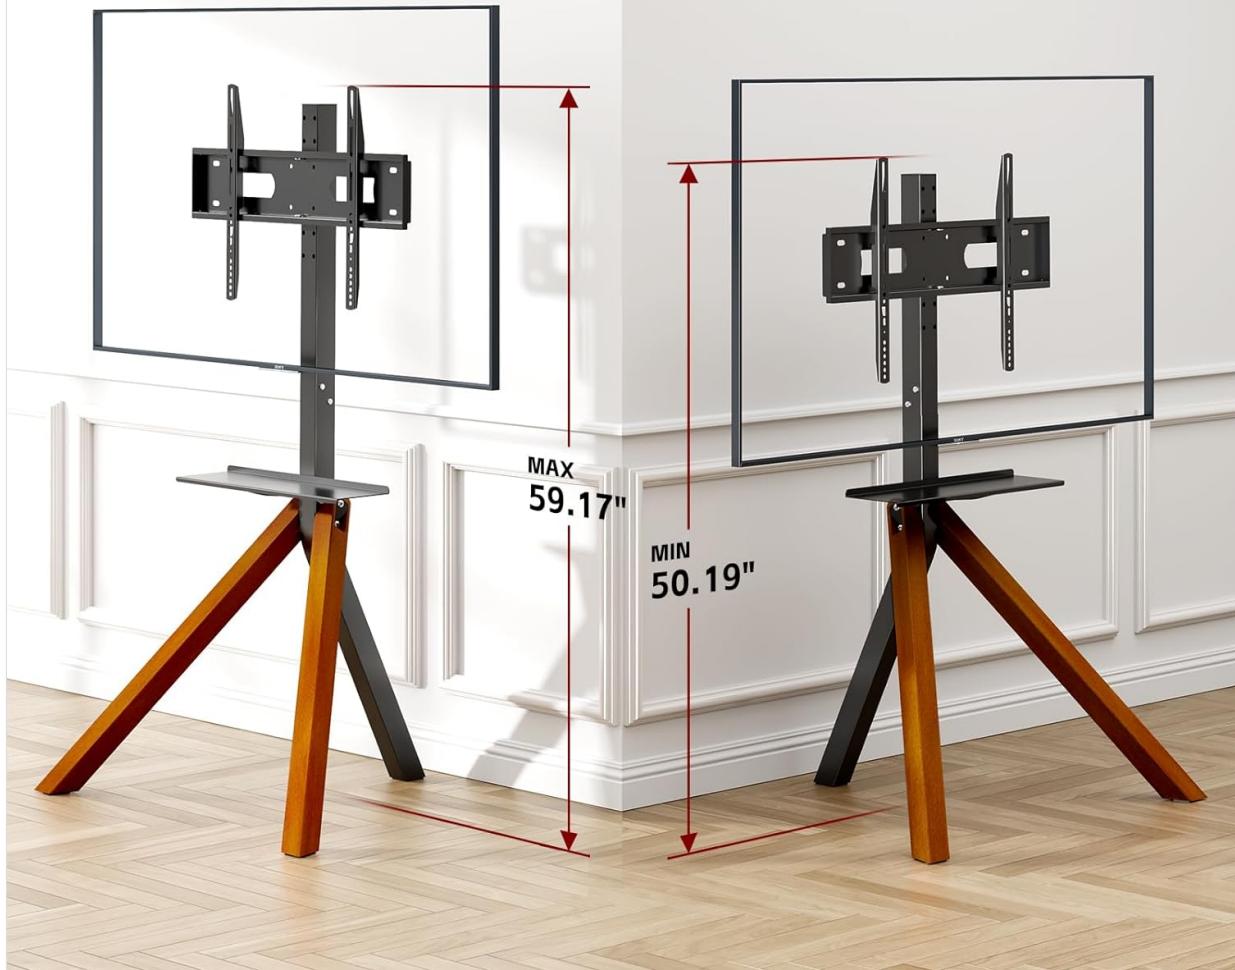


Image: A visual representation showing the minimum (50.19 inches) and maximum (59.17 inches) height adjustments for the TV screen on the stand.

## Swivel Function

The TV stand features a 20-degree swivel function (10 degrees left and 10 degrees right). Gently push the sides of your TV to adjust the viewing angle. This allows for optimal viewing from various positions in the room and helps reduce glare.



Image: The TV stand allows for a  $\pm 20^\circ$  swivel, enabling flexible viewing angles to suit different seating arrangements.

## MAINTENANCE

To ensure the longevity and appearance of your TV stand:

- Regularly dust the metal and wood surfaces with a soft, dry cloth.
- For stubborn marks, use a slightly damp cloth with mild soap, then wipe dry immediately.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- Keep the stand away from direct sunlight and extreme temperature changes to prevent wood warping or fading.

## TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common solutions:

- **TV is wobbly:** Ensure all assembly screws are fully tightened. Check that the stand is on a level surface. If applicable, ensure the anti-tip safety kit is properly installed.
- **Difficulty adjusting height/swivel:** Loosen the relevant adjustment screws before attempting to move

the TV. Do not force movement.

- **Scratches on floor:** Ensure the feet of the tripod legs have protective pads. If not, apply felt pads to prevent scratching.
- **Cables are messy:** Re-route cables using the provided cable management clips or additional ties to keep them organized and out of sight.

If problems persist, please contact customer support for further assistance.

## SPECIFICATIONS

---

Feature	Detail
Brand	BEISHI
Model	B0FNQVPL5Y
Compatible TV Sizes	32-75 inches
Maximum Weight Capacity	110 lbs (50 kg)
VESA Compatibility	200x100, 200x200, 200x300, 200x400, 300x200, 300x300, 300x400, 400x200, 400x300, 400x400, 600x400 mm
Swivel Range	±20 degrees
Height Adjustment	Adjustable along central column (Min 50.19" - Max 59.17")
Material	Carbon steel, Solid wood (Beech)
Color	Walnut
Product Dimensions	36 x 16 x 5 inches (packaged)
Item Weight	24.3 pounds

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official BEISHI website. Keep your purchase receipt as proof of purchase for any warranty claims.