

[Manuals.plus](#) /

› [WSTER](#) /

› WSTER WS-596 Retro Sedan Bluetooth Car Replica Speaker Instruction Manual

## WSTER WS-596

# WSTER WS-596 Retro Sedan Bluetooth Car Replica Speaker

## INSTRUCTION MANUAL

Model: WS-596 | Brand: WSTER

### Introduction

---

Thank you for choosing the WSTER WS-596 Retro Sedan Bluetooth Car Replica Speaker. This portable wireless speaker combines a classic car design with modern audio technology, offering high-definition sound, True Wireless Stereo (TWS) pairing, FM radio, and multiple playback options. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and enjoyment of your device.

### What's in the Box

---

- WSTER WS-596 Retro Sedan Bluetooth Speaker
- Power Cable

### Product Overview

---

The WS-596 speaker features a detailed retro sedan design with functional LED headlights and taillights. Key controls and ports are located on the rear panel for easy access.

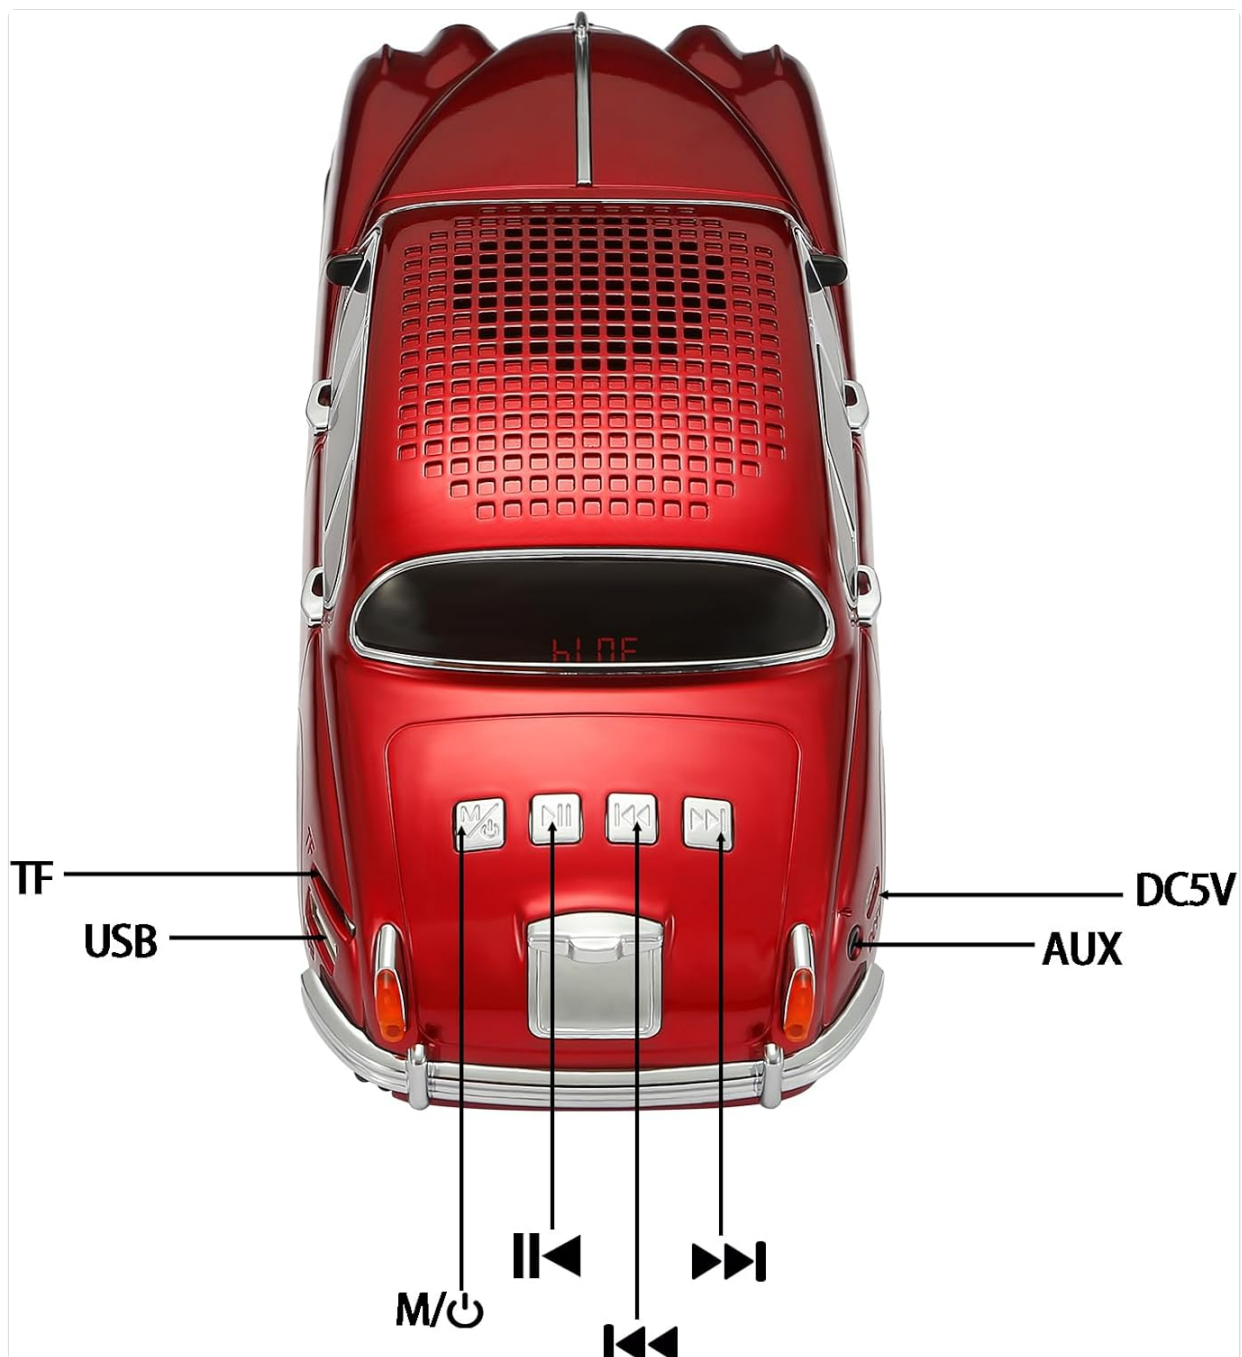


Image: Rear panel of the WS-596 speaker with labeled controls and ports.

### Controls and Ports:

- **M/O (Power/Mode Button):** Press and hold to power on/off. Briefly press to switch between modes (Bluetooth, FM Radio, USB, TF Card, Audio Recording, Selfie).
- **>>I (Next Track/Volume Up):** Briefly press for next track. Press and hold to increase volume.
- **I<< (Previous Track/Volume Down):** Briefly press for previous track. Press and hold to decrease volume.
- **>>II (Play/Pause/Call Button):** Briefly press to play/pause music. Briefly press to answer/end calls. Press and hold to reject calls. Double-click to initiate TWS pairing.
- **TF:** TF (MicroSD) card slot for music playback.
- **USB:** USB port for music playback from a USB drive.
- **DC5V:** Type-C charging port.
- **AUX:** Auxiliary input port for wired audio connection.

### Setup

1. **Charging the Speaker:** Connect the provided power cable to the DC5V port on the speaker and a compatible USB power adapter (not included). The LED indicator will show charging status. Ensure the speaker is fully charged before first use.
2. **Powering On/Off:** Press and hold the **M/O** button for approximately 3 seconds to power the speaker on or off. You will hear an audible prompt and the display will light up.

## Operating Instructions

---

### 1. Bluetooth Connection

1. Power on the speaker. It will automatically enter Bluetooth mode, indicated by an audible prompt and 'BLUE' on the display.
2. On your mobile phone or tablet, go to Bluetooth settings and enable Bluetooth.
3. Search for available devices and select 'WS-596' from the list.
4. Once connected, you will hear a confirmation sound.



Image: A smartphone displaying Bluetooth settings next to the WS-596 speaker, illustrating the connection process.

### 2. Playing Music

- **Play/Pause:** Briefly press the **▶||** button.

- **Volume Adjustment:** Press and hold the ►► button to increase volume. Press and hold the ◀◀ button to decrease volume.
- **Previous/Next Track:** Briefly press the ◀◀ button for the previous track. Briefly press the ►► button for the next track.

### 3. Mode Switching

Briefly press the M/○ button to cycle through available modes: Bluetooth, FM Radio, USB, TF Card, Audio Recording, and Selfie mode.

### 4. FM Radio Operation

1. Switch to FM Radio mode using the M/○ button.
2. Press and hold the ►|| button to automatically search for and save available FM stations. The speaker will scan through frequencies.
3. Once scanning is complete, use the ◀◀ and ►► buttons to navigate between saved stations.

### 5. Call Functions

- **Answer Call:** When an incoming call rings, briefly press the ►|| button to answer.
- **End Call:** During a call, briefly press the ►|| button to end the call.
- **Reject Call:** When an incoming call rings, press and hold the ►|| button to reject the call.
- **Switch Audio Source During Call:** During a call, briefly press the ►|| button to switch the audio output between the speaker and your mobile phone.

### 6. True Wireless Stereo (TWS) Pairing

To achieve a wider stereo sound, you can pair two WS-596 speakers together:

1. Ensure both WS-596 speakers are powered on and in Bluetooth mode, but not connected to any device.
2. On one of the speakers (this will be the primary speaker), double-click the ►|| button. You will hear a 'beep' sound.
3. The speakers will automatically search and pair with each other. Once successfully paired, you will hear a confirmation sound.
4. Connect your mobile device to the primary speaker via Bluetooth as described in the 'Bluetooth Connection' section. Both speakers will now play audio simultaneously.



Image: Two WS-596 speakers, one red and one silver, playing music simultaneously, demonstrating TWS pairing.

## 7. USB/TF Card Playback

Insert a USB drive or TF (MicroSD) card containing MP3 audio files into the respective port. The speaker will automatically switch to USB or TF card mode and begin playback. Use the track and volume controls as described above.

## 8. LED Headlights and Taillights

The LED headlights and taillights illuminate automatically when the speaker is in use, adding to the aesthetic appeal. These lights operate without distracting flashing effects.

## Maintenance

---

- Keep the speaker away from water, moisture, and extreme temperatures.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place when not in use.
- Avoid dropping or subjecting the speaker to strong impacts.

## Troubleshooting

---

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery or power button not pressed correctly.	Charge the speaker fully. Press and hold the power button for 3 seconds.
No sound.	Volume too low, incorrect mode, or device not connected.	Increase volume on both speaker and connected device. Ensure correct mode is selected. Re-pair Bluetooth device.
Bluetooth not connecting.	Speaker not in pairing mode, device too far, or interference.	Ensure speaker is in Bluetooth mode. Keep devices within 10 meters. Turn off other Bluetooth devices. Forget and re-pair 'WS-596' on your device.
TWS pairing failed.	Speakers not in correct state or too far apart.	Ensure both speakers are in Bluetooth mode and not connected to any device. Place them close to each other. Double-click the play button on one speaker to initiate pairing.
FM radio reception is poor.	Weak signal or environmental interference.	Move the speaker to a location with better reception. Re-scan for channels.

## Specifications

Feature	Detail
Brand	WSTER
Model Number	WS-596
Connectivity Technology	Bluetooth
Wireless Technology	Bluetooth
Audio Output Mode	Stereo
Speaker Maximum Output Power	10 Watts
Frequency Response	18 KHz
Additional Features	Built-in Microphone, FM Radio, LED Light, Portable, TWS
Enclosure Material	Acrylonitrile Butadiene Styrene (ABS)
Item Dimensions (D x W x H)	10.04"D x 3.23"W x 3.74"H
Item Weight	586 Grams
Power Source	2 Nonstandard Battery batteries (included)

## Official Product Video

Your browser does not support the video tag.

Video: A detailed instructional video demonstrating the features and operation of the WSTER WS-596 speaker, including power on/off, Bluetooth pairing, music playback controls, mode switching, FM radio, call functions, and TWS pairing.

## Warranty and Support

---

This product does not come with a specified warranty. For any technical support or inquiries, please refer to the seller's contact information on the purchase platform.