

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MAHANCRIS](#) /

› [MAHANCRIS File Cabinet and Printer Stand with Charging Station \(Model FCHB98E01-FCBK5901\) User Manual](#)

MAHANCRIS FCHB98E01-FCBK5901

MAHANCRIS File Cabinet and Printer Stand with Charging Station User Manual

Model: FCHB98E01-FCBK5901

1. INTRODUCTION

Thank you for choosing the MAHANCRIS File Cabinet and Printer Stand with Charging Station. This manual provides essential information for the safe assembly, operation, and maintenance of your new office storage solution. Please read these instructions carefully before use and retain them for future reference.



Image 1.1: The MAHANCRIS File Cabinet and Printer Stand in a typical office environment, showcasing its functionality next to a desk.

2. SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not proceed with assembly if any parts are missing or damaged.
- Assemble the unit on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly to avoid stripping threads or damaging components.
- Keep small parts away from children during assembly to prevent choking hazards.
- Do not exceed the maximum weight capacity for the top surface or drawers (refer to Specifications section).
- Ensure the power cord for the charging station is routed safely to prevent tripping hazards and is not pinched by furniture.
- Only use the charging station with compatible devices and within specified electrical limits.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present in your package. All parts

are carefully numbered for easy identification during the installation process.

- Metal Frame Components
- Top Board
- Fabric Drawers (Quantity: 3)
- Adjustable Hanging Rods
- Charging Station Unit (with power cord)
- Casters (Wheels)
- Assembly Hardware (screws, bolts, etc.)
- Installation Tools (e.g., Allen wrench)
- Illustrated Instruction Manual

4. SETUP AND ASSEMBLY

Follow the detailed illustrated instructions provided in your package for step-by-step assembly. The general process involves:

1. Unpacking all components and verifying against the package contents list.
2. Assembling the main metal frame structure.
3. Attaching the top board to the frame.
4. Installing the casters (wheels) to the base of the frame. Ensure two lockable wheels are positioned for easy access.
5. Inserting the fabric drawers into their designated slots.
6. Installing the adjustable hanging rods within the drawers as needed.
7. Securing the charging station unit to the designated area, typically on the top shelf, and routing the power cord.

For visual guidance on dimensions and components, refer to the image below:

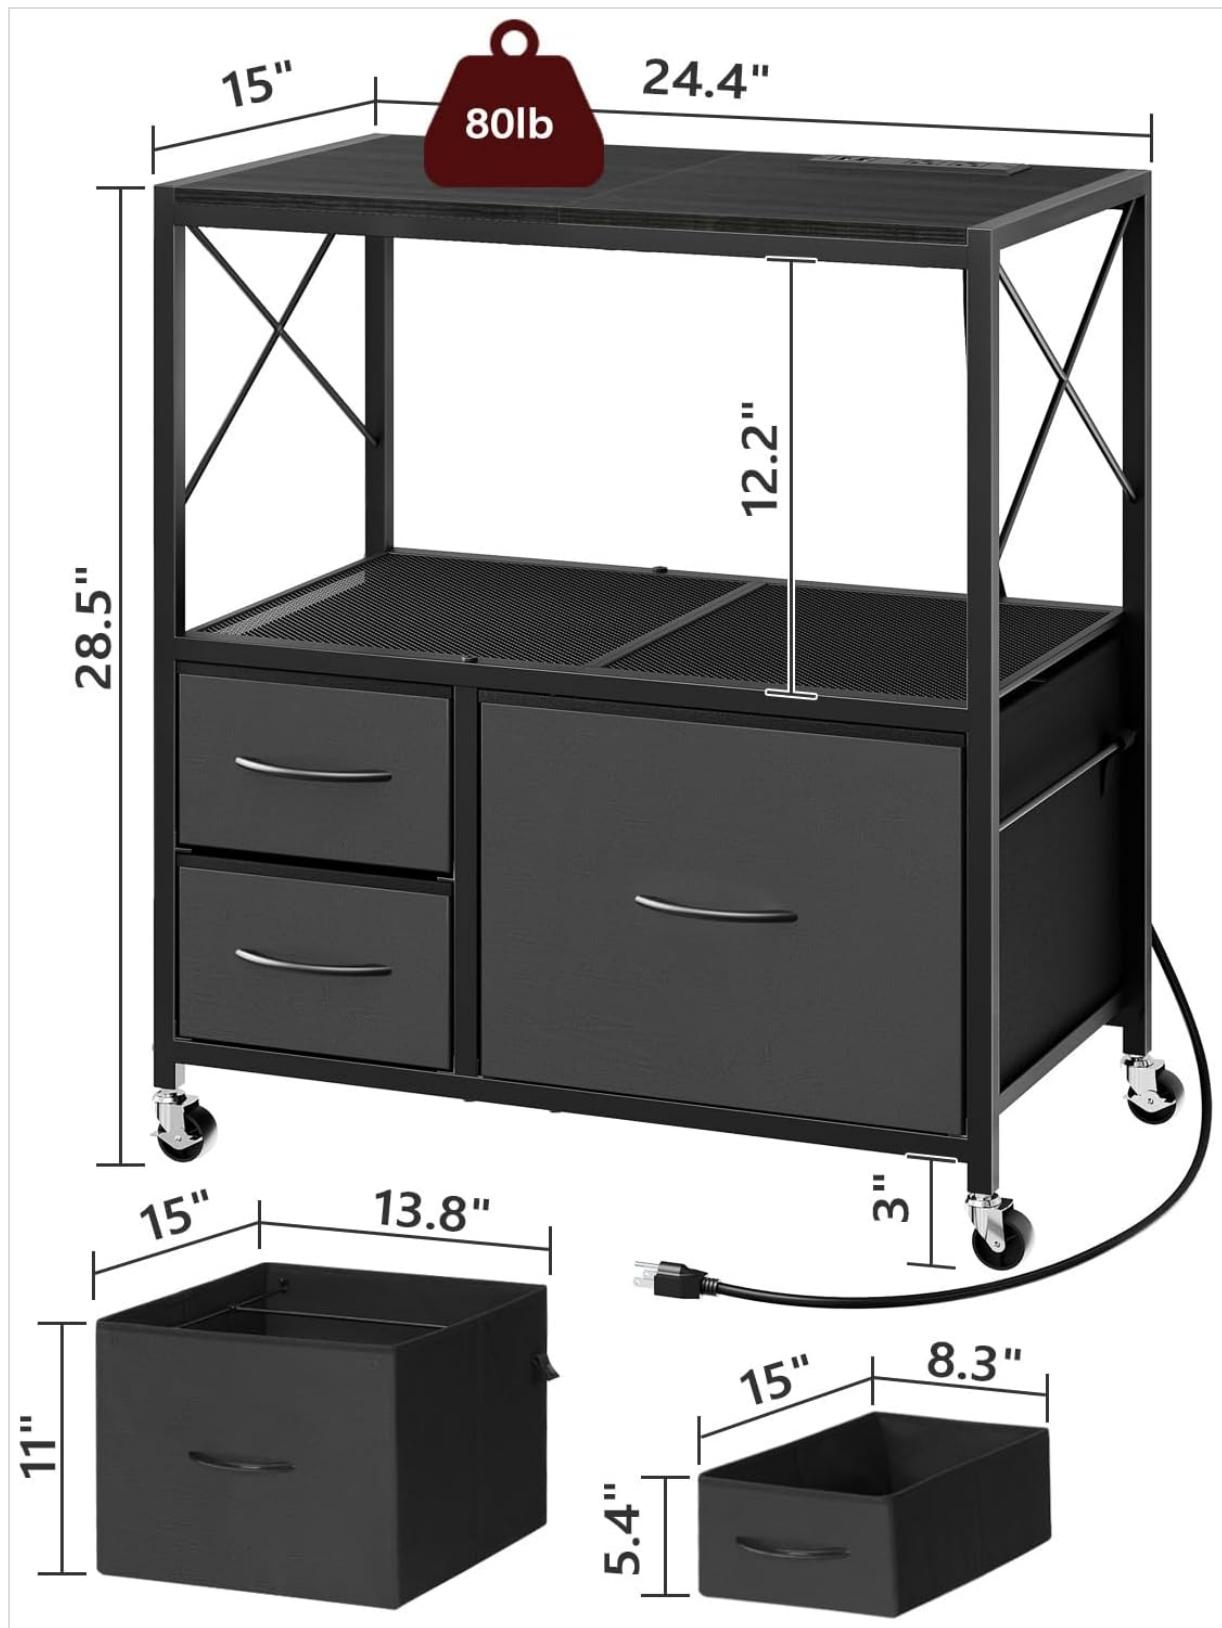


Image 4.1: Detailed dimensions of the file cabinet and printer stand, including the top surface (24.4"W x 15"D), overall height (28.5"), and individual drawer dimensions.

5. OPERATING INSTRUCTIONS

5.1 Using the File Drawers

The fabric drawers are designed to accommodate both A4 and Letter-sized documents. The adjustable hanging rods allow for organized filing of hanging folders.

- To insert hanging files, adjust the rods to the appropriate width for either A4 or Letter size.

- Ensure files are evenly distributed to prevent drawers from becoming unbalanced or difficult to open/close.



Image 5.1.1: The adjustable hanging rods within a drawer, illustrating compatibility with both A4 and Letter-sized documents for efficient organization.

Anti-Fall Drawers

Adjustable hanging rods fit both Letter and A4-sized files.



Image 5.1.2: An illustration demonstrating how both A4 and Letter-sized files fit securely within the drawer, highlighting the anti-fall design.

5.2 Using the Charging Station

The integrated charging station provides convenient power access for your electronic devices.

- Plug the 59" power cord into a standard wall outlet.
- Utilize the 2 AC outlets for devices like printers, scanners, or laptops.
- Use the 2 USB ports to charge smartphones, tablets, or other USB-powered accessories.
- Avoid overloading the charging station. Refer to the Specifications section for maximum power output.

5.3 Utilizing Mobility (Casters)

The unit is equipped with four industrial-grade universal wheels for flexible movement. Two of these wheels are lockable to ensure stability when needed.

- To move the cabinet, unlock the two lockable casters by pressing down on their levers.
- Gently push the cabinet to its desired location.
- Once in position, lock the two casters by pushing their levers up to prevent unintended movement.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the metal frame and top board with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish. The fabric drawers can be spot cleaned with a mild detergent and water, then air-dried.
- **Drawer Care:** Ensure drawers are not overloaded to maintain smooth operation and prevent damage to the fabric or frame.
- **Caster Maintenance:** Periodically check the casters for any accumulated debris (hair, dust) and clean as necessary to ensure smooth rolling.
- **Electrical Safety:** Regularly inspect the power cord for any signs of damage. Discontinue use immediately if the cord is frayed or damaged.



Image 6.1: Exploded view illustrating the material composition of the drawers, including Oxford Fabric, MDF Board, and Non-Woven Fabric, which contribute to their durability.

7. TROUBLESHOOTING

- **Issue:** Drawers are difficult to open or close.
 - **Solution:** Check if the drawers are overloaded. Redistribute contents evenly. Ensure no objects are obstructing the drawer's path.

- **Issue:** Cabinet is unstable or wobbles.
 - **Solution:** Verify that all assembly screws are tightened securely. Ensure the casters are locked if the cabinet is intended to be stationary. Place the cabinet on a level surface.
- **Issue:** Charging station is not providing power.
 - **Solution:** Check if the power cord is securely plugged into a working wall outlet. Ensure the wall outlet itself has power. Test with a different device to rule out device-specific issues.
- **Issue:** Casters are not rolling smoothly.
 - **Solution:** Inspect casters for debris (e.g., hair, lint) and remove any obstructions. Ensure casters are not locked.

8. SPECIFICATIONS

Model Number	FCHB98E01-FCBK5901
Overall Dimensions	Approximately 24.4" (W) x 15.6" (D) x 28.5" (H)
Top Surface Dimensions	15.6" (D) x 21.2" (W)
Drawer Capacity	Fits A4 and Letter-sized hanging files
Charging Station	2 AC Outlets, 2 USB Ports
Power Cord Length	59 inches
Mobility	4 Industrial-grade universal casters (2 lockable)
Materials	Metal frame, MDF board, Oxford fabric, Non-woven fabric

9. WARRANTY AND SUPPORT

MAHANCRIS products are manufactured with quality and durability in mind. For specific warranty details, please refer to the warranty card included with your purchase or visit the official MAHANCRIS website.

If you encounter any issues or have questions regarding your product, please contact MAHANCRIS customer support:

- **Website:** [Visit the MAHANCRIS Store on Amazon](#)
- **Email:** Refer to your product packaging or warranty card for contact email.
- **Phone:** Refer to your product packaging or warranty card for contact number.

Please have your model number (FCHB98E01-FCBK5901) and purchase date ready when contacting support.