

[Manuals.plus](#) /

› [BrickSoul](#) /

› BrickSoul Light Up Kit for Lego 76191 Infinity Gauntlet - Instruction Manual

BrickSoul 76191-TV

BrickSoul Light Up Kit for Lego 76191 Infinity Gauntlet - Instruction Manual

Brand: BrickSoul | **Model:** 76191-TV

1. INTRODUCTION

This instruction manual provides comprehensive guidance for installing and operating your BrickSoul LED lighting kit, specifically designed for the Lego 76191 Marvel Infinity Gauntlet building set. This kit enhances your model with vibrant lighting, transforming it into a display piece. Please note that the Lego 76191 model itself is not included with this lighting kit.



Image 1: BrickSoul Light Up Kit installed on the Lego 76191 Infinity Gauntlet. The Lego model is for display purposes only and is not included.

2. PACKAGE CONTENTS

Before beginning installation, please verify that all components listed below are present in your package.

- LED Light Kit (various light components)
- Battery Box (AAA batteries not included)
- USB Cable with Integrated Control Button
- Instructions for Use (digital access)
- Tweezers (for precise placement)

Light Kit Only – Not Model

Package Include:



Light Control Button



Light Kits



Instructions for Use



Tweezers



Battery Box
AAA not included

Image 2: Overview of the BrickSoul Light Up Kit package contents.

3. SETUP AND INSTALLATION

The BrickSoul LED kit is designed for straightforward installation. Detailed, step-by-step instructions are provided digitally via video and PDF guides.

3.1 Accessing Digital Instructions

To access the comprehensive installation guides:

1. Locate the QR code or link provided on the physical instruction card included in your package.
2. Scan the QR code or navigate to the provided URL.
3. Input your product model number (76191) to find the specific PDF and video instructions for your kit.



Image 3: Accessing digital installation instructions.

3.2 General Installation Guidelines

- The installation process typically involves carefully removing a few bricks from your Lego model to integrate the lighting components.
- Follow the numbered steps in the digital guide precisely.
- Utilize the included tweezers for handling small components and wires to ensure a clean and tidy wiring setup.
- Ensure wires are routed discreetly to maintain the aesthetic integrity of your model.

BRINGING EVERY DETAIL TO LIFE

Model is for Display Use Only and NOT INCLUDED



Image 4: Detailed view of integrated LED lights within the model.

Upgraded Craft & Design, Stronger Build



Image 5: Example of clean wiring integration.

4. OPERATING INSTRUCTIONS

4.1 Powering the Light Kit

The BrickSoul light kit can be powered via a USB connection or by installing AAA batteries (not included) into the provided battery box. Ensure the power source provides a safe 3-5V input.

4.2 Using the Integrated Control Button

Your light kit features an integrated control button on the USB cable for easy operation:

- **Turn On/Off:** Tap the button once to switch the lights on or off.
- **Adjust Brightness:** Press and hold the button to cycle through brightness levels. Release the button when the desired brightness is achieved.



Image 6: USB button functionality for power and brightness control.



Image 7: Brightness adjustment demonstration.

5. MAINTENANCE

To ensure the longevity and optimal performance of your BrickSoul light kit:

- **Cleaning:** Gently dust the LED components and wires with a soft, dry cloth. Avoid using liquid cleaners directly on the electrical components.
- **Handling:** Handle the wires and LED components with care to prevent bending or breaking.
- **Storage:** If storing the model for an extended period, consider removing the AAA batteries from the battery box to prevent leakage.

6. TROUBLESHOOTING

If you encounter any issues with your BrickSoul light kit, please refer to the following common solutions:

- **Lights Not Turning On:**
 - Ensure the USB cable is securely connected to a power source.
 - If using the battery box, check that fresh AAA batteries are correctly installed and the battery box is properly connected.
 - Verify that all wire connections within the Lego model are secure and not loose.
- **Lights Flickering or Dim:**
 - Check the power source; a weak power supply (e.g., low batteries) can cause dimming or flickering.
 - Ensure no wires are pinched or damaged, which could interrupt the current.
 - Adjust the brightness using the control button (press and hold).
- **Specific Lights Not Working:**
 - Carefully inspect the connections for the non-working lights. A loose connection is a common cause.
 - If a specific LED appears damaged, contact BrickSoul customer support for assistance.

For further assistance, please consult the digital instruction guides or contact BrickSoul customer support.

7. SPECIFICATIONS

Brand	BrickSoul
Model Number	76191-TV
Compatible With	Lego 76191 Marvel Infinity Gauntlet Building Set
Light Source Type	Light Emitting Diode (LED)
Power Source	USB or AAA Batteries (not included)
Input Voltage	3-5V
Special Features	Adjustable Brightness via USB Cable Button
Material	ABS Plastic, Copper Wire
Item Weight	0.3 Pounds

8. WARRANTY AND SUPPORT

BrickSoul offers a worry-free warranty and dedicated customer support to ensure a smooth experience with your lighting kit.

- **Replacement Policy:** In the event of accidental damage, such as a bent connector or broken wire, BrickSoul provides quick and hassle-free replacements.
- **Customer Service:** The BrickSoul support team is available to assist with any questions or issues you may encounter during installation or operation.

For warranty claims or support inquiries, please refer to the contact information provided in your digital instructions or on the official BrickSoul website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question