

[Manuals.plus](#) /

› [WSTER](#) /

› WSTER WS-1969 Retro Sports Car Bluetooth Speaker Instruction Manual

WSTER WS-1969

Instruction Manual

WSTER WS-1969 Retro Sports Car Bluetooth Speaker

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your WSTER WS-1969 Retro Sports Car Bluetooth Speaker. Please read this manual thoroughly before using the product and retain it for future reference.

The WS-1969 is a portable wireless speaker designed with a classic 1960s-inspired sports car replica. It offers high-definition sound, TWS stereo pairing, FM radio, and multiple playback options including USB and TF card. The speaker also features illuminating LED headlights and taillights and a built-in microphone for hands-free calling.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep the speaker away from water and other liquids. This product is not waterproof.
- Do not attempt to disassemble, repair, or modify the device yourself. Contact qualified service personnel for assistance.
- Use only the provided charging cable or a certified Type-C cable for charging.
- Dispose of batteries and electronic components responsibly according to local regulations.

WHAT'S IN THE BOX

Upon unpacking, please ensure all items listed below are present:

- WSTER WS-1969 Retro Sports Car Bluetooth Speaker
- Power Cable (Type-C)
- Quick Start Guide

WS-1969 CAR SPEAKER



WSTER

«» Enjoy Music Enjoy Life »»

Image: The WSTER WS-1969 speaker in green, alongside its retail packaging, a USB-A to USB-C charging cable, and a quick start guide.

PRODUCT OVERVIEW

Controls





Image: Top view of the WSTER WS-1969 speaker, showing the speaker grille, digital display, and control buttons for power, mode, play/pause, volume, and track navigation.

- **M/ (Mode/Power) Button:** Press briefly to switch modes (Bluetooth, FM, USB, TF). Press and hold to power on/off.
- **◀◀ (Previous/Volume Down) Button:** Press briefly for previous track. Press and hold to decrease volume.
- **▶▶ (Next/Volume Up) Button:** Press briefly for next track. Press and hold to increase volume.
- **▶ (Play/Pause) Button:** Press briefly to play or pause music.

Ports and Indicators

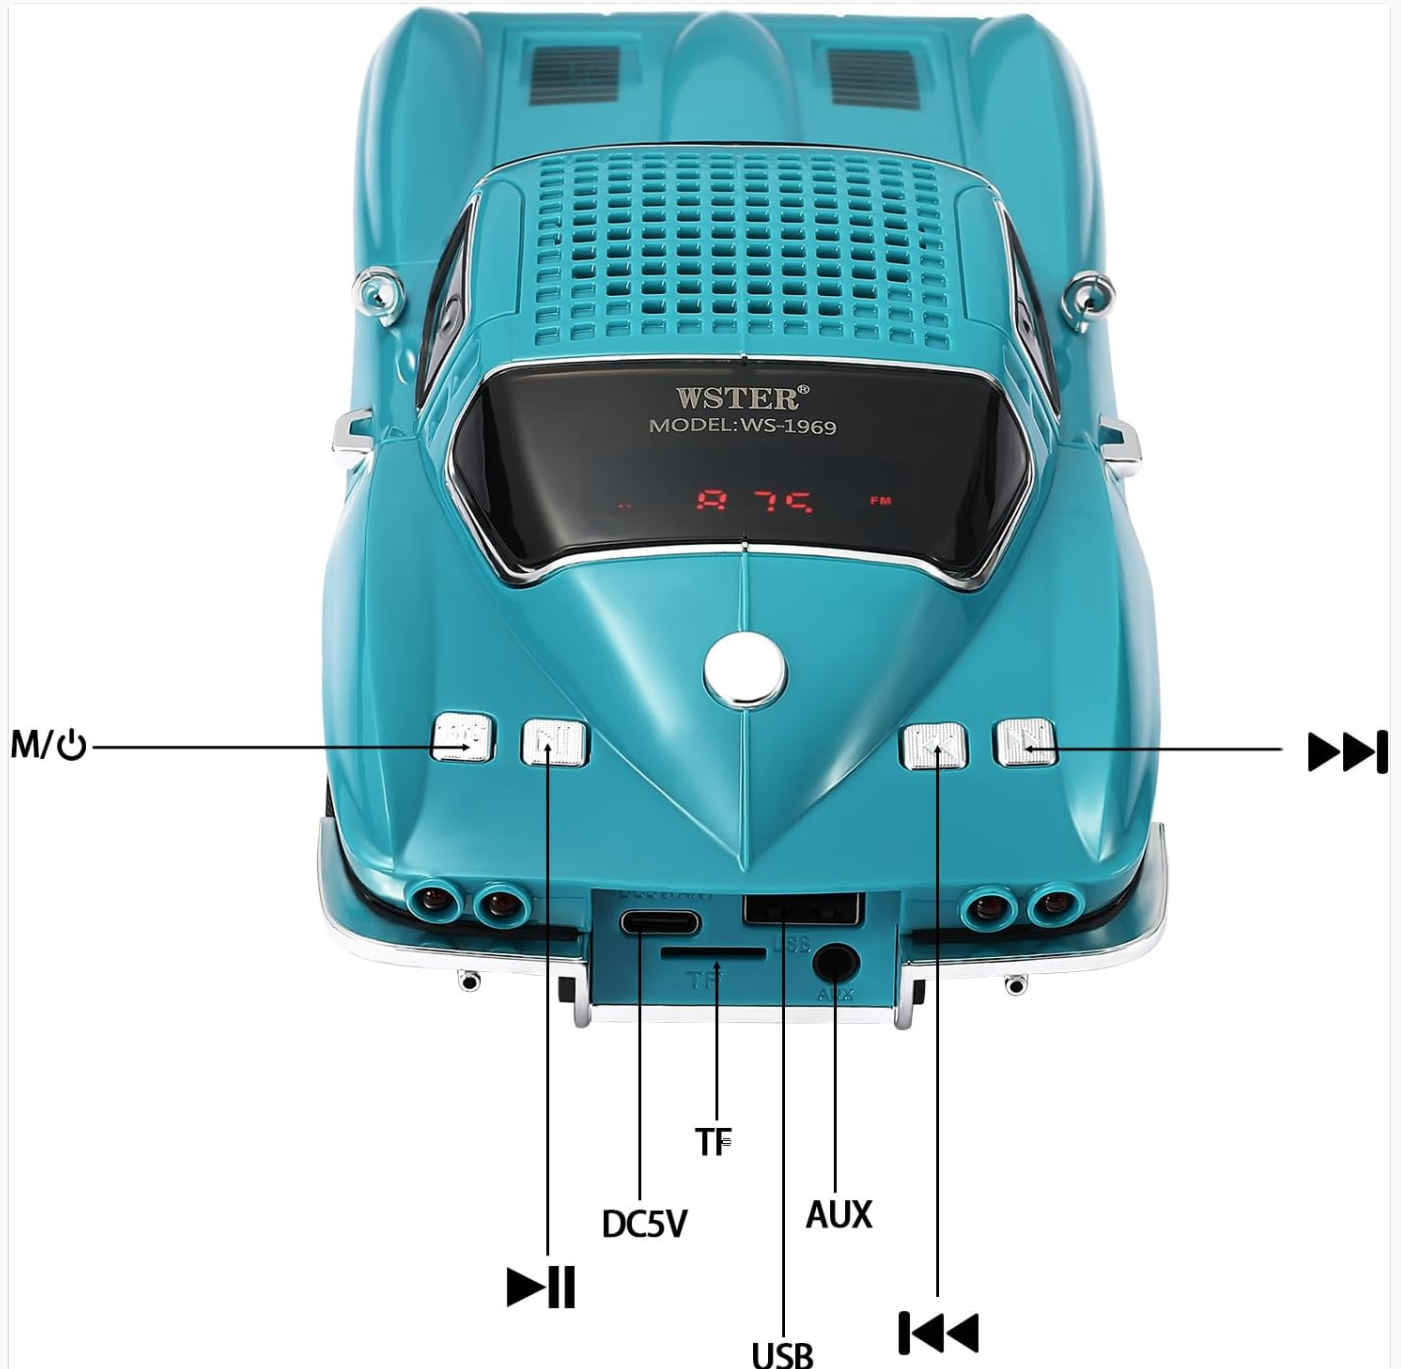


Image: Rear view of the WSTER WS-1969 speaker, highlighting the DC5V Type-C charging port, TF card slot, USB port, and AUX input.

- **DC5V (Type-C) Port:** For charging the speaker.
- **TF Card Slot:** Insert a TF (MicroSD) card for music playback.
- **USB Port:** Insert a USB drive for music playback.
- **AUX Port:** Connect external audio devices via a 3.5mm audio cable (not included).
- **LED Headlights & Taillights:** Illuminate during operation.

SETUP

Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Type-C charging cable to the DC5V port on the rear of the speaker and the other end to a USB power adapter (not included) or a computer USB port. The charging indicator (usually on the display) will show charging status and turn off or change color when fully charged.

Power On/Off

To power on the speaker, press and hold the **M/** button until you hear a startup sound and the display illuminates. To power off, press and hold the **M/** button again until you hear a shutdown sound and the display turns off.

Bluetooth Pairing

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by 'BLUE' on the display and a flashing indicator.
2. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select 'WS-1969' from the list of devices. Once connected, you will hear a confirmation tone, and 'BLUE' on the display will stop flashing.



Image: A WSTER WS-1969 speaker on a beach background, with a smartphone displaying Bluetooth connection settings, illustrating the pairing process.

TWS (True Wireless Stereo) Pairing

To achieve a stereo sound experience, you can pair two WS-1969 speakers together:

1. Ensure both WS-1969 speakers are powered on and in Bluetooth mode, but not connected to any device.
2. On one of the speakers (this will be the primary speaker), double-press the ► (**Play/Pause**) button. You will hear a tone indicating it's searching for another speaker.
3. The two speakers will automatically pair with each other. A confirmation tone will sound once TWS pairing is successful.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described in the 'Bluetooth Pairing' section. Audio will play in stereo through both speakers.



Image: Two WSTER WS-1969 speakers positioned on a beach, with a smartphone in the center, visually representing the True Wireless Stereo (TWS) pairing feature.

OPERATING INSTRUCTIONS

Music Playback (Bluetooth, USB, TF Card)

- **Mode Selection:** Press the **M/** button briefly to cycle through available modes: Bluetooth, FM Radio, USB, and TF Card. The display will show the current mode.

- **Play/Pause:** Press the ► button briefly to play or pause the current track.
- **Next/Previous Track:** Press the ►► button briefly for the next track. Press the ◀◀ button briefly for the previous track.
- **Volume Adjustment:** Press and hold the ►► button to increase volume. Press and hold the ◀◀ button to decrease volume.

FM Radio

1. Switch the speaker to FM Radio mode using the M/ button.
2. To automatically scan and save available stations, press and hold the ► (Play/Pause) button. The speaker will scan frequencies and save stations with strong signals.
3. Once scanning is complete, use the ►► and ◀◀ buttons to navigate between saved stations.

Call Function (via Bluetooth)

When connected to your smartphone via Bluetooth, the speaker can be used for hands-free calls:

- **Answer Call:** When an incoming call rings, press the ► (Play/Pause) button briefly to answer.
- **End Call:** During a call, press the ► (Play/Pause) button briefly to end the call.
- **Reject Call:** When an incoming call rings, press and hold the ► (Play/Pause) button to reject the call.

LED Headlights and Taillights

The LED headlights and taillights illuminate automatically when the speaker is powered on and in use, adding to the retro car aesthetic. They do not flash and are designed to enhance the product’s appearance.

Instructional Video

For a visual guide on various operations, please refer to the official instructional video below:

Your browser does not support the video tag.

Video: A detailed instructional video demonstrating various features and operations of the WSTER speaker, including power on/off, Bluetooth pairing, music playback, and mode switching.

MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place when not in use.
- Avoid blocking the speaker grille to ensure optimal sound quality.

TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect to a power source using the Type-C cable.
Cannot pair via Bluetooth.	Ensure the speaker is in Bluetooth mode and not connected to another device. Disable and re-enable Bluetooth on your mobile device. Move closer to the speaker.
No sound or low volume.	Increase the volume on both the speaker and your connected device. Ensure the correct mode (Bluetooth, USB, TF, FM) is selected.

Problem	Solution
FM radio reception is poor.	Move the speaker to a location with better signal. Perform an automatic station scan again.
TWS pairing fails.	Ensure both speakers are in Bluetooth mode and not connected to any device before initiating TWS pairing.

SPECIFICATIONS

- **Model Name:** WS-1969
- **Brand:** WSTER
- **Speaker Type:** Portable Bluetooth Speaker
- **Connectivity Technology:** Bluetooth 5.4
- **Audio Output Mode:** Stereo
- **Speaker Maximum Output Power:** 10 Watts
- **Frequency Response:** 18 KHz
- **Special Features:** Bluetooth Connection, Built-in Microphone, FM Radio, LED Lights, TWS Pairing
- **Compatible Devices:** Laptop, Smartphone, Tablet
- **Control Method:** Touch Buttons
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Product Dimensions:** 10.43"D x 4.21"W x 2.99"H
- **Item Weight:** 562 Grams (1.24 pounds)
- **Batteries:** 2 Nonstandard Battery batteries required (included)
- **Waterproof:** No

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the 'Quick Start Guide' included in your product packaging or visit the official WSTER website. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FNR9RWH3>

More documents and user manuals: <https://manuals.plus/>