

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [SERVOMASTER](#) /
- › SERVOMASTER SM01 Cordless Handheld Vacuum Cleaner User Manual

SERVOMASTER SM01

SERVOMASTER SM01 Cordless Handheld Vacuum Cleaner User Manual

Model: SM01

1. INTRODUCTION

Thank you for choosing the SERVOMASTER SM01 Cordless Handheld Vacuum Cleaner. This compact and lightweight device is designed for convenient cleaning in various environments, including your car, home, and office. Its powerful suction and versatile attachments make it ideal for tackling dust, crumbs, pet hair, and small debris in hard-to-reach areas. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Figure 1: SERVOMASTER SM01 Cordless Handheld Vacuum Cleaner

2. PRODUCT OVERVIEW

2.1 Included Components

- Cordless Handheld Vacuum Cleaner (SM01)
- Crevice Tool
- Dusting Brush
- User Manual
- Washable HEPA Filter (one pre-installed, one extra)
- Type-C Charging Cable
- Storage Bag



Figure 2: Included Components

2.2 Key Features

- **Cordless & Portable:** Lightweight (approximately 0.8 lbs) for easy handling and transport.
- **Powerful Suction:** Equipped with a 120W motor for effective cleaning of fine particles and small debris.
- **Rechargeable:** Fast charging via Type-C cable, fully charged in 3-4 hours.
- **HEPA Filtration:** Built-in removable and washable HEPA filter for efficient dust capture and environmental friendliness.
- **Versatile Attachments:** Includes a brush tool for loosening stubborn dirt and a crevice tool for narrow spaces.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the vacuum cleaner. Connect the provided Type-C charging cable to the vacuum's charging port and a suitable power adapter (5V/1A, 5V/2A, 5V/3A charger recommended). The charging indicator light will illuminate during charging and change color or turn off when fully charged. A full charge typically takes 3-4 hours.



Figure 3: Charging the Vacuum Cleaner

3.2 Attaching Accessories

Select the appropriate attachment for your cleaning task. The crevice tool is designed for tight spaces, while the brush tool helps dislodge embedded dirt and hair.

- To attach: Align the desired tool with the vacuum's nozzle and push firmly until it clicks into place.
- To detach: Pull the tool away from the nozzle.

SILENT AND EFFICIENT CLEANING

Low Noise ≤ 65 dB



Figure 4: Attaching Accessories

4. OPERATION

To turn the vacuum on or off, slide the power switch located on the handle. For optimal performance, ensure the dust cup is properly attached and the filter is clean before each use.

4.1 General Cleaning

Use the vacuum to clean various surfaces. The powerful suction effectively picks up dust, crumbs, pet hair, and small debris.

LONG RUNTIME & FAST CHARGING



Figure 5: Cleaning a Car Interior

CORDLESS & COMPACT DESIGN



Figure 6: Cleaning Home Furniture

4.2 Using Attachments

- **Crevice Tool:** Ideal for reaching into narrow gaps, corners, and between cushions in your car or furniture.
- **Brush Tool:** Use this tool to gently agitate and lift pet hair or stubborn dirt from upholstery, carpets, and delicate surfaces.

Video 1: Demonstrating the SERVOMASTER SM01 Cordless Handheld Vacuum Cleaner's features and usage, including attachments and portability.

Video 2: A detailed overview of the SERVOMASTER SM01 Handheld Vacuum Cleaner Cordless, showcasing its powerful suction and ease of use for various cleaning tasks.

Video 3: Quick demonstration of the SM01BS Handheld Vacuum Cordless, highlighting its compact design and effective cleaning capabilities.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dust Cup

- Press the release button to detach the dust cup from the main unit.
- Carefully empty the collected debris into a waste bin.

5.2 Cleaning the HEPA Filter

The HEPA filter is washable and reusable. Clean it regularly to maintain suction effectiveness.

- Remove the HEPA filter from the dust cup.
- Rinse the filter under running water until clean.
- Allow the filter to air-dry completely before reinserting it into the dust cup. Do not use the vacuum with a wet filter.

MULTI-SCENARIO APPLICATION



Figure 7: HEPA Filter Cleaning Process

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Reduced suction power	Dirty or clogged HEPA filter; Full dust cup; Blocked nozzle/attachments.	Clean or replace the HEPA filter; Empty the dust cup; Check and clear any blockages in the nozzle or attachments.
Vacuum does not turn on	Battery is depleted; Power switch is off; Device has been idle for an extended period.	Charge the battery fully; Ensure the power switch is in the 'ON' position; Recharge the device to activate the battery if it has been idle.

Problem	Possible Cause	Solution
Short operating time	Battery not fully charged; Battery degradation over time.	Ensure the battery is fully charged before use; Contact customer support if battery life significantly decreases.

7. SPECIFICATIONS

Feature	Specification
Model Name	SM01 Handheld Vacuum Cleaner
Brand	SERVOMASTER
Power Source	Battery Powered
Motor Horsepower	0.16 HP (120W)
Voltage	11.1 Volts
Noise Level	60 Decibels
Capacity	400 Grams
Filter Type	HEPA Filter (Washable)
Charging Time	3-4 hours
Item Dimensions (L x W x H)	11"L x 4"W x 4"H
Weight	Approx. 0.8 lbs
Recommended Uses	Car, home, office, couch, carpet, pet hair cleaning

8. WARRANTY AND SUPPORT

This product is covered by a return policy allowing for refund or replacement within 30 days of purchase. For any order-related support, please contact us via your Amazon Account Page. Our mission is to provide quality products and exceptional customer service.

© 2026 SERVOMASTER. All rights reserved.

For more information, visit the [SERVOMASTER Store on Amazon](#).