

[Manuals.plus](#) /

> [BLITZHOME](#) /

> BLITZHOME WiFi Countertop Portable Dishwasher Instruction Manual - Model 850073031247

BLITZHOME 850073031247

BLITZHOME WiFi Countertop Portable Dishwasher Instruction Manual

Model: 850073031247

Brand: BLITZHOME

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your BLITZHOME WiFi Countertop Portable Dishwasher. Designed for convenience and powerful cleaning, this compact appliance is ideal for various living spaces, including apartments, RVs, and dorms. Please read these instructions thoroughly before first use and retain them for future reference.



Image: BLITZHOME Countertop Portable Dishwasher on a kitchen counter, highlighting its compact design.

2. PACKAGE CONTENTS

Verify that all components are present upon unpacking:

- 1x Dishwasher Unit
- 1x Instruction Manual (this document)
- 1x 59.06" Drain Hose
- 1x 59.06" Water Inlet Hose
- 1x Clamp
- 1x Suction Cup
- 1x Measuring Cup
- 1x Fruit and Vegetable Basket

3. SETUP

3.1 Water Supply Modes

Your dishwasher offers two convenient water supply options:

- **Tank Mode:** Utilize the built-in 5.2L water tank. Open the water inlet cover on top of the unit and pour water using the provided measuring cup until the indicator signals full.
- **Faucet Mode:** Connect directly to a water tap using the inlet hose. Ensure a secure connection to prevent leaks.

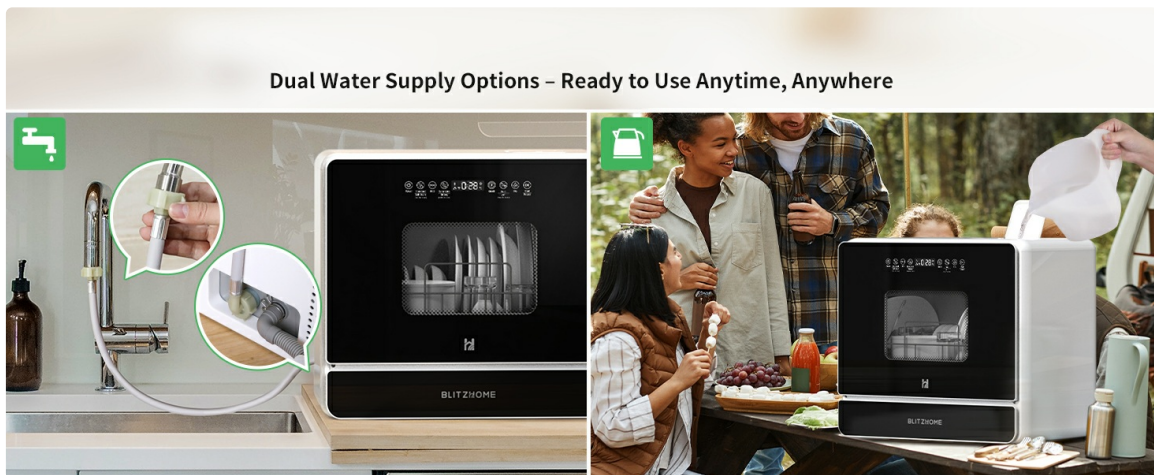


Image: Diagram illustrating the dual water supply options: manual filling into the top reservoir and direct connection to a faucet.

3.2 Drainage Setup

Connect the drain hose to the designated outlet at the rear of the dishwasher. Secure the hose with the provided clamp. Position the other end of the drain hose into a sink or a suitable drainage area. The suction cup can be used to keep the hose steady in the sink.

3.3 Power Connection

Plug the dishwasher's power cord into any standard 120V outlet.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The dishwasher features a touch control panel on the front. Icons include Power, Standard/Self-clean, ECO, Baby Care/Strong, Quick, Fruit/WiFi, Dry, and Start/Pause.



Image: The dishwasher's control panel with icons for different wash programs and functions.

4.2 Wash Programs

Select from 9 specialized programs:

- **Standard:** 58 minutes for daily dishwashing.
- **ECO:** 88 minutes for energy-efficient cleaning.
- **Baby Care:** 78 minutes for sterilizing baby bottles and items.
- **Strong:** 98 minutes for heavily soiled dishes.
- **Quick:** 28 minutes for lightly soiled items.
- **Fruit:** 19 minutes for washing fruits and vegetables.
- **Self-Clean:** 28 minutes for internal cleaning of the dishwasher.
- **Dry:** 60 minutes for hot air drying.
- **Delayed Start:** Schedule a wash cycle 1-24 hours in advance.

4.3 Smart App Control

Enhance your dishwashing experience with the BLITZHOME app. Download the app to your smartphone to:

- Monitor dishwashing status and internal temperature.
- Receive error notifications.
- Select wash modes and schedule cycles.
- Pause/start functionality remotely.
- Create groups and share device access.



Image: The BLITZHOME app interface on a smartphone, demonstrating remote control and monitoring features.

4.4 Loading Dishes

Arrange dishes in the racks, ensuring they do not obstruct the spray arms. The dishwasher features a 2-level rack design. The top rack is suitable for smaller items like cutlery and small bowls, while the bottom rack accommodates larger plates (up to 11.81 inches with the top rack removed) and cups. The fruit basket can be placed on the bottom rack for washing produce.

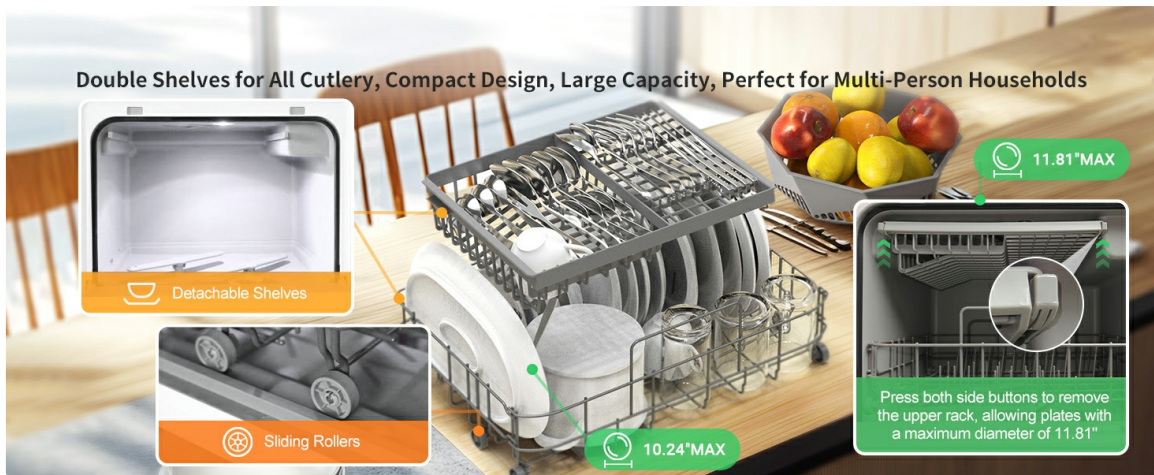


Image: Interior view of the dishwasher with dishes loaded on both upper and lower racks, demonstrating capacity.

4.5 Adding Detergent

Place a dishwasher detergent pod or approximately 10 grams of liquid detergent into the designated dispenser inside the door.

4.6 Starting a Cycle

Close the door securely. Press the Power button, select your desired wash program, and then press Start/Pause to begin the cycle.

4.7 Pause/Add Item

To add an item during a cycle, press the Start/Pause button. The cycle will pause. Open the door, add the item, close the door, and press Start/Pause again to resume.

5. KEY FEATURES

- **360° High-Temperature Cleaning:** Three spray arms deliver 167°F (75°C) high-temperature sprays for thorough cleaning, effectively removing tough grease and grime.



Image: Close-up of the dishwasher interior with water spraying at 167°F, illustrating the powerful cleaning action.

- **PTC Hot Air Drying & Air Refresh System:** After washing, the PTC hot air drying system activates for 60 minutes, ensuring dishes are completely dry and odor-free. The 72-hour air refresh function circulates fresh air to maintain hygiene during storage.



Image: Visual representation of the PTC hot air drying and air refresh system in action within the dishwasher.

- **Compact & Large Capacity Design:** Measuring 21.6 in x 14.2 in x 19.5 in, it fits easily on countertops. Despite its compact size, it offers a spacious interior suitable for 4-6 people, accommodating plates up to 11.81 inches.



Image: The dishwasher shown in different environments (kitchen, RV, camping) to illustrate its compact and versatile design.

- **Water Saving:** Consumes only 5.2L of water per cycle, saving up to 85% more water compared to handwashing.



Image: A visual comparison demonstrating the water efficiency of the dishwasher (5.2L) versus handwashing (35L).

- **24-Hour Delayed Start:** Schedule washes to fit your daily routine.

6. MAINTENANCE

6.1 Cleaning the Filter

Regularly check and clean the filter located at the bottom of the dishwasher to remove any food debris. Rinse the filter under running water. If storing the dishwasher, ensure the filter area is completely dry to prevent mold growth.



Image: Detailed view of the dishwasher's interior, highlighting the removable filter and drainage system for maintenance.

6.2 General Care

Wipe down the exterior of the dishwasher with a soft, damp cloth. Avoid abrasive cleaners. Run the 'Self-Clean' program periodically to maintain internal hygiene.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following common troubleshooting tips:

- **Dishwasher not starting:** Ensure the power cord is securely plugged in and the door is fully closed. Check if a program is selected and the 'Start/Pause' button is pressed.

- **Water not filling:** Verify that the water tank is filled (Tank Mode) or the faucet is turned on and the inlet hose is properly connected (Faucet Mode). Check for any kinks in the inlet hose.
- **Dishes not clean:** Ensure dishes are loaded correctly without blocking spray arms. Use the appropriate wash program for the soil level. Check and clean the filter.
- **Water leaking:** Check all hose connections for tightness. Ensure the drain hose is properly secured in the sink.
- **Error codes:** Refer to the BLITZHOME app for specific error code explanations and solutions.

For persistent issues, contact BLITZHOME customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	BLITZHOME
Model Number	850073031247
Installation Type	Countertop
Product Dimensions (D x W x H)	14.2"D x 21.6"W x 19.5"H
Capacity	5.2 Liters (Water Tank)
Special Features	2 Water Supply Modes, 24Hrs Delay Start, 9 Programs, PTC Hot Air Drying, 72H Air Refresh Storage, Smart App Control & Touch Control
Color	White
Controls Type	Smart App Control and Touch Control
Material	Glass, Plastic
Noise Level	56 Decibels
Voltage	120 Volts
Water Consumption	1.37 Gallons per Minute (approx. 5.2L per cycle)
Item Weight	43 Pounds

9. WARRANTY & SUPPORT

Your BLITZHOME Countertop Portable Dishwasher comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. For warranty claims, technical support, or any questions regarding your product, please refer to the contact information

provided in your purchase documentation or visit the official BLITZHOME website.

© 2026 BLITZHOME. All rights reserved.