

SYNOSHI PRO Electric Spin Scrubber

Synoshi PRO Electric Spin Scrubber User Manual

INTRODUCTION

Thank you for choosing the Synoshi PRO Electric Spin Scrubber. This manual provides essential information for the safe and effective operation, maintenance, and care of your device. Please read these instructions thoroughly before first use and retain them for future reference.

SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety guidelines:

- Read all instructions before using the appliance.
- Keep the device away from children. This is not a toy.
- Do not immerse the main body of the scrubber in water beyond its IPX5 rating. The device is water-resistant, not fully submersible.
- Use only the provided or recommended charging cable.
- Do not operate the device if it is damaged or malfunctioning.
- Avoid applying excessive pressure, which may damage surfaces or the device.
- Ensure brush heads are securely attached before operation.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Synoshi PRO Electric Spin Scrubber Unit
- 2 x Round Brush Heads (one red, one white)
- 1 x USB-C Charging Cable (not explicitly listed but implied by charging method)

PRODUCT OVERVIEW

The Synoshi PRO Electric Spin Scrubber is designed for efficient cleaning of various surfaces. It features a powerful motor, adjustable angle, and interchangeable brush heads.



Figure 1: Synoshi PRO Electric Spin Scrubber with a red brush head attached, and a white brush head shown separately. This image illustrates the main unit and the two types of round brush heads included.

SETUP

Charging the Device

1. Locate the USB-C charging port on the Synoshi PRO unit.
2. Connect the provided USB-C charging cable to the device and a suitable USB power adapter (not included).
3. The device will fully charge in approximately 3.5 hours. A full charge provides up to 3 hours of continuous use.

Attaching Brush Heads

1. Align the desired round brush head with the attachment point on the scrubber unit.
2. Gently push and twist the brush head until it clicks securely into place.
3. To remove, twist the brush head in the opposite direction and pull it off.

Two Universal Brushes

For Everyday Cleaning Tasks



Figure 2: Two universal brush heads, one red and one white, designed for various cleaning tasks including floors, tiles, car rims, and kitchen surfaces.

OPERATING INSTRUCTIONS

Power On/Off

Press the power button located on the handle to turn the device on or off.

Speed Settings

The Synoshi PRO offers two cleaning speeds:

- **Energy-saving mode:** Suitable for gentle cleaning or light buildup on delicate surfaces.
- **High-performance mode:** Provides 235 RPM for deep grime and tougher stains.

Press the speed selection button (often integrated with the power button or a separate button) to toggle between the two speeds.

A NEW KIND OF SCRUBBER

| | | | |
|----------------|---|--|---------------|
| | <ul style="list-style-type: none"> ✓ ADJUSTABLE ANGLE THREE ANGLES OF 0° 36° 72° ✓ TWO SPEEDS UP TO 14100 RPH ✓ LONGLIFE BATTERY UP TO 3 HOURS ✓ FAST CHARGING (USB TYPE C) | <ul style="list-style-type: none"> ✗ ✗ ✗ ✗ | |
| SYNOSHI | | | OTHERS |

Figure 3: Illustration of the Synoshi PRO's two-speed motor, detailing low speed for delicate cleaning and high speed for deep cleaning tasks.

Adjusting Angle

The scrubber features 3 lockable angles (0°, 36°, 72°) to reach various areas effectively. To adjust the angle, press the angle adjustment button (if present) or manually pivot the head until it locks into the desired position.

Premium Quality Brushes

1x **1x**

Two Universal Brushes Included **SYNOSHI**

Figure 4: The Synoshi PRO Electric Spin Scrubber shown with its head adjusted to an angle, demonstrating its flexibility for reaching difficult areas like behind toilets or under sinks.

MAINTENANCE AND CARE

Cleaning the Scrubber Unit

The Synoshi PRO is IPX5 water-resistant, meaning it can withstand splashes and light jets of water. After each use, wipe down the main unit with a damp cloth. Do not submerge the entire unit in water.



Figure 5: The Synoshi PRO Electric Spin Scrubber with water splashing around it, illustrating its IPX5 waterproof design for confident cleaning in wet environments.

Cleaning Brush Heads

The brush heads feature durable and odor-resistant bristles. After each use, rinse the brush heads under running water to remove any debris or cleaning solution. Allow them to air dry completely before storing. Replace brush heads when bristles show signs of wear or reduced effectiveness.

TROUBLESHOOTING

If you encounter issues with your Synoshi PRO Electric Spin Scrubber, refer to the following common

problems and solutions:

- **Device not turning on:** Ensure the device is fully charged. If not, connect it to the charger for 3.5 hours.
- **Reduced scrubbing power:** Check if the brush head is securely attached. Ensure the battery is adequately charged.
- **Brush head not spinning:** Verify the brush head is correctly installed. Check for any obstructions around the brush head.
- **Device not charging:** Ensure the USB-C cable is properly connected to both the device and the power source. Try a different USB-C cable or power adapter.

If the problem persists, please contact customer support.

SPECIFICATIONS

| Feature | Detail |
|------------------------|---------------------------------------|
| Brand | SYNOSHI |
| Model | PRO Electric Spin Scrubber |
| Color | Silver |
| Handle Material | Plastic |
| Material | Nylon, Plastic |
| Included Components | Attachment (Brush Heads) |
| Water Resistance | IPX5 |
| Battery Capacity | 2000mAh |
| Charging Time | 3.5 hours (via USB-C) |
| Operating Time | Up to 3 hours |
| Rotation Speed | Up to 235 RPM (High-performance mode) |
| Adjustable Angles | 0°, 36°, 72° |
| Item Firmness | Soft |
| Surface Recommendation | Floor, Grout, Metal, Porcelain, Tile |

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your proof of purchase for warranty claims.