



Manuals.plus /

› LABIGO /

› LABIGO KS-7915 Portable Carpet & Upholstery Cleaner User Manual

LABIGO KS-7915

LABIGO KS-7915 Portable Carpet & Upholstery Cleaner User Manual

Model: KS-7915

1. INTRODUCTION

Thank you for choosing the LABIGO KS-7915 Portable Carpet & Upholstery Cleaner. This device is designed for efficient deep cleaning and stain removal from various fabric surfaces, including carpets, rugs, upholstery, car seats, and more. Its powerful suction and dual-tank system make it ideal for tackling tough stains and pet accidents. Please read this manual thoroughly before operation to ensure safe and effective use.

2. SAFETY INSTRUCTIONS

- Always unplug the appliance from the power outlet before cleaning or performing maintenance.
- Do not immerse the appliance in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only cleaning solutions recommended for carpet and upholstery cleaners.
- Do not use the appliance on wet surfaces unless specifically designed for wet pickup.
- Do not pick up flammable or combustible materials, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Ensure both clean and dirty water tanks are properly installed and sealed before operation to prevent leaks and maintain suction.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- LABIGO KS-7915 Main Unit

- Flexible Hose with Handheld Tool
- Brush Head for Stubborn Stains
- Suction Nozzle for Tight Spaces (Crevice Tool)
- Power Cord
- Hose Holder
- Power Cord Holders (Upper and Lower)
- User Manual

4. PRODUCT OVERVIEW

The LABIGO KS-7915 features a compact design with integrated storage for its accessories. Key components include:

- **Clean Water Tank (1800ml):** Holds fresh water and cleaning solution.
- **Dirty Water Tank (650ml):** Collects extracted dirty water.
- **Power Button:** Activates/deactivates the unit.
- **Hose:** Connects the handheld tool to the main unit.
- **Handheld Tool:** Features a spray trigger and interchangeable heads.
- **Brush Head:** For scrubbing and extracting stains.
- **Suction Nozzle:** For reaching tight spaces and picking up debris.



Figure 1: Main unit of the LABIGO KS-7915 Portable Carpet & Upholstery Cleaner with its primary attachments, including the brush head and crevice tool.

Cleans Every Corner



Couch Crevices



Seat Crevices



Pet Food Spills



Stair Corners

Figure 2: The versatility of the crevice tool for cleaning various hard-to-reach areas like couch crevices, car seat gaps, pet food spills, and stair corners.



Figure 3: Demonstrates the compact and portable design of the cleaner, showing it being stored under a sink and easily carried up stairs.

Removable Large Capacity Water Tank

Note: Do not exceed the max line



Figure 4: Close-up of the dual water tanks, highlighting the 1800ml clean water tank and the 650ml dirty water tank, with MAX fill lines visible.

5. SETUP

5.1 Attaching Accessories

1. Connect the desired cleaning head (brush head or suction nozzle) to the end of the flexible hose until it clicks securely into place.
2. Attach the hose to the main unit's suction port.
3. Install the power cord holders and hose holder onto the designated slots on the main unit for organized storage.

5.2 Filling the Clean Water Tank

1. Remove the clean water tank from the main unit.
2. Open the water spout and fill the tank with clean water. If using a cleaning solution, add it according to the manufacturer's instructions (e.g., 4 oz of formula per 1 gallon of water).
3. **Important:** Do not exceed the 'MAX' fill line on the clean water tank.
4. Securely close the water spout and re-install the clean water tank onto the main unit, ensuring it is

properly seated.



Figure 5: Illustrates the process of adding concentrated cleaning solution to the clean water tank before use.

5.3 Dirty Water Tank Installation

Ensure the dirty water tank is correctly installed for optimal suction. Improper installation can lead to weak suction or no suction at all.

Video 1: This video provides detailed instructions on how to properly install the dirty water tank and offers tips to maintain strong suction during operation. It highlights common mistakes that can lead to reduced performance.

6. OPERATING INSTRUCTIONS

1. Plug the power cord into a suitable electrical outlet.
2. Press the power button on the main unit to turn on the cleaner.
3. Position the cleaning head over the area to be cleaned. Press the spray trigger on the handheld tool to dispense cleaning solution onto the stain.
4. Gently scrub the stained area with the brush head, moving it back and forth.
5. Release the spray trigger and tilt the brush head between 15-45 degrees to maximize suction and extract the dirty water. Move the brush head slowly over the wet area to pick up as much liquid as

possible.

6. Repeat steps 3-5 as necessary until the stain is removed and the area is as dry as possible.



Figure 6: Shows the cleaner in action, effectively removing a tough stain from a carpet with its 18Kpa powerful suction.

Video 2: This video demonstrates the step-by-step operation of the LABIGO Portable Carpet Cleaner, from preparing the unit to effectively cleaning various surfaces.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your LABIGO cleaner.

7.1 Emptying and Cleaning the Dirty Water Tank

1. After each use, remove the dirty water tank from the main unit.
2. Carefully open the tank and pour out the dirty water.
3. Rinse the dirty water tank thoroughly with clean water.
4. Allow the tank to air dry completely before re-installing it.

7.2 Cleaning the Handheld Tool and Hose

1. Detach the cleaning head from the hose.

2. Rinse the cleaning head under running water to remove any debris or residue.
3. Utilize the self-cleaning function: Place the cleaning head in a bucket or measuring cup filled with clean water. Turn on the machine and press the spray trigger to flush clean water through the hose and head, removing any internal buildup and preventing odors.
4. Allow all parts to air dry before reassembling or storing.

Video 3: This video demonstrates the self-cleaning function of the hose and brush head, showing how to effectively rinse the internal components to maintain hygiene and performance.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No suction or weak suction	Dirty water tank not properly seated; Dirty water tank full; Clean water tank empty; Hose or nozzle clogged.	Ensure dirty water tank is securely installed; Empty dirty water tank; Refill clean water tank; Check and clear any clogs in the hose or nozzle.
No spray	Clean water tank empty; Spray trigger not pressed; Nozzle clogged.	Refill clean water tank; Ensure spray trigger is fully pressed; Check and clear any clogs in the nozzle.
Machine not turning on	Power cord not plugged in; Power outlet not working.	Ensure power cord is securely plugged into a working outlet; Test the outlet with another appliance.

If you encounter issues not listed here, please refer to the online videos or contact LABIGO customer support for assistance.

9. SPECIFICATIONS

- **Model:** KS-7915
- **Suction Power:** 18Kpa
- **Clean Water Tank Capacity:** 1800ml
- **Dirty Water Tank Capacity:** 650ml
- **Hose Length:** 3.28 FT
- **Power Cord Length:** 9.84 FT
- **Item Weight:** 7.74 pounds
- **Package Dimensions:** 16.81 x 12.95 x 7.83 inches
- **Power:** 480W
- **Voltage:** 120V 60Hz

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or visit the official LABIGO website. You may also contact LABIGO customer service directly for assistance with your product.

Visit the LABIGO Store for more products and support.

