

[Manuals.plus](#) /

> [Rowenta](#) /

> Rowenta X-Clean 2 Cordless Floor Cleaner Instruction Manual

Rowenta GZ2262

Rowenta X-Clean 2 Cordless Floor Cleaner Instruction Manual

Model: GZ2262

1. PRODUCT OVERVIEW

The Rowenta X-Clean 2 is a versatile cordless floor cleaner designed for efficient 2-in-1 cleaning, combining vacuuming and washing functions. It features a self-propelling roller and an intuitive LED display for ease of use.





Figure 1: Front view of the Rowenta X-Clean 2 cordless floor cleaner, showcasing its sleek design and integrated tanks.

1.1 What's Included

Verify that all components are present in the packaging:

- Rowenta X-Clean 2 Cordless Floor Cleaner
- Charging Base with Self-Cleaning Cycle
- Additional Roller
- Cleaning Brush
- Filter
- Waste Separator



Figure 2: All components included with the Rowenta X-Clean 2, including the main unit, charging base, extra roller, and cleaning tools.

2. SETUP

2.1 Assembly

1. Carefully remove all components from the packaging.
2. Attach the handle to the main body of the cleaner until it clicks securely into place.
3. Place the charging base on a flat, stable surface near a power outlet.

2.2 Initial Charging

Before first use, fully charge the appliance. Place the cleaner on its charging base. The LED panel will indicate the charging status. A full charge provides up to 35 minutes of autonomy in ECO mode.

2.3 Filling the Clean Water Tank

1. Locate the clean water tank on the appliance.
2. Open the tank cap and fill with clean tap water. You may add a small amount of non-foaming floor cleaning solution if desired. Do not exceed the maximum fill line.
3. Securely close the tank cap.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off and Mode Selection

Press the power button on the handle to turn the appliance on. Use the mode selection button to switch between ECO and MAX cleaning modes. The LED panel will display the selected mode.



Figure 3: The intuitive LED control panel displays battery status, tank levels, and cleaning mode.

3.2 2-in-1 Cleaning Function

The X-Clean 2 simultaneously vacuums solid debris and washes floors with clean water. This ensures efficient cleaning in a single pass.



Figure 4: The appliance effectively cleans both liquid spills and solid particles in one pass.

3.3 Edge Cleaning

The design of the cleaning head allows for effective cleaning along walls and furniture edges, ensuring thorough coverage of your floor area.



Figure 5: The cleaner's head is designed to reach and clean along edges and corners.

3.4 Battery Life

The appliance offers up to 35 minutes of continuous cleaning in ECO mode on a single charge, suitable for cleaning an entire home.

AUTONOMIA A LUNGA DURATA

FINO A 35 MIN*

*in modalità ECO



Figure 6: The extended battery life allows for cleaning larger areas without interruption.

4. MAINTENANCE

4.1 Self-Cleaning Function

After each use, activate the 90-second self-cleaning cycle to maintain hygiene. Place the cleaner on its charging base and press the self-clean button.

MANUTENZIONE SEMPLICE
AUTOPULIZIA IN 90 SECONDI
CON UN SOLO CLICK



Figure 7: The self-cleaning cycle ensures the roller and internal components remain clean and hygienic.

4.2 Emptying the Dirty Water Tank

The appliance will alert you when the dirty water tank needs emptying. Remove the tank, open it, and dispose of the dirty water and separated solid waste. Rinse the tank thoroughly with clean water.

4.3 Cleaning the Roller and Filter

Regularly inspect and clean the roller and filter. The roller can be removed for deeper cleaning or replacement. Use the provided cleaning brush to remove any hair or debris from the roller and filter.

4.4 Accessory Cleaning

The included cleaning brush and waste separator should be cleaned after each use to ensure optimal performance.

5. TROUBLESHOOTING

If you encounter issues with your Rowenta X-Clean 2, please refer to the following common solutions:

- **Appliance not turning on:** Ensure the battery is fully charged. Check that the handle is securely attached.
- **Poor cleaning performance:** Verify that the clean water tank is filled and the dirty water tank is not full. Clean the roller and filter for any blockages.
- **Streaks on floor:** Ensure you are using a non-foaming cleaning solution and not using excessive amounts. The appliance is designed for hard, smooth floors; avoid use on anti-slip surfaces.
- **Appliance stops during operation:** The battery may be low. Recharge the appliance. Check for any blockages in the suction path.
- **Self-cleaning cycle is noisy or long:** This is normal operation for the self-cleaning cycle. Ensure you follow voice prompts to empty/fill tanks as required.
- **Does not remove deep, dry stains:** This appliance is designed for daily cleaning and fresh spills. For deep, set-in stains, pre-treatment or alternative cleaning methods may be required.

If problems persist, please contact customer support.

6. SPECIFICATIONS

Feature	Specification
Brand	Rowenta
Model	GZ2262E0
Dimensions (L x W x H)	28 x 21 x 115 cm
Weight	5 kg
Wattage	120 watts
Voltage	100
Noise Level	80 Decibel
Runtime (ECO mode)	Up to 35 minutes
Material	Refer to the product construction sheet
Recommended Surfaces	All types of hard floor
Form Factor	Vertical



115 cm



Figure 8: Dimensions of the Rowenta X-Clean 2, indicating height, width, and depth.

7. WARRANTY AND SUPPORT

7.1 Reparability Commitment

Rowenta is committed to product reparability for 15 years. Spare parts are available through our network of 6200 international repair centers, ensuring quick and lasting repairs. This commitment supports environmental protection and waste reduction.

7.2 Customer Support

For further assistance, technical support, or to locate a repair center, please visit the official Rowenta website or contact your local customer service representative. Refer to the product packaging or the Rowenta website for specific contact details.

