



Manuals.plus /

› Zunate /

› Zunate E-Book Reader Model Zunate2sxmp3a7wf User Manual

Zunate Zunate2sxmp3a7wf

Zunate E-Book Reader User Manual

Model: Zunate2sxmp3a7wf

INTRODUCTION

This manual provides detailed instructions for the Zunate E-Book Reader, model Zunate2sxmp3a7wf. It covers setup, operation, maintenance, and troubleshooting to ensure optimal use of your device. The Zunate E-Book Reader features a 5.7-inch HD screen, runs on Android 8.1, and supports various multimedia formats.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Use only the provided or recommended charging accessories.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

SETUP

1. Unboxing and Included Components

Carefully unpack your Zunate E-Book Reader. Verify that all components are present:

- Zunate E-Book Reader device
- Protective cover
- Screen protector
- Stylus pen
- USB Type-C charging cable
- 3.5mm headphones



Image: All components included with the Zunate E-Book Reader.

2. Charging the Device

Before first use, fully charge the E-Book Reader. Connect the USB Type-C cable to the device's charging port and the other end to a 2A USB charger. The charging indicator will show the charging status.

3. Powering On/Off

- **To Power On:** Press and hold the Power Key (located on the side) until the screen lights up.
- **To Power Off:** Press and hold the Power Key, then select 'Power Off' from the options on the screen.
- **To Restart:** Press and hold the Power Key, then select 'Restart' from the options.

4. Initial Configuration

Upon first power-on, follow the on-screen prompts to set up your device:

1. Select your preferred language.
2. Connect to a Wi-Fi network for internet access.
3. Set the date and time.
4. Sign in with your Google account (optional, but recommended for app access).

OPERATING INSTRUCTIONS

1. Navigation

The Zunate E-Book Reader uses a 5.7-inch Incell touchscreen for navigation. You can also use the three physical buttons (Volume+/-, Power Key) for specific functions.

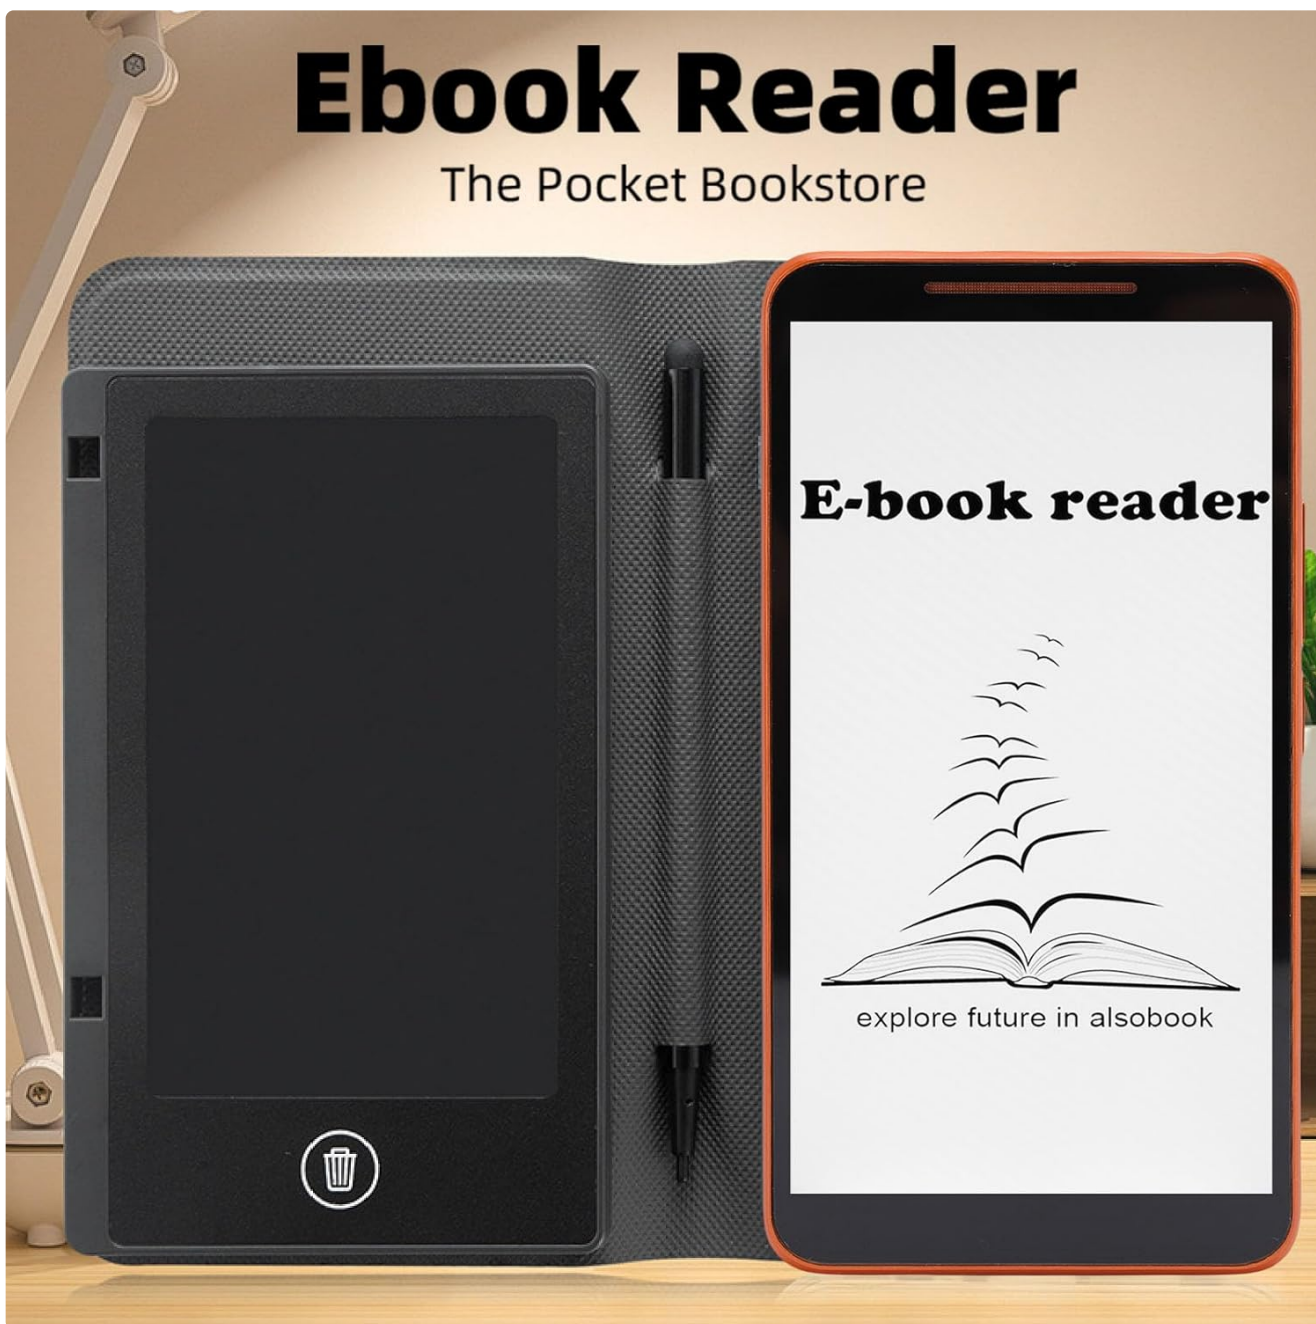


Image: Zunate E-Book Reader with its protective cover.

2. Reading E-books

The device supports multiple document formats. It automatically scans specified folders for efficient document management.

- **Night Mode:** Activate night mode for comfortable reading in low-light conditions.
- **Bookmarking:** Use the bookmark feature to save your reading progress.
- **Font Size Adjustment:** Customize the font size to your preference for optimal readability.



Image: Reading an e-book on the device.

3. Multimedia Playback

The E-Book Reader supports various audio and video formats. You can play media through the built-in speaker or by connecting 3.5mm headphones.

- **Audio Formats:** MP3, MP2, AMR, AWB, APE, M4A, MIDI, OGG, WAV, FLAC, 3GP (AAC, WMA with license).
- **Video Formats:** MPEG4 SP, H.264/AVC.

4. Camera Functionality

The device includes an 8MP camera. Access the camera application to capture photos or engage in video calls.



Image: Rear camera module of the device.

5. Connecting to Wi-Fi and Bluetooth

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi to connect to available networks (IEEE 802.11 b, g, n).
- **Bluetooth:** Go to Settings > Connected devices > Bluetooth to pair with Bluetooth 4.0LE compatible devices.

6. Installing Third-Party Applications

Running on Android 8.1, the device supports the installation of third-party applications. Ensure that applications are downloaded from trusted sources to maintain device security and performance.

MAINTENANCE

1. Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and body of the device.
- Do not use abrasive cleaners, alcohol, or solvents, as these can damage the surface.

2. Battery Care

- Avoid fully discharging the battery frequently.
- Do not leave the device charging for extended periods after it is fully charged.
- Store the device in a cool, dry place if not used for a long time, with the battery partially charged (around 50%).

3. Software Updates

Periodically check for software updates to ensure your device has the latest features and security enhancements. Go to Settings > System > System update.

TROUBLESHOOTING

Device Not Turning On

- Ensure the battery is charged. Connect the device to a charger for at least 30 minutes.
- Press and hold the Power Key for 10-15 seconds to force a restart.

Screen Unresponsive

- Restart the device.
- Ensure the screen is clean and free of debris.

Wi-Fi Connection Issues

- Ensure Wi-Fi is enabled in Settings.
- Restart your Wi-Fi router.
- Forget the network and reconnect, entering the password again.

Applications Crashing

- Clear the cache and data for the problematic app in Settings > Apps & notifications > [App Name] > Storage.
- Uninstall and reinstall the app.
- Ensure the device software is up to date.

SPECIFICATIONS

Feature	Specification
Model Name	Zunate2sxmlp3a7wf
Screen Size	5.7 Inch, 720x1440 Incell
Operating System	Android 8.1
Processor	MT6737 Quad Core 1.3GHz, ARM Cortex A53, GPU650MHZ
Memory (RAM)	1GB
Storage (ROM)	8GB
Camera	8MP
Buttons	3 Physical Buttons (Volume+/-, Power Key)
Battery Type	Li Battery
Battery Capacity	2700mAh
Charger Specification	2A USB Charger (Type C interface)
Headphone Jack	3.5mm
Data Link	WiFi (IEEE 802.11 b, g, n), Bluetooth 4.0LE
FM Radio	Support 87.5 to 108MHZ
OTG Support	Yes
Speaker	2030 Single Magnetic Chamber Speaker
Microphone	Supported
Image Formats	JPG, JPEG, BMP, GIF, PNG
Audio Formats	MP3, MP2, AMR, AWB, APE, M4A, MIDI, OGG, WAV, FLAC, 3GP (AAC, WMA with license)
Video Formats	MPEG4 SP, H.264/AVC
Language	Multiple Language Supported
Input Method	Standard Android Keyboard (Supports Third Party Handwriting Input Or External Keyboard)
Item Weight	14.8 ounces
Package Dimensions	8.27 x 5.51 x 1.57 inches

WARRANTY INFORMATION

Your Zunate E-Book Reader is covered by a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Zunate customer support through the retailer where the product was purchased or visit the official Zunate website for contact information.