

[Manuals.plus](#) /

› [instax](#) /

› instax mini LiPlay+ Hybrid Instant Camera User Manual

## instax LiPlay

# instax mini LiPlay+ Hybrid Instant Camera User Manual

Model: LiPlay

## 1. INTRODUCTION

---

The instax mini LiPlay+ is a versatile hybrid instant camera that combines the functionality of a digital camera with an instant printer. It allows you to capture, review, edit, and print photos directly from the device or from your smartphone. Unique features include sound recording with photos, dual cameras (main and wide-angle selfie), and remote shooting capabilities via a dedicated app.



Figure 1: instax mini LiPlay+ Hybrid Instant Camera (Midnight Blue)

## Key Features:

- Hybrid functionality: Capture digital images and print instantly.
- 2.7-inch LCD display for viewing and editing photos.
- Internal image memory and Micro SD card slot for expanded storage.
- Dual cameras: Main camera and wide-angle selfie camera.
- Bluetooth connectivity for smartphone pairing and printing.
- Record Sound feature to embed audio with your photos.
- Self-timer function (2 to 10 seconds).
- USB Type-C charging.

## 2. SETUP

---

### 2.1 Unpacking the Camera

Carefully remove all components from the packaging. The box contents typically include:

- instax mini LiPlay+ Camera Body
- USB Type-C Charging Cable
- Hand Strap
- User Manual (this document)

## 2.2 Charging the Battery

Before first use, fully charge the camera battery. Connect the supplied USB Type-C cable to the camera's charging port and to a USB power adapter (not supplied) or a computer's USB port. The charging indicator light will show the charging status.

## 2.3 Inserting instax mini Film

1. Open the film compartment cover on the back of the camera.
2. Align the yellow mark on the film pack with the yellow mark on the camera.
3. Insert the film pack straight into the compartment. Do not press down on the film pack.
4. Close the film compartment cover. The camera will automatically eject the black film cover sheet.

**Important:** Only use instax mini film. Do not open the film compartment until all 10 films have been used, as this will expose and ruin the remaining film.

## 2.4 Inserting a Micro SD Card (Optional)

To expand storage for more photos, insert a Micro SD card (sold separately) into the Micro SD card slot located on the side of the camera. Ensure the card is inserted correctly until it clicks into place.

## 2.5 Downloading the instax mini LiPlay+ App

Download the free instax mini LiPlay+ app from your smartphone's app store (iOS App Store or Google Play Store). This app enables additional features like remote shooting, direct printing from your phone, and applying filters/frames.

## 2.6 Pairing with a Smartphone via Bluetooth

1. Turn on the camera.
2. Enable Bluetooth on your smartphone.
3. Open the instax mini LiPlay+ app and follow the on-screen instructions to pair your camera.

# 3. OPERATING THE CAMERA

---

## 3.1 Taking Photos

The camera features a main lens and a wide-angle selfie lens. Use the shutter button to capture images.

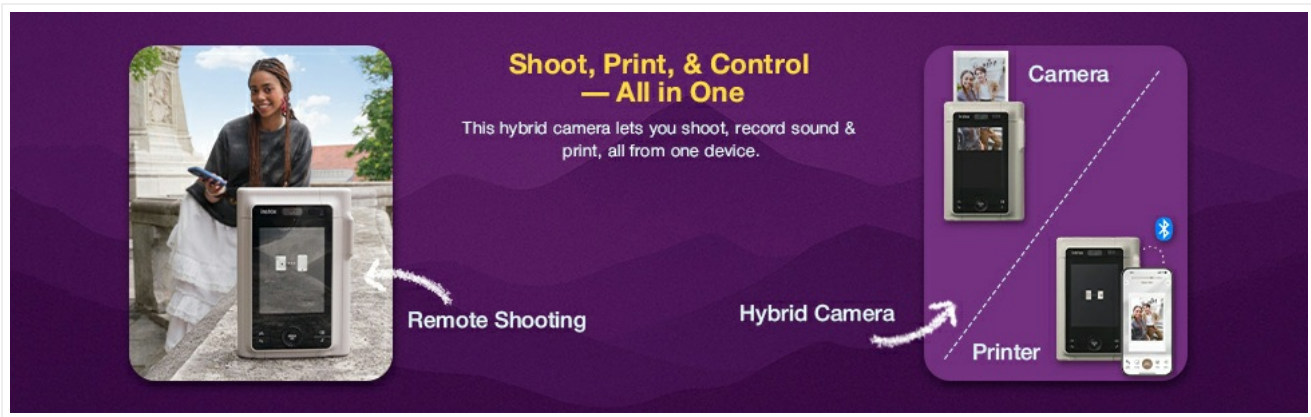


Figure 2: Selfie Camera and Layered Photo Mode

## 3.2 Using the LCD Display

The 2.7-inch LCD display on the back allows you to:

- Preview your shots before printing.
- Navigate menus and settings.
- Apply basic filters and frames (more available via app).
- Review captured images.

## 3.3 Printing Photos

You can print photos directly from the camera's internal memory or Micro SD card, or from your paired smartphone.

### 3.3.1 Printing from the Camera

1. Select the desired image on the LCD screen.
2. Press the print button. The camera will print the image in approximately 12 seconds.



Figure 3: Camera printing an instant photo

### 3.3.2 Printing from a Smartphone

1. Ensure your camera is paired with your smartphone via Bluetooth.
2. Open the instax mini LiPlay+ app on your smartphone.
3. Select an image from your phone's gallery within the app.
4. Tap the print icon. The image will be sent to the camera for printing.



Figure 4: Printing photos from a smartphone

### 3.4 Record Sound Feature

The LiPlay+ allows you to record up to 10 seconds of audio with your photos. This audio is embedded as a QR code on the printed instax photo, which can be scanned with a smartphone to play the sound.

1. After taking a photo, select the sound recording option on the camera's display.
2. Record your audio.
3. When printing, ensure the sound feature is enabled to include the QR code.

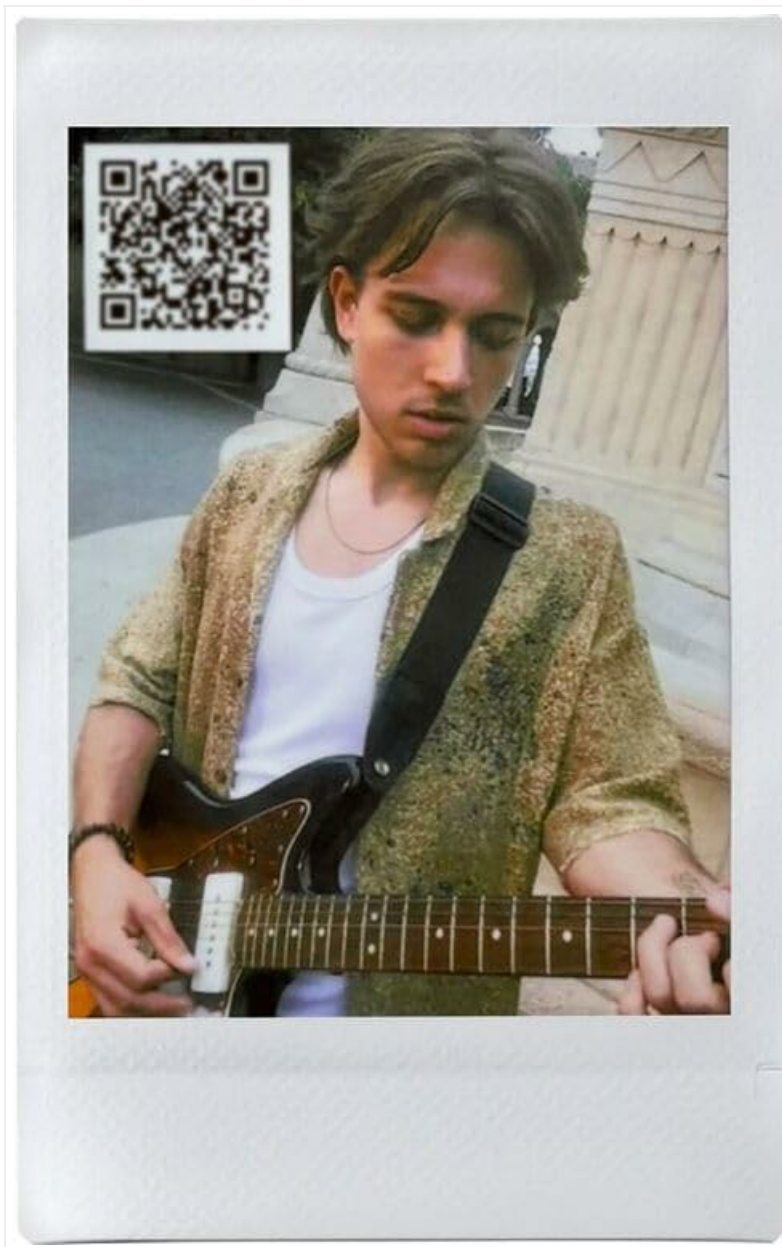


Figure 5: Printed photo with QR code for sound playback

For a sample of the sound feature, visit: [instax.com/mini\\_liplay\\_plus/sample/sound\\_01.html](https://instax.com/mini_liplay_plus/sample/sound_01.html)

### 3.5 Remote Shooting

Use the instax mini LiPlay+ app to remotely control your camera's shutter, allowing for group photos or shots from a distance.

1. Ensure the camera is paired with your smartphone.
2. Open the app and select the remote shooting function.
3. Position the camera and use your phone as a remote shutter button.



Figure 6: Remote shooting and hybrid functionality overview

## 4. MAINTENANCE

### 4.1 Cleaning the Camera

To clean the camera body, use a soft, dry cloth. For the lens and LCD screen, use a lens cleaning cloth specifically designed for optical surfaces. Avoid using abrasive cleaners or solvents.

### 4.2 Storing the Camera and Film

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Unused instax mini film should be stored in its original packaging in a refrigerator (do not freeze) and allowed to reach room temperature before use.

### 4.3 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use for extended periods (e.g., once every 3-6 months).

## 5. TROUBLESHOOTING

| Problem                       | Possible Cause                                       | Solution                                                                       |
|-------------------------------|------------------------------------------------------|--------------------------------------------------------------------------------|
| Camera does not turn on.      | Battery is discharged.                               | Charge the battery using the supplied USB Type-C cable.                        |
| Photos are not printing.      | No film inserted or film pack is empty.              | Insert a new instax mini film pack.                                            |
| Poor print quality.           | Film expired or improperly stored.<br>Lens is dirty. | Check film expiration date. Clean the lens with a soft cloth.                  |
| Cannot connect to smartphone. | Bluetooth is off on camera or phone. App not open.   | Ensure Bluetooth is enabled on both devices. Open the instax mini LiPlay+ app. |
| Sound QR code not appearing.  | Sound recording not enabled before printing.         | Ensure sound recording is activated and saved with the photo before printing.  |

## 6. SPECIFICATIONS

| Feature                     | Detail                           |
|-----------------------------|----------------------------------|
| Brand                       | instax                           |
| Model Name                  | LiPlay                           |
| Film Format Type            | Instax Mini                      |
| Item Weight                 | 356 Grams                        |
| Item Dimensions (L x W x H) | 38 x 83 x 123 Millimeters        |
| Special Feature             | Dual Cameras with Sound Features |
| Minimum Shutter Speed       | 1/4 Seconds                      |
| Maximum Shutter Speed       | 1/4 Seconds                      |
| Effective Still Resolution  | 318 Dots Per Inch                |
| Viewfinder Type             | LCD screen                       |
| Screen Size                 | 3 Inches                         |
| Connectivity                | Bluetooth                        |
| Charging Port               | USB Type-C                       |
| Country of Origin           | China                            |

## 7. WARRANTY INFORMATION

---

The instax mini LiPlay+ Hybrid Instant Camera typically comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty card included with your product or visit the official instax website for your region.

## 8. SUPPORT

---

For further assistance, technical support, or service inquiries, please contact the manufacturer:

- **Manufacturer:** Fujifilm India Private Limited
- **Importer:** Fujifilm India Pvt Ltd
- **Contact Information:** Refer to the official Fujifilm or instax website for your region for the most up-to-date contact details, service centers, and FAQs.