

[Manuals.plus](#) /

› [Electactic](#) /

› Electactic 3.2 Cu.ft Mini Upright Freezer Instruction Manual

Electactic EL-88B-S

Electactic 3.2 Cu.ft Mini Upright Freezer Instruction Manual

Model: EL-88B-S

1. INTRODUCTION

Thank you for choosing the Electactic 3.2 Cu.ft Mini Upright Freezer. This instruction manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before use and retain it for future reference.

This compact upright freezer is designed for convenience and efficiency, featuring an adjustable thermostat, removable shelves, and a reversible door to suit various living spaces such as homes, dorms, kitchens, and offices. It utilizes advanced R600a refrigerant and low-energy compressors for quiet and energy-saving operation.



Image: Electactic 3.2 Cu.ft Mini Upright Freezer in Black.

2. SAFETY INFORMATION

Your safety and the safety of others are very important. Please read and follow all safety instructions provided in this manual to minimize the risk of fire, electric shock, or injury.

- **Risk of Fire / Flammable Materials:** This appliance contains R600a refrigerant, which is flammable. Handle with care and ensure proper ventilation. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **Electrical Safety:** Ensure the power outlet is properly grounded. Do not use extension cords. Disconnect the appliance from the power supply before cleaning or performing maintenance.
- **Placement:** This appliance is designed for freestanding installation only. Do not obstruct

ventilation openings.

- **Children Safety:** Supervise children to ensure they do not play with the appliance.

3. PACKAGE CONTENTS

Verify that all items are present upon unpacking:

- Electactic 3.2 Cu.ft Mini Upright Freezer
- Removable Shelves (Quantity: 2)
- User Manual

4. SETUP AND INSTALLATION

4.1 Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Ensure no parts are missing or damaged. It is recommended to keep the packaging materials for future transport of the appliance.

4.2 Placement

Place the freezer on a flat, stable surface away from direct sunlight and heat sources. Allow adequate space around the appliance for proper ventilation (at least 4 inches on the sides and back). The freezer has adjustable leveling legs to ensure stability on uneven floors.

COMPACT SIZE

PRODUCT SIZE DETAILS



Image: Product dimensions for the Electactic Mini Upright Freezer. Dimensions are approximately 20.28"D x 20.87"W x 31.5"H.

Compact Design

Meet all your freezing needs at anywhere



Image: The compact design of the Electactic Mini Upright Freezer allows for versatile placement in various rooms.

4.3 Door Reversal

The freezer features a reversible door, allowing it to open from either the left or the right side to accommodate your space. Refer to the detailed instructions in the separate door reversal guide (if provided) or contact customer support for assistance.



Image: Close-up of the freezer's features, including the reversible door mechanism, groove handle, and quality PVC door seal.

4.4 Initial Power-On


After placement, wait at least 2-4 hours before plugging the freezer into a power outlet. This allows the refrigerant to settle. Once plugged in, the freezer will begin cooling. Allow it to run for several hours empty before loading with food.

5. OPERATING INSTRUCTIONS


5.1 Temperature Control

The freezer is equipped with a 7-level adjustable thermostat located at the back of the unit. Turn the rotary knob to select your desired temperature setting. Setting "1" is the warmest, and "7" is the coldest. The temperature range can be controlled from -7.6°F to 6.8°F (-22°C to -14°C).

Quick Cooling Performance

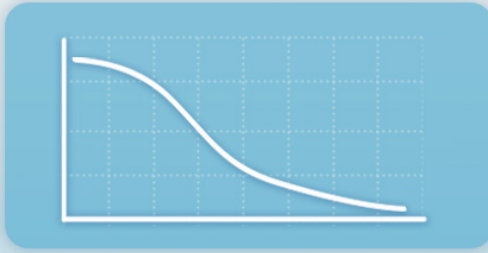

Temperature Knob

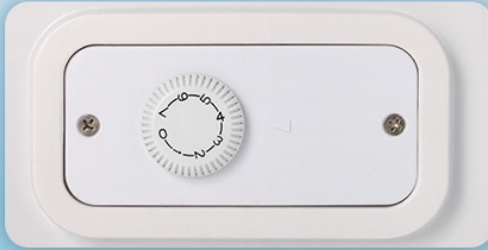

7-Grade Adjustable Thermostat

Keep foods and beverages at their optimum temperature from



Image: Illustration of the 7-grade adjustable thermostat and optimal temperature zones for different food items.

5.2 Storage Capacity

The 3.2 cubic feet capacity provides ample space for various frozen goods. The removable shelves allow for flexible storage configurations to accommodate larger items.



3.0 Cu.ft

Flexible Food Storage

Bottled Water Holds approx.

30 bottles =



Ice Cream Fits
300 boxes of ice cream
(95ml) =



Fresh Meat Holds approx.

88lb of meat =



Image: Interior view of the freezer filled with various frozen foods, showcasing its storage capabilities.

6. MAINTENANCE AND CLEANING

6.1 Defrosting

This freezer requires manual defrosting. When frost accumulates to a thickness of 0.2 inches (5 mm) or more, it should be defrosted. To defrost, unplug the appliance, remove all food items, and allow the frost to melt naturally. Use a soft cloth to wipe away melted water. Do not use sharp objects to remove ice.

6.2 Cleaning

Regularly clean the interior and exterior of the freezer with a mild detergent and warm water. Ensure the appliance is unplugged before cleaning. The removable shelves can be washed separately. The quality PVC door seal should also be cleaned to maintain its effectiveness.

Less than 40dB

Powerful Compressor and Intelligent Noise Reduction



40dB
bass



R600a
compressor



Image: The freezer's interior, showing removable shelves for easy cleaning.

7. TROUBLESHOOTING

If you experience issues with your freezer, please consult the following common troubleshooting tips before contacting customer service.

Problem	Possible Cause	Solution
Freezer does not operate.	No power supply; power cord unplugged.	Check power connection; ensure outlet is functional.
Temperature is not cold enough.	Thermostat setting is too warm; door opened too frequently; excessive food load.	Adjust thermostat to a colder setting; minimize door openings; ensure proper air circulation around items.
Excessive noise.	Appliance is not level; objects vibrating against the freezer.	Adjust leveling legs; ensure nothing is touching the freezer.

Problem	Possible Cause	Solution
Frost buildup.	Door not sealed properly; frequent door openings; high humidity.	Check door seal for damage; ensure door closes completely; defrost manually as needed.

If the problem persists after checking these points, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Electactic
Model Number	EL-88B-S
Capacity	3.2 Cubic Feet
Installation Type	Freestanding
Color	Black
Voltage	115 Volts
Door Hinges	Reversible
Door Material Type	Stainless Steel
Shelves	2 (Removable)
Item Weight	46.3 pounds
Product Dimensions (D x W x H)	20.28 x 20.87 x 31.5 inches
Refrigerant	R600a
Noise Level	Less than 40 decibels

Electactic | HIGH QUALITY MINI FREEZER

TECHNICAL DATA

Model #	D5888
Freezer Capacity	3.0 cu. ft.
Temperature Range	6.8°F - -7.6°F (-14°C--22°C)
Refrigerant	R600a
Shelves	3 layer
Defrosting Method	Manual
Exterior Dimension	20.5*(W)*20.3*(D)*31.7*(H)
Noise Level (dB)	<40 dB
Voltage/Hz	115V/60Hz
AMPS	15
Gross Weight	47LBS

Image: Technical specifications table for the Electactic Mini Upright Freezer.

9. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: Official product video showcasing the Electactic 3.2 Cu.ft Mini Upright Freezer in black, highlighting its features and design.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Electactic customer service. Keep your purchase receipt as proof of purchase for any warranty claims.

Customer Service: Please visit the Electactic Store on Amazon or refer to the contact details provided in your product packaging.