

Lefant M330 Pro

Lefant M330 Pro Robot Vacuum and Mop 3-in-1 User Manual

Model: M330 Pro

1. INTRODUCTION

The Lefant M330 Pro is an advanced 3-in-1 robot vacuum and mop designed to provide efficient and thorough cleaning for your home. Featuring dToF laser navigation, multi-level mapping, and powerful 5000Pa suction, it intelligently navigates and cleans various floor types. Its compact design allows it to reach under furniture, while smart features like custom cleaning plans, virtual no-go zones, and app/voice control offer a personalized cleaning experience. With up to 150 minutes of runtime, the M330 Pro ensures extensive coverage before automatically returning to its charging station.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- Lefant M330 Pro Robot Vacuum
- 3-in-1 Water Tank + Dustbin
- Charging Station
- Power Adapter
- Cleaning Brush
- Mop Pad Holder
- Side Brushes (x2)
- Washable Mop Pad
- User Manual
- Disposable Mop Cloths (x5)
- HEPA Filter



Image: The Lefant M330 Pro robot vacuum cleaner shown with its charging station, side brushes, mop pad, and other included accessories.

3. PRODUCT OVERVIEW

3.1 Key Features


- **dToF Laser Navigation:** Provides precise mapping and efficient cleaning paths, day or night. Supports multi-level mapping for homes with multiple floors.
- **3-in-1 Cleaning:** Sweeps, vacuums, and mops simultaneously.
- **Smart Carpet Recognition:** Automatically increases suction power on carpets for deeper cleaning and reduces power on hard floors to save energy and reduce noise.
- **Compact Design:** With a slim profile of 28 cm, it easily maneuvers under chairs, sofas, and beds.
- **Customized Cleaning:** Use the Lefant app to create personalized cleaning plans, define specific rooms or zones for cleaning, and set virtual no-go zones.
- **Extended Runtime:** Up to 150 minutes of cleaning on a single charge, suitable for large homes. Automatically returns to the charging station.

- **Smart Control:** Control via the Lefant app or voice commands with Alexa and Google Assistant.


3.2 Navigation and Obstacle Avoidance

Navigation dToF pour des cartes personnalisables

Cartographie laser de précision pour un nettoyage mains libres optimal

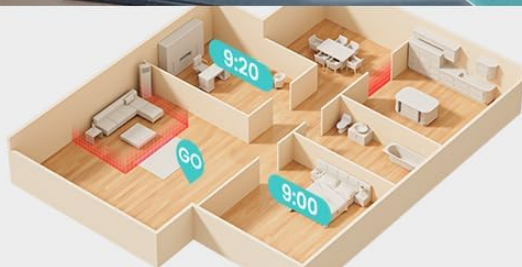

Routines personnalisées

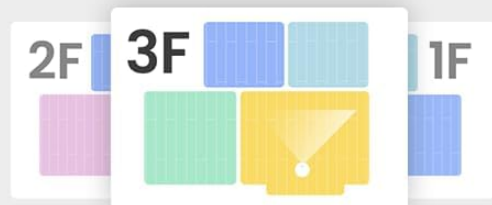

Cartographie multi-niveaux

Image: The robot vacuum actively mapping a room using its dToF laser navigation system, illustrating its ability to create personalized cleaning maps and multi-level maps.

The M330 Pro utilizes advanced dToF laser navigation for accurate mapping of your home, allowing for customized cleaning routines and multi-level mapping. Its precision obstacle avoidance system (PSD) helps prevent collisions with furniture and other objects, ensuring smooth navigation.

Détection et évitement d'obstacles de précision



Image: The robot vacuum detecting and avoiding various obstacles on the floor, highlighting its precision obstacle avoidance capabilities compared to other models.

3.3 Cleaning Mechanism

Puissance de nettoyage 3-en-1

Balayer, aspirer et passer la serpillière en une seule machine intelligente, de la poussière aux taches, nous avons tout ce qu'il faut



Réservoir
d'eau de
200ml

99%

Efficacité de
nettoyage de
99%

Image: An exploded view illustrating the internal components of the M330 Pro's 3-in-1 cleaning system, showing how it sweeps, vacuums, and mops.

The M330 Pro integrates sweeping, vacuuming, and mopping functions. It features a unique brush-less suction port to prevent hair tangles, making it ideal for pet owners. The intelligent carpet recognition system automatically adjusts suction power for optimal cleaning on different surfaces.

Adaptation intelligente des surfaces

Détection des tapis avec augmentation automatique de la puissance pour un nettoyage en profondeur



Image: The robot vacuum transitioning from a hard floor to a carpet, demonstrating its intelligent surface adaptation and automatic power increase for deep carpet cleaning.

4. SETUP

4.1 Initial Preparation

1. Remove all protective films and packaging materials from the robot and charging station.
2. Install the side brushes by pressing them onto the posts until they click into place.

3. Place the charging station against a wall in an open area, ensuring there are no obstacles within 1 meter (3 feet) to the sides and 2 meters (6 feet) in front.
4. Connect the power adapter to the charging station and plug it into a power outlet.
5. Place the robot on the charging station to fully charge before first use. The indicator light will show charging status.

4.2 Connecting to the Lefant App



Zones d'interdiction intelligentes

Définissez des zones interdites pour empêcher votre aspirateur robot d'entrer dans des zones non désirées, en protégeant les objets fragiles et les espaces réservés aux animaux domestiques.

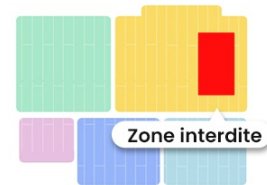


Image: A visual guide showing the step-by-step process of connecting the Lefant M330 Pro robot vacuum to the Lefant mobile application, including downloading the app, adding the device, and network configuration.

1. Download the Lefant app from your app market (App Store or Google Play).
2. Add your M330 Pro robot vacuum cleaner to the app.
3. Connect to a 2.4GHz/5GHz Wi-Fi network.
4. Position the blue button on the robot to "I" (On).
5. Press and hold the start button for 6 seconds.
6. Select the M330 Pro in the app and wait for successful pairing.

4.3 Connecting to Alexa



Cartographie à plusieurs niveaux

Nettoyage pièce par pièce de Schedule avec cartographie laser, garantissant un nettoyage efficace et approfondi

Image: A visual guide detailing the steps to link the Lefant M330 Pro with Amazon Alexa, including opening the Alexa app, enabling the Smart Life skill, and linking accounts for voice control.

1. Open the third-party 'Lefant APP' to access the service.

2. Register your voice account and password.
3. Open the 'Alexa APP' - Skills & Games.
4. Search for 'Smart Life'.
5. Click on 'Enable to Use'.
6. Select the region - Enter the voice account and password from step 2.
7. Wait for a successful connection.

5. OPERATING YOUR ROBOT VACUUM

5.1 Cleaning Modes

The M330 Pro offers various cleaning modes to suit your needs:

- **Auto Cleaning:** The robot intelligently navigates and cleans your entire home.
- **Spot Cleaning:** Directs the robot to clean a specific area with concentrated effort.
- **Edge Cleaning:** The robot cleans along walls and furniture edges.
- **Scheduled Cleaning:** Set specific times for the robot to clean automatically via the app.

5.2 Using the Lefant App

APP et commande vocale en un seul site

Activé par la voix, amélioré par l'application : Une liberté de nettoyage inédite



Cartographie à plusieurs niveaux



Routines personnalisées



Smart No-Go Zone



Do Not Disturb Mode



"Alexa, allume le M330 Pro et le nettoyage des strates"



Travailler avec
Amazon Alexa



Fonctionne avec
Google Assistant



Wi-Fi double bande (2,4GHz & 5GHz)

Image: A smartphone displaying the Lefant app interface, showing options for multi-level mapping, personalized routines, smart no-go zones, and do not disturb mode, along with integration with Alexa and Google Assistant.

The Lefant app provides comprehensive control over your M330 Pro:

- **Customized Room Cleaning:** Define different cleaning modes and frequencies for each room.
- **Targeted Zone Cleaning:** Select specific rooms or areas for deep cleaning.
- **Flexible Zone Editing:** Divide or merge rooms to create a cleaning plan tailored to your home layout.
- **Virtual No-Go Zones:** Set virtual boundaries to prevent the robot from entering specific areas.

Zones interdites personnalisées

Nettoyez exactement où vous voulez



Image: The robot vacuum cleaning a room while avoiding a designated 'no-go zone' marked in red, demonstrating the customized boundary feature.

5.3 Voice Control

Once connected to Alexa or Google Assistant, you can use voice commands to start, stop, or pause cleaning. For example, say "Alexa, start cleaning with Lefant M330 Pro."

6. MAINTENANCE

Regular maintenance ensures optimal performance of your Lefant M330 Pro.

6.1 Cleaning the 3-in-1 Dustbin and Water Tank

1. Press the release button to remove the 3-in-1 dustbin and water tank unit.
2. Open the dustbin cover and empty the debris into a trash can.
3. Rinse the dustbin and water tank with clean water. Ensure they are completely dry before re-installing.
4. For mopping, fill the water tank with clean water (and a small amount of neutral cleaning solution if desired, check product compatibility).

Voyez la différence, sans effort
Saleté visible, vidange moins fréquente



Image: A close-up of the robot vacuum's transparent dustbin, illustrating its 450ml capacity and visible debris, emphasizing less frequent emptying.

6.2 Cleaning the HEPA Filter

- 1. Remove the HEPA filter from the dustbin.
- 2. Tap the filter gently to remove loose dust. Do not wash the HEPA filter with water.
- 3. Use the included cleaning brush to remove any remaining debris.
- 4. Replace the HEPA filter every 3-6 months, depending on usage.

6.3 Cleaning Side Brushes

- 1. Pull the side brushes upwards to remove them.
- 2. Remove any hair or debris tangled around the brushes.
- 3. Re-install the side brushes, ensuring they click into place.

6.4 Cleaning Sensors and Charging Contacts

- 1. Wipe all sensors (cliff sensors, anti-collision sensors) and charging contacts on the robot and charging station with a clean, dry cloth.

7. TROUBLESHOOTING

If you encounter issues with your Lefant M330 Pro, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not turn on or respond.	Low battery; Power switch off; Robot stuck.	Charge the robot; Ensure power switch is ON; Clear any obstructions.
Robot cannot find charging station.	Charging station obstructed; Robot too far from station.	Ensure clear path to charging station; Place robot closer to station.
Poor cleaning performance.	Dustbin full; Filter clogged; Side brushes worn or tangled.	Empty dustbin; Clean/replace filter; Clean/replace side brushes.
Robot gets stuck frequently.	Too many obstacles; Loose cables/rugs.	Clear clutter from floor; Use virtual no-go zones for problem areas.
App connection issues.	Incorrect Wi-Fi password; Router too far; 5GHz network not supported (though M330 Pro supports both).	Verify Wi-Fi password; Move robot closer to router; Ensure 2.4GHz network is available. Re-pair if necessary.

8. SPECIFICATIONS

Feature	Specification
Brand	Lefant

Feature	Specification
Model Number	M330 Pro
Color	Black
Product Dimensions (L x W x H)	28 x 28 x 8 cm
Item Weight	2.15 kg
Dustbin Capacity	450 Milliliters
Water Tank Capacity	200 Milliliters
Voltage	19 Volts
Noise Level	52 Decibels
Battery Runtime	150 minutes
Product Compatibility	Smartphone (App Control)
Special Features	Anti-collision, Multi-floor Mapping, LiDAR Navigation, Obstacle Avoidance, Smart Carpet Recognition
Filter Type	HEPA
Connectivity	Wi-Fi (2.4GHz & 5GHz), Alexa, Google Assistant

9. WARRANTY AND SUPPORT

For warranty information, technical support, or spare parts inquiries, please contact Lefant customer service through the official website or the contact information provided in your product packaging.

Spare Parts Availability: Information unavailable.



© 2025 Lefant. All rights reserved.

Related Documents - M330 Pro

Congratulations on the purchase of your robot ROBOT! We hope things you satisfaction. We trust your purchase will keep your home clean and provide you a high-quality life.

Should you encounter situations that have not been properly addressed in this User Manual, please contact our Customer Service Center. We will do our best to solve your problem. For more information, please visit the [Lefant ROBOTICS Official Website](#) ([www.lefant.com](#)) and email to the following email address: support@lefant.com.

The Company reserves the right to make technological and/or design changes to this product for continuous improvement.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire or serious injury.

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

For household use only

When using on the floor appliances, basic precautions should always be followed, including the following:

1. The robot must be used in accordance with the directions in this User Manual. Our company cannot be held liable or responsible for any damages or injuries caused by improper use.
2. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
3. Do not allow children to sit on the vacuum.
4. Close the area to be cleaned. Remove power cords and small objects from the floor that could entangle the robot. Turn it off under the rug, box, and fit items such as curtains and table cloths off the floor.
5. If there is a trip-up in the cleaning area (due to a step or stairs), you should operate the robot to ensure that it can detect the step necessary to place a physical barrier at the edge to keep the unit from falling. Make sure the physical barrier is not strip, hooded.
6. Only use as described in this manual. Only use accessories recommended or sold by the manufacturer.
7. Please make sure your power supply voltage matches the power voltage marked on the docking station.
8. Do not handle or plug appliance with wet hands.
9. Non-rechargeable batteries are prohibited.
10. Do not use without a lid and lid there is place.
11. Do not operate the robot in a place where there are air conditioners or higher objects on the floor to be cleaned.
12. Do not use the robot in a place where there are flammable or explosive objects (below 5°C/23°F or above 40°C/104°F). Please charge the robot at temperature below 30°C/86°F and avoid overcharging the battery.
13. Please read the charging instructions and do not charge the battery pack or the temperature outside of the specified range may damage the battery and increase the risk of fire.
14. Keep hair loose, clothing, fingers, and all parts of body away from any openings and moving parts.
15. Do not operate the robot in a room where an infant or child is sleeping.
16. If ROBOT use ONLY. Do not use the robot in outdoor, commercial or industrial environments. Do not use appliance on wet surfaces or surfaces with slippery water.
17. Do not allow the robot to pick up large objects like wires, large pieces of paper or any item that may trip the robot.
18. Do not use the robot to pick up flammable or combustible materials such as gasoline, paint, oil, or other liquids or solids in areas where they may be present.
19. Do not use the robot to pick up anything that is burning or smoking, such as cigarettes, matches, hot ashes, or anything that could cause a fire.
20. Do not put any objects into opening. Do not use with any power plug included. Keep fire of dust bin full, and anything that may reduce air flow.
21. Take care not to damage the power cord. Do not pull on or carry the robot or the docking station by the power cord, or use the power cord as a handle. Close a door on the power cord, or pull power cord around sharp edges or corners. Do not run the cord over the power cord. Keep power cord away from hot surfaces. Do not plug in the power cord to a single plug or a multi-plug.
22. If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
23. Do not use the docking station if it is damaged.
24. Do not use the robot or the docking station if it is not working properly. It has been damaged, after use, or in contact with water. It must be repaired by the manufacturer or its service agent in order to avoid a hazard.
25. Turn off the power switch before cleaning or maintaining the robot. Turn off all controls.
26. The plug must be removed from the receptacle before cleaning or maintaining the docking station.
27. Remove the robot from the docking station, and turn off the power switch to the appliance before removing the battery for disposal of the robot.
28. The battery must be removed and discarded according to local laws and regulations before disposal of the robot.
29. Please dispose of used batteries according to local laws and regulations.
30. Do not increase the robot even if it is severely damaged. The batteries can explode in a fire.
31. When not using the docking station for a long period of time, please empty it.
32. Please disconnect the robot from the switch as in the all position before connecting to battery, and please use a charging appliance. Carrying the robot with your finger on the switch or emptying the robot that have the switch in motion accidents.
33. When battery pack is not in use, keep it away from other metal objects, the open circuit, conductive, with a wire. When a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
34. Under adverse conditions, liquid may be spilled from the battery. Avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid spilled from the battery may cause irritation or burns.
35. Do not use a battery pack that is damaged or modified. Damaged or modified batteries may emit sparks and cause fire or explosion. If the explosion or fire of the battery occurs, please do not touch it.
36. Do not remove a battery pack or appliance to fire or excessive temperature. Exposure to fire or excessive temperature (over 120°C/248°F) may cause explosion.
37. Please always performed by a qualified repair person. Only direct replacement parts.
38. Do not modify or attempt to repair the robot or the battery pack. (Do not open the robot or the battery pack.)
39. Do not operate the robot in a place where there are flammable or explosive materials. The vacuum may accidentally hit or burn things.
40. Exchange only with the charger. Please use the correct charger. A charger that is suitable for one type of battery pack may cause a fire if the robot is used with another battery pack.
41. Use the robot only with specifically designated battery packs. Use of any other battery packs may cause a risk of fire or explosion.
42. The robot contains batteries that are only replaceable by a professional. To replace the robot's battery, please contact Customer Service.
43. If the robot is not going to be used for a long time, fully charge the robot, power it off, and unplug the docking station.

SAVE THESE INSTRUCTIONS

To safety in separate requirements, a separation distance of 20 cm or more should be maintained between this device and persons during device operation.

To ensure compliance, operators or close that this distance is not recommended. The information for this transmitter must not be co-located in conjunction with any other antenna or transmitter.

	Direct circuit symbol safety building transformer
	Switch mode power supply
	For indoor use only
	Direct current
	Alternating current
	Detachable supply unit

Correct Disposal of this Product

This marking indicates that this product should not be disposed of with other household waste through the bin. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To recycle your used device, please use the return and collection system or contact the retailer where the product was purchased. They can safely recycle the product.



Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.





RF exposure warning: This equipment complies with FCC radiation exposure limits set forth for uncontrolled environments. This equipment must be installed and operated in accordance with provided instructions and the precaution(s) used for this transmitter must be installed (intended) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

Lefant M1 Robot Vacuum Cleaner User Manual - Setup, Operation & Maintenance

Comprehensive user manual for the Lefant M1 Robot Vacuum Cleaner. Features LiDAR

navigation, 4000Pa suction, 150 min runtime, self-charging, multi-floor mapping, and no-go zones.

Covers setup, operation, maintenance, and troubleshooting for efficient home cleaning.

<div> Lefant N3 User manual </div>	<p>Lefant N3 Robot Vacuum User Manual - Setup, Operation, and Maintenance Guide</p> <p>Comprehensive user manual for the Lefant N3 robot vacuum cleaner. Includes setup instructions, operating guide, mopping features, app integration, maintenance schedule, troubleshooting tips, technical specifications, and warranty information.</p>
<div> User manual </div>	<p>Lefant M330 Pro Robotic Vacuum Cleaner User Manual</p> <p>Comprehensive user manual for the Lefant M330 Pro Robotic Vacuum Cleaner, covering setup, operation, maintenance, troubleshooting, and safety instructions.</p>

<div><p>Congratulations on the purchase of your Lefant M100T! We hope it brings you satisfaction. We trust your purchase will keep your home clean and provide you a high-quality life.</p><p>Should you encounter situations that have not been properly addressed in this User Manual, please contact our Customer Service Center. We will do our best to solve your problem. For more information, please visit the Lefant@BOTICE's official website: www.lefant.com and email to the following email address: support@lefant.com.</p><p>The company reserves the right to make technological and/or design changes to this product for continuous improvement.</p><p>IMPORTANT SAFETY INSTRUCTIONS</p><p>WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, or serious injury.</p><p>READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.</p><p>For household use only</p><p>When using on the floor appliances, basic precautions should always be followed, including the following:</p><ol style="list-style-type: none">1. The robot must be used in accordance with the directions in the user manual. Our company cannot be held liable or responsible for any damage or injury caused by improper use.2. Do not allow to be used as a toy. Close attention is necessary when used by or near children.3. Do not allow children to sit on the vacuum.4. Close the area to be cleaned. Remove power cords and small objects from the floor that could entangle the robot. Turn tug trigger under the tug box, and fit them with no cutters and cable covers of the floor.5. If there is a sharp edge in the cleaning area (due to a step or stairs), you should operate the robot to ensure that it can detect the step necessary to place a physical barrier at the edge to keep the unit from falling. Make sure the physical barrier is not strip hazard.6. Only use as described in this manual. Only use accessories recommended or sold by the manufacturer.7. Please make sure your power supply voltage matches the power voltage marked on the docking station.8. Do not handle or plug appliance with wet hands.9. Non-rechargeable batteries are prohibited.10. Do not use without a bar and/or there is place.11. Do not operate the robot in or close other places where it is cordless or higher objects on the floor to be cleaned.12. Do not use the robot in the following conditions:<ul style="list-style-type: none">(a) Below -5°C (23°F or above 40°C/104°F). Please charge the robot at temperature above 5°C (23°F) and below 40°C (104°F) before all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.(b) Keep hair loose clothing, fingers, and all parts of body away from any openings and moving parts.(c) Do not operate the robot in rooms where an infant or child is sleeping.13. For REDUCE use ONLY: Do not use the robot in outdoor, commercial or industrial environments. Do not use appliance on wet surfaces or surfaces with standing water.14. Do not allow the robot to pick up large objects like wires, large pieces of paper or any item that may clog the robot.15. Do not use the robot to pick up flammable or combustible materials such as gasoline, grease, oil, or any other liquids or solids where they may be present.16. Do not use the robot to pick up anything that is burning or smoldering, such as cigarettes, matches, hot ashes, or anything that could cause a fire.17. Do not put any objects into opening. Do not use with any power plug included. Keep fire of dust bin full, and anything that may collect on fire.18. Take care not to damage the power cord. Do not pull on or carry the robot or the docking station by the power cord, or use the power cord as a handle. Close a door on the power cord, or pull power cord around sharp edges or corners. Do not run the cord over the power cord; power cord always from hot surfaces. Do not plug in the power cord to a single plug or a double plug for the cord.19. If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.20. Do not use the docking station if it is damaged.21. Do not use the robot or the docking station if it is not working properly. Has been dropped, damaged, left outdoors, or come in contact with water. It must be repaired by the manufacturer or its service agent in order to avoid a hazard.22. Turn OFF the power switch before cleaning or maintaining the robot. Turn off all controls.23. The plug must be removed from the receptacle before cleaning or maintaining the docking station.24. Remove the robot from the docking station, and turn OFF the power switch to the Appliance before removing the battery for disposal of the robot.25. The battery must be removed and discarded according to local laws and regulations before disposal of the robot.26. Please dispose of used batteries according to local laws and regulations.27. Do not incinerate the robot even if it is severely damaged. The batteries can explode in fire.28. When not using the docking station for a long period of time, please empty it.29. Prevent unintentional starting. Ensure the switch is in the off position before connecting to battery, plugging in or using the appliance. Carrying the robot with your finger on the switch or energizing the robot that have the switch in on position.30. When battery pack is not in use, keep it away from other metal objects, the copper clips, contacts, leads, and wires. A loose connection from one terminal to another, shorting the battery terminals together, may cause burns.31. Under adverse conditions, liquid may be ejected from the battery, avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.32. Do not use a battery pack that is damaged or modified (damaged or modified batteries may emit sparks and cause fire).33. Do not use the robot in the presence of oil or dirt.34. Do not remove a battery pack or appliance to fire or excessive temperatures. Exposure to fire or temperatures above 125°C (257°F) may cause explosion.35. When servicing performed by a qualified repair person using only identical replacement parts.36. Do not modify or attempt to repair the robot or the battery pack. (See applicable) except as indicated in the instructions.37. Do not operate the robot in a room that has no cordless or furniture that the vacuum may accidentally hit or bump into.38. Exchange only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may cause a risk of fire when used with another battery pack.39. Use the robot only with specifically designated battery packs. Use of any other battery packs may cause a risk of fire or explosion.40. The robot contains batteries that are only replaceable by a professional. To replace the robot's battery, please contact Customer Service.41. If the robot is not going to be used for a long time, fully charge the robot, power it OFF, and unplug the docking station.<p>SAVE THESE INSTRUCTIONS</p><p>To safety in exposure requirements, a separation distance of 20 cm or more should be maintained between this device and persons during device operation.</p><p>To ensure compliance, operators or close that this distance is not recommended. The interference caused by the transmitter must not be co-located in conjunction with any other antenna or transmitter.</p><table><tr><td></td><td>Direct circuit ground safety building transformer</td></tr><tr><td></td><td>Switch mode power supply</td></tr><tr><td></td><td>For indoor use only</td></tr><tr><td></td><td>Direct current</td></tr><tr><td></td><td>Alternating current</td></tr><tr><td></td><td>Detachable supply unit</td></tr></table><p>Correct Disposal of this Product</p><p>This marking indicates that this product should not be disposed of with other household waste through the city. As a general rule, please refer to the environmental or human health from uncontrolled waste disposal, recycle it responsibly to preserve the sustainable use of natural resources. To recycle your used device, please use the return and collection system or contact the retailer where the product was purchased. They can safely recycle this product.</p><p>Federal Communications Commission (FCC) Interference Statement</p><p>This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules.</p><p>These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.</p><p>However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:</p><ul style="list-style-type: none">• Reorient or relocate the receiving antenna.• Increase the separation between the equipment and receiver.• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.• Consult the dealer or an experienced radio/TV technician for help.<p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) The device may not cause harmful interference, and (2) The device must accept any interference received, including interference that may cause undesired operation.</p><p>FCC Caution</p><p>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p><p>RF exposure warning</p><p>This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed and operated in accordance with provided instructions and the precaution(s) used for this transmitter must be installed internally. Use for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.</p></div> <div><div><p> Lefant</p><p>User manual</p><p>Lefant M1 Robot Vacuum Cleaner</p></div><div><h2>Lefant M1 Robot Vacuum and Mop User Manual</h2><h3>Comprehensive user manual for the Lefant M1 Robot Vacuum and Mop, covering setup, operation, maintenance, troubleshooting, and technical specifications. Learn how to use your robot for efficient cleaning.</h3></div></div>		Direct circuit ground safety building transformer		Switch mode power supply		For indoor use only		Direct current		Alternating current		Detachable supply unit	<div><h2>Lefant M1 Robot Vacuum Cleaner User Manual</h2><h3>Comprehensive user manual for the Lefant M1 Robot Vacuum Cleaner, covering setup, operation, maintenance, troubleshooting, and technical specifications.</h3></div>
	Direct circuit ground safety building transformer												
	Switch mode power supply												
	For indoor use only												
	Direct current												
	Alternating current												
	Detachable supply unit												