

[Manuals.plus](#) /

› [Juboos](#) /

› Juboos Kids Analog Watch Instruction Manual - Model 24606

Juboos 24606

Juboos Kids Analog Watch Instruction Manual - Model 24606

INTRODUCTION

Welcome to the instruction manual for your Juboos Kids Analog Watch, Model 24606. This watch is designed to help children learn to tell time with its clear, easy-to-read display and durable construction. Please read this manual carefully to ensure proper use and maintenance of your watch.



The Juboos Kids Analog Watch, Model 24606, in Rose Red.

SETUP

1. Unpacking

Your watch comes packaged in a gift box along with this instruction manual.

2. Battery Activation


Before first use, locate the small plastic tab on the watch crown (the knob on the side). Gently pull out this tab to activate the battery. The watch hands will then begin to move.

3. Setting the Time

Pull the crown outwards until you hear a small click. Rotate the crown to move the hour and minute hands to the correct time. Once the time is set, push the crown back in firmly to start the watch and ensure water resistance.

4. Adjusting the Strap

The resin strap is adjustable to fit various wrist sizes. Use the buckle to find a comfortable and secure fit on the child's wrist. The strap has multiple sizing options.

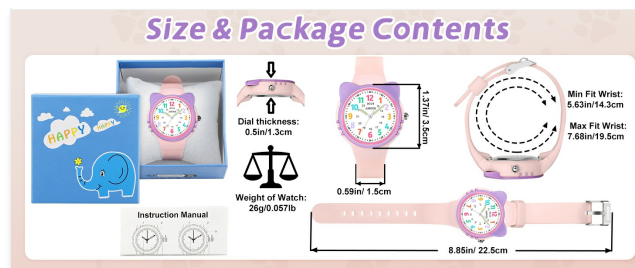

The watch is packaged with an instruction manual and comes in a gift box.

OPERATING THE WATCH

Reading the Time

The Juboos Kids Analog Watch features a clear dial designed for easy time learning. It includes colorful 12-hour numerals, smaller 24-hour numerals, and a 60-minute scale for precise reading.

- To read the **hour**, observe the number the **short hand** is pointing to.
- To read the **minutes**, observe the number or minute mark the **long hand** is pointing to on the outer 60-minute scale.
- The thin hand indicates **seconds**.



Detailed view of the watch face, highlighting 12-hour, 24-hour, and 60-minute markings.



Visual guide for reading the time: Step 1 (hour hand), Step 2 (minute hand), Step 3 (combining for the time).

MAINTENANCE

Water Resistance

This watch is rated **3ATM (30 meters) water resistant**. This means it is suitable for daily use, such as handwashing, exposure to rain, and resisting sweat. It is **not suitable** for showering, bathing, swimming, or diving. **Important:** Do not pull the crown underwater, as this will compromise the water resistance.



The watch is resistant to splashes from handwashing, rainwater, and sweat.

Cleaning

To clean your watch, wipe the strap and face with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.

Battery Replacement

The watch is powered by a C battery (included). When the battery needs replacement, it can be accessed by removing the four screws on the stainless steel back cover. Battery replacement should ideally be performed by a qualified technician to maintain water resistance.

TROUBLESHOOTING

Watch Not Running

- Ensure the plastic tab has been removed from the crown.
- Check if the crown is pushed in completely.

- If the watch still does not run, the battery may need replacement.

Time Inaccurate

- Reset the time as described in the 'Setting the Time' section.
- If the time continues to be inaccurate, the watch movement may require inspection.

SPECIFICATIONS

Model Number	24606
Display Type	Analog
Movement	Japanese Quartz
Power Source	Battery Powered (1 C battery included)
Water Resistance	30 Meters (3ATM)
Case Material	Resin
Crystal Material	Acrylic
Strap Material	Resin
Clasp Type	Buckle
Case Diameter	3.7 cm
Case Thickness	1.3 cm (0.5 inches)
Band Width	1.5 cm (0.59 inches)
Band Length	22.5 cm (8.85 inches)
Item Weight	26 grams (0.057 lb)
Minimum Fit Wrist	14.3 cm (5.63 inches)
Maximum Fit Wrist	19.5 cm (7.68 inches)
Included Components	Watch, Gift Box, Instruction Manual



Detailed dimensions of the Juboos Kids Analog Watch.



Close-up of the watch's components, including the stainless steel back cover and resin strap.

WARRANTY

The Juboos Kids Analog Watch comes with a limited warranty. For specific details regarding warranty coverage and duration, please contact Juboos customer support.

SUPPORT

For any questions, assistance, or warranty inquiries, please contact Juboos customer support at:

Email: Juboosaftersales@outlook

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question