

AROEVE DH-JS07

AROEVE 6L Room Air Humidifier (Model DH-JS07) User Manual

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your AROEVE 6L Room Air Humidifier, Model DH-JS07. Please read this manual thoroughly before using the product and retain it for future reference.

The AROEVE 6L Humidifier is designed to enhance indoor air quality by adding moisture to the air. Key features include a large 6-liter water tank for extended operation, an integrated essential oils diffuser, automatic humidity control, and quiet operation suitable for various room environments.

2. SAFETY INSTRUCTIONS

- Always place the humidifier on a firm, flat, water-resistant surface at least 12 inches (30 cm) away from walls and appliances.
- Do not place the humidifier directly on carpet, towels, or other absorbent surfaces.
- Ensure the power cord is not damaged and is placed away from high-traffic areas.
- Unplug the humidifier from the power outlet before filling, cleaning, or moving it.
- Do not immerse the base unit in water or other liquids.
- Use only clean, cool tap water or distilled water. Do not use hot water.
- Keep out of reach of children and pets.
- Do not add essential oils directly into the water tank; use the designated aroma tray.
- If the humidifier emits unusual sounds, odors, or smoke, unplug it immediately and contact customer support.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- AROEVE 6L Room Air Humidifier Unit
- User Manual

4. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your humidifier:



Figure 4.1: AROEVE 6L Room Air Humidifier. This image displays the overall design of the humidifier, featuring its black finish, control panel, and mist outlet.

- **Mist Nozzle:** Rotates 360 degrees to direct mist.
- **Water Tank:** 6-liter capacity for water storage.
- **Control Panel:** Digital display and touch buttons for operation.
- **Aroma Tray:** Located at the base, for essential oil diffusion.
- **Base Unit:** Contains the ultrasonic atomizer and electronic components.

- **Water Level Sensor:** Detects low water levels for automatic shut-off.

5. SETUP

5.1 Placement

Place the humidifier on a flat, stable surface. Ensure there is adequate space around the unit for proper mist dispersion and air circulation. Avoid placing it near heat sources, direct sunlight, or sensitive electronics.

5.2 Filling the Water Tank

The AROEVE humidifier features a convenient top-fill design:

1. Remove the top cover of the humidifier.
2. Pour clean, cool tap water or distilled water directly into the water tank. Do not exceed the 'MAX' water level indicator.
3. Replace the top cover securely.



Figure 5.1: Top-fill water tank. This image illustrates the process of refilling the humidifier by pouring water directly into the top opening after removing the cover.

The 6-liter capacity allows for up to 60 hours of continuous operation, reducing the frequency of refills.



Figure 5.2: 6-Liter Capacity and Runtime. This image highlights the large 6-liter water tank and the extended 60-hour operating time of the humidifier.

5.3 Power Connection

Plug the power cord into a standard electrical outlet. The unit will enter standby mode.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **Power button** on the control panel to turn the humidifier on or off.

6.2 Mist Level Adjustment

The humidifier offers three mist output levels. Press the **Mist Level button** (often indicated by a mist icon) repeatedly to cycle through low, medium, and high mist settings. The current setting will be displayed on the screen.

6.3 Automatic Humidity Control

The integrated hygrostat allows for automatic humidity regulation:

1. Press the **Humidity Setting button** (often indicated by a percentage or 'A' icon).
2. Adjust the desired humidity level using the control panel. The humidifier will automatically turn on or off to maintain this preset level.



Figure 6.1: Automatic Humidity Control. This image illustrates the humidifier's ability to maintain a desired humidity level, showing indicators for dry, comfort, and wet humidity zones.

6.4 Aroma Diffuser Function

To use the aroma diffuser:

1. Locate the aroma tray at the base of the humidifier.
2. Add a few drops of your preferred essential oil onto the aroma pad within the tray.
3. Close the tray. The humidifier will diffuse the aroma along with the mist.

Turn Your Air into a Spa—Effortlessly

Moisture + Fragrance in Every Breath



Figure 6.2: Aroma Diffuser. This image shows the integrated aromatherapy tray where essential oils can be added to diffuse fragrance with the mist.

6.5 Night Mode / Silent Operation

Activate Night Mode for reduced noise and light output. In this mode, the humidifier operates at approximately 25dB, ensuring minimal disturbance.

Quiet operation

Restful sleep for your family



Figure 6.3: Quiet Operation. This image demonstrates the humidifier's low noise level (25dB) during operation, suitable for a restful environment.

6.6 Atmosphere Light

The humidifier features a 7-color ambient LED light. Press the **Light button** (if available) to cycle through colors or turn the light off.

6.7 Auto Shut-off

The humidifier is equipped with an automatic shut-off feature that activates when the water level is too low, ensuring safety and preventing damage to the unit.

7. MAINTENANCE

Regular cleaning is essential for optimal performance and hygiene.

7.1 Daily Maintenance

- Unplug the unit before cleaning.
- Empty any remaining water from the tank and base.
- Wipe the tank and base dry with a clean cloth.

7.2 Weekly Cleaning

- Unplug the unit.
- Remove the top cover and water tank.
- Clean the water tank with a soft brush or cloth and mild detergent. Rinse thoroughly.
- Gently wipe the ultrasonic atomizer (the small disc in the base) with a soft cloth to remove mineral deposits. Do not use abrasive materials or harsh chemicals.
- Clean the aroma tray and replace the aroma pad if necessary.
- Ensure all parts are completely dry before reassembling.

7.3 Storage

If the humidifier will not be used for an extended period:

1. Perform a thorough weekly cleaning.
2. Ensure all components are completely dry.
3. Store the unit in its original packaging or a clean, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No mist or low mist output	<ul style="list-style-type: none">• Low water level• Mineral buildup on atomizer• Mist nozzle blocked	<ul style="list-style-type: none">• Refill water tank• Clean the ultrasonic atomizer• Check and clear mist nozzle
Unusual odor	<ul style="list-style-type: none">• Stagnant water• Dirty water tank	<ul style="list-style-type: none">• Empty and refill with fresh water• Clean the water tank thoroughly
Water leakage	<ul style="list-style-type: none">• Water tank not properly seated• Overfilled water tank• Unit placed on uneven surface	<ul style="list-style-type: none">• Ensure tank is correctly positioned• Do not exceed MAX fill line• Place on a flat, stable surface
Unit not turning on	<ul style="list-style-type: none">• No power• Low water level (auto shut-off)	<ul style="list-style-type: none">• Check power connection• Refill water tank

9. SPECIFICATIONS

- **Model Name:** DH-JS07
- **Brand:** AROEVE
- **Capacity:** 6 Liters
- **Max Runtime:** Up to 60 hours
- **Mist Output:** Up to 300 ml/h


- **Noise Level:** Approximately 25dB (in Night Mode)
- **Coverage Area:** Up to 40 Square Meters
- **Product Dimensions:** 14.3D x 24.5W x 34H Centimetres
- **Item Weight:** 1.84 Kilograms
- **Power Source:** Corded Electric
- **UPC:** 850070209434

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact AROEVE customer service through the retailer where the product was purchased. Please have your model number (DH-JS07) and purchase date available when contacting support.


Related Documents - DH-JS07

 <p>Humidifier Product Manual DH-JS07</p> <p>Please read this manual completely before using this product.</p>	<p>DH-JS07 Humidifier Product Manual</p> <p>This manual provides instructions for the safe operation, maintenance, and troubleshooting of the DH-JS07 Humidifier. It covers important safety information, product features, and specifications.</p>
	<p>AROEVE 2.5L Humidifier User Manual and Instructions</p> <p>Comprehensive user manual for the AROEVE 2.5L Humidifier, covering setup, operation, cleaning, maintenance, troubleshooting, and specifications. Features include 2.5L tank, 250 ml/h mist, 25-hour runtime, essential oil diffuser, and automatic shut-off.</p>
	<p>Aroeve Air Purifier MK04 User Manual</p> <p>Comprehensive user manual for the Aroeve Air Purifier, model MK04 (DH-JH04). Includes safety instructions, setup guide, operation, maintenance, troubleshooting, and warranty information for optimal air purification.</p>
	<p>Aroeve Air Purifier MK03 User Manual</p> <p>User manual for the Aroeve Air Purifier, Model MK03. Provides essential safety instructions, setup guide, operation details, cleaning and maintenance procedures, troubleshooting tips, and warranty information.</p>

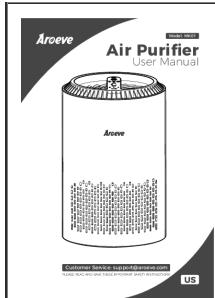

[Aroeve MK01 Air Purifier User Manual and Safety Guide](#)

Comprehensive user manual for the Aroeve MK01 Air Purifier, covering product structure, specifications, operating instructions, safety precautions, aroma diffusion, filter reset, and warranty information.

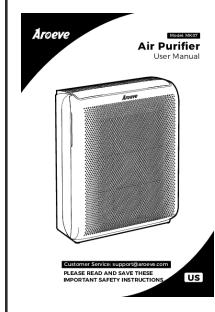

[Aroeve MK07 Air Purifier User Manual](#)

User manual for the Aroeve MK07 Air Purifier, including safety instructions, specifications, operation, cleaning, troubleshooting, and warranty information.