

Haunted Living KL-37011

Haunted Living 3-ft Lighted Party Skeleton Motion Activated Animatronic Instruction Manual

Model: KL-37011

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Haunted Living 3-ft Lighted Party Skeleton Motion Activated Animatronic. Please read this manual thoroughly before setup and operation, and retain it for future reference.

The Haunted Living 3-ft Party Skeleton is designed to add an animated and illuminated element to your indoor holiday displays. It features motion and sound activation, multiple display modes, and integrated multicolor LED lighting.

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in fire, electric shock, or other injury.

- This product is intended for indoor use only.
- Unplug the unit during inclement weather or when not in use for extended periods.
- Do not allow children to play on or near the display. This is not a toy.
- Keep the product away from flammable materials, heat sources, and open flames.
- Always supervise the product when it is in operation.
- Do not operate the product if it is damaged or broken. Inspect the power cord and unit for any damage before each use.
- Ensure the power outlet voltage matches the product's requirements (110 Volts).

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage.
2. **Placement:** Place the skeleton animatronic on a flat, stable, and dry indoor surface. Ensure there is enough space around the unit for its movement and to prevent obstruction. The solid flat base is designed for stability.
3. **Power Connection:** Locate the 10-foot power cord. Plug the power cord into a standard 110-volt electrical outlet. Ensure the cord is not a tripping hazard and is not pinched or damaged.



Figure 1: Fully assembled Haunted Living 3-ft Lighted Party Skeleton Animatronic, showing its overall appearance with headphones and glowing features.



Figure 2: Detail of the stable base and the power cord connection point at the rear of the unit.

OPERATING INSTRUCTIONS

The Haunted Living Party Skeleton features motion and sound sensors to activate its functions. It offers three distinct display modes:

- **Mode 1: Music, Lights, and Movement:** In this mode, the skeleton will activate with music, synchronized lights, and animated movement when its motion or sound sensors are triggered. This mode provides the full interactive experience.
- **Mode 2: Silent Sway (Lights and Movement Only):** This mode activates the lights and movement without sound or music when triggered. Ideal for a more subtle, visual effect.
- **Mode 3: Unlit Stance (Static Display):** In this mode, the skeleton remains static and unlit. It will not react to motion or sound. This is suitable for a non-animated display.

Changing Modes: Locate the mode selection switch, typically found on the back or base of the unit. Toggle the switch to select your desired operating mode.



Figure 3: The skeleton's head with illuminated eyes, demonstrating the multicolor lighting feature.



Figure 4: The rib cage section of the skeleton, showing the internal multicolor LED lights illuminating the structure.



Figure 5: The base of the animatronic, showing the glowing effect around the feet, indicating active lighting.

MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Wipe the surface of the skeleton with a soft, dry cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as this may damage the electronics or finish.
- **Storage:** When not in use, store the animatronic in its original packaging or a protective container in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the power cord and all connections for any signs of wear or damage. If damage is found, discontinue use immediately and contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Not plugged in. Power outlet not active. Damaged power cord.	Ensure the power cord is securely plugged into a working 110V outlet. Test the outlet with another device. Inspect the power cord for damage. If damaged, discontinue use and contact support.

Problem	Possible Cause	Solution
Motion/Sound activation not working.	Incorrect mode selected.	Verify the unit is in Mode 1 (Music, Lights, Movement) or Mode 2 (Silent Sway).
	Sensor obstructed.	Ensure the sensors (typically on the front or top of the head) are clear of obstructions.
	Insufficient motion/sound.	Increase motion or sound near the unit to trigger activation.
Lights are not working.	Incorrect mode selected.	Ensure the unit is in Mode 1 or Mode 2. Mode 3 (Unlit Stance) will not illuminate.
	Internal wiring issue.	If lights still do not work, contact customer support. Do not attempt to repair internal wiring.

SPECIFICATIONS

Model Number	KL-37011
Brand	Haunted Living
Product Dimensions (L x W x H)	15.6 x 18.48 x 36 inches
Item Weight	8.82 pounds
Frame Material	Plastic
Light Color	Multicolor LED
Voltage	110 Volts
Recommended Use	Indoor Halloween celebration decoration

WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not provided in the product details. For assistance, please refer to the retailer or manufacturer's website where the product was purchased.