

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Ninja](#) /

> [Ninja Professional Blender with Auto-iQ \(Model CO750B\) - Instruction Manual](#)

Ninja CO750B

Ninja Professional Blender with Auto-iQ

MODEL: CO750B

User Instruction Manual

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- To protect against electrical shock, do not immerse the cord, plug, or motor base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care.
- Always operate blender with lid in place.
- Do not blend hot liquids.

Getting Started

Unpacking and Components

Carefully remove all parts from the packaging and discard all packaging materials. Ensure all components are present before use.

- Motor Base (1400W)
- 72oz Total Crushing Pitcher with Lid
- Stacked Blade Assembly
- Two Single-Serve Blending Cups
- Two Single-Serve Spout Lids
- Pro Extractor Blades Assembly (for single-serve cups)



Image: The Ninja Professional Blender with its main components laid out, including the motor base, the large 72oz pitcher, and two single-serve cups with their respective lids and blade assembly.

Setup

Assembling the Pitcher

1. Place the motor base on a clean, dry, level surface.
2. Lower the **Stacked Blade Assembly** onto the drive gear inside the 72oz pitcher. Ensure it sits securely.
3. Place the pitcher onto the motor base. Align the pitcher handle to the right of the base. Rotate the pitcher clockwise until it clicks into place. The power button and Auto-iQ program lights will illuminate when correctly assembled.
4. Secure the pitcher lid by aligning the arrow on the lid with the arrow on the pitcher handle, then press down firmly until it clicks. The lid handle must be locked into place for the blender to operate.



Image: A woman pouring a freshly blended smoothie from the 72oz pitcher into a glass, demonstrating the pour spout feature. The blender base is visible on the counter.

Assembling the Single-Serve Cup

1. Fill the single-serve cup with ingredients. Do not exceed the MAX LIQUID line.
2. Screw the **Pro Extractor Blades Assembly** onto the cup until a tight seal is achieved.
3. Invert the cup and place it onto the motor base. Rotate clockwise until it clicks into place. The power button and Auto-iQ program lights will illuminate.

Operating Instructions

The Ninja Professional Blender features both Auto-iQ programs and manual speed settings for versatile blending.

Auto-iQ Programs

Auto-iQ programs are intelligent, pre-set programs that combine unique pulsing, blending, and pausing patterns to deliver consistent results. Simply select your desired program and let the blender do the work.

- **SMOOTHIE:** Ideal for blending fresh or frozen fruits, liquids, and ice into smooth beverages.
- **ICE CRUSH:** Designed to crush ice into snow for frozen drinks and desserts.

- **EXTRACT:** Optimized for extracting nutrients from whole fruits and vegetables in single-serve cups.

Manual Speed Settings

For customized control, use the manual speed settings:

- **LOW:** For mixing and pureeing softer ingredients.
- **MED:** For general blending tasks.
- **HIGH:** For tougher ingredients and faster blending.
- **PULSE:** For controlled chopping and processing. Press and hold for short bursts.



Image: A detailed view of the blender's control panel, showing the power button, Auto-iQ programs (Smoothie, Ice Crush, Extract), and manual speed options (Low, Med, High, Pulse).

Maintenance and Cleaning

Proper maintenance ensures the longevity and performance of your blender.

Dishwasher Cleaning

All removable parts, including the pitcher, lids, and blade assemblies, are top-rack dishwasher safe. Ensure blades are placed securely to prevent damage.



Image: A person loading the 72oz blender pitcher and its lid into the top rack of a dishwasher, illustrating the ease of cleaning.

Hand Washing

For hand washing, wash removable parts in warm, soapy water using a dishwashing utensil with a handle to avoid direct contact with blades. Rinse thoroughly and air dry.

Motor Base Cleaning

Wipe the motor base with a clean, damp cloth. Do not immerse the motor base in water or any other liquid.

Troubleshooting

Problem	Possible Cause	Solution
Blender does not turn on.	Power cord not plugged in; Pitcher/cup not correctly assembled; Overheating.	Ensure power cord is securely plugged in. Verify pitcher/cup and lid are locked into place. Unplug and allow to cool for 15 minutes if overheated.
Ingredients are not blending smoothly.	Too many ingredients; Not enough liquid; Ingredients are too large.	Reduce ingredient quantity. Add more liquid. Cut large ingredients into smaller pieces. Use Pulse function for initial breakdown.
Unit is leaking.	Lid not properly secured; Blade assembly not tightened (single-serve).	Ensure pitcher lid is locked into place. For single-serve cups, ensure blade assembly is tightly screwed on.

Specifications

- **Model Number:** CO750B
- **Power:** 1400 Watts
- **Voltage:** 120 Volts
- **Capacity:** 72oz (Pitcher), 16oz (Single-Serve Cups)
- **Controls:** Touch with Auto-iQ programs (Smoothie, Ice Crush, Extract) and Manual Speeds (Low, Med, High, Pulse)
- **Material:** BPA-free Plastic (Container)
- **Dimensions:** 8.16"D x 17.44"W x 7.55"H
- **Included Components:** Motor base, 72oz pitcher with lid, stacked blade assembly, 2 single-serve cups, 2 spout lids, Pro Extractor Blades Assembly.

Warranty and Support

This Ninja Professional Blender (Model CO750B) comes with a **Limited Warranty**. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included in your product packaging or visit the official Ninja website.

For technical support, replacement parts, or any other inquiries, please contact Ninja Customer Service. Contact information can typically be found on the product packaging, the official Ninja website, or by searching for 'Ninja customer support' online.