

[Manuals.plus](#) /

› [BANGSON](#) /

› BANGSON 1.31 Cu.Ft Portable Washing Machine (Model BSW250045) User Manual

BANGSON BSW250045

BANGSON 1.31 Cu.Ft Portable Washing Machine User Manual

Model: BSW250045

INTRODUCTION

Thank you for choosing the BANGSON 1.31 Cu.Ft Portable Washing Machine. This compact and efficient appliance is designed for small spaces, offering convenience and powerful cleaning performance. This manual provides essential information for safe operation, installation, maintenance, and troubleshooting to ensure optimal performance and longevity of your washing machine.

SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Ensure the washing machine is placed on a stable, level surface to prevent excessive vibration during operation.
- Do not operate the machine if the power cord or plug is damaged.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are waterproof or water-resistant, as this may cause abnormal vibration.
- Always unplug the machine before cleaning or performing any maintenance.
- Do not use flammable or combustible materials near the appliance.

WHAT'S IN THE BOX

Verify that all components are present upon unpacking:

- Washing Machine Unit
- Cover
- Drain Hose
- Fill Hose
- Power Cord
- Quick-Connect Adapter

SETUP

1. Placement

Place the washing machine on a firm, level surface. The dimensions are 19.29"D x 19.29"W x 33.07"H. Ensure there is

adequate space around the unit for ventilation and access.



Image: Dimensions of the BANGSON Portable Washing Machine.

2. Water Connection

Connect the fill hose to a water faucet using the quick-connect adapter. Ensure a secure connection to prevent leaks. Attach the drain hose to the machine and direct it into a sink or drain pipe.

Built-in Drain Pump

Convenient to drain out water



**Quick-Connect
Adapter**



**Extended Inlet
Pipe:59.06"**



**Extended Drain
Pipe:52.36"**

Image: Built-in drain pump and connection accessories.


Details Show



Water Inlet



Quick-Connect Adapter

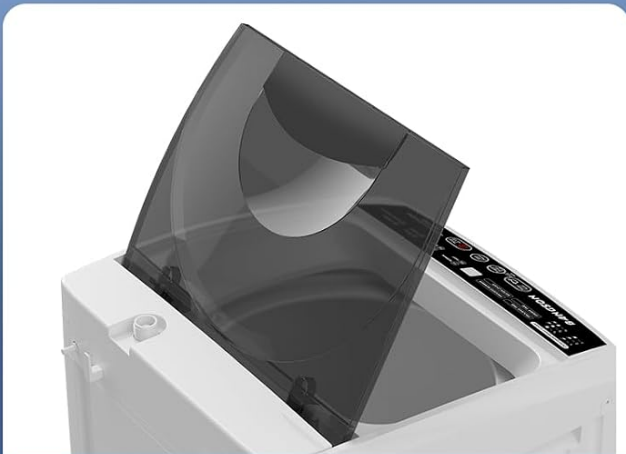

Transparent Top Cover



Side Handle

Image: Detailed view of water inlet and quick-connect adapter.

3. Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the machine's requirements.

4. Leveling

Adjust the leveling feet at the bottom of the machine to ensure it is perfectly level. This minimizes vibration and noise during operation.

Installation Video

Your browser does not support the video tag.

Video: Step-by-step guide on how to install the BANGSON Portable Washing Machine.

OPERATING INSTRUCTIONS

1. Control Panel Overview

The control panel features an LED display and buttons for selecting programs, water levels, and special functions.



Image: Easy-operated control panel with programs and water levels.



Image: User-friendly control panel with simple buttons.

2. Loading Laundry

Open the transparent top cover and load your laundry into the stainless steel inner tub. Do not overload the machine. It can handle up to 12 shirts or 4 jackets. For optimal cleaning, ensure clothes are distributed evenly.



Stainless Steel inner Tub
Self-Cleaning + Efficient Spin



Powerful 280W Motor
Enhanced wash efficiency
and quick spin



Rotating Pulsator
Efficient cleaning with
gentle care for fabrics

Powerful Motor

Well-Crafted Details
Hold up to a large volume of 9.9 Lbs



Image: Internal components for powerful and efficient washing.

3. Adding Detergent

Add the appropriate amount of detergent to the dispenser or directly into the tub before starting the wash cycle.

4. Selecting a Program

Press the 'Program' button to cycle through the 8 available washing programs:

- **Normal:** Standard wash for everyday items.
- **Spin:** Drains water and spins clothes to remove excess moisture.
- **Wash:** Only performs the wash cycle.
- **Strong:** For heavily soiled items.
- **Fast Wash:** A quicker wash cycle for lightly soiled clothes.
- **Soft Wash:** Gentle cycle for delicate fabrics.
- **Wind Dry:** Air drying function.

- **Water Recycle:** Reuses water for certain stages (refer to specific instructions for this feature).

5. Adjusting Water Level

Use the 'Water Level' button to select one of the 6 adjustable water levels. The machine also features intelligent water control for high-level soaking, middle-level washing, and low-level rinsing.



Image: Intelligent water control and adjustable water levels.

6. Starting a Cycle

After selecting your desired program and water level, press the 'Start/Pause' button to begin the wash cycle. The LED display will show the remaining time.

7. Child Safety Lock

To activate the child safety lock, long-press the "Water Level" and "Program/Order Time" buttons simultaneously for 3 seconds. Once activated, all other buttons are disabled to prevent accidental changes.



Image: Child Safety Lock feature explanation.

8. Delayed Washing Function

To activate the delayed washing function, press "Power On" and then long-press "Program/Order Time" for 3 seconds. You can set a delay of 0-24 hours for the machine to start automatically at a later time.

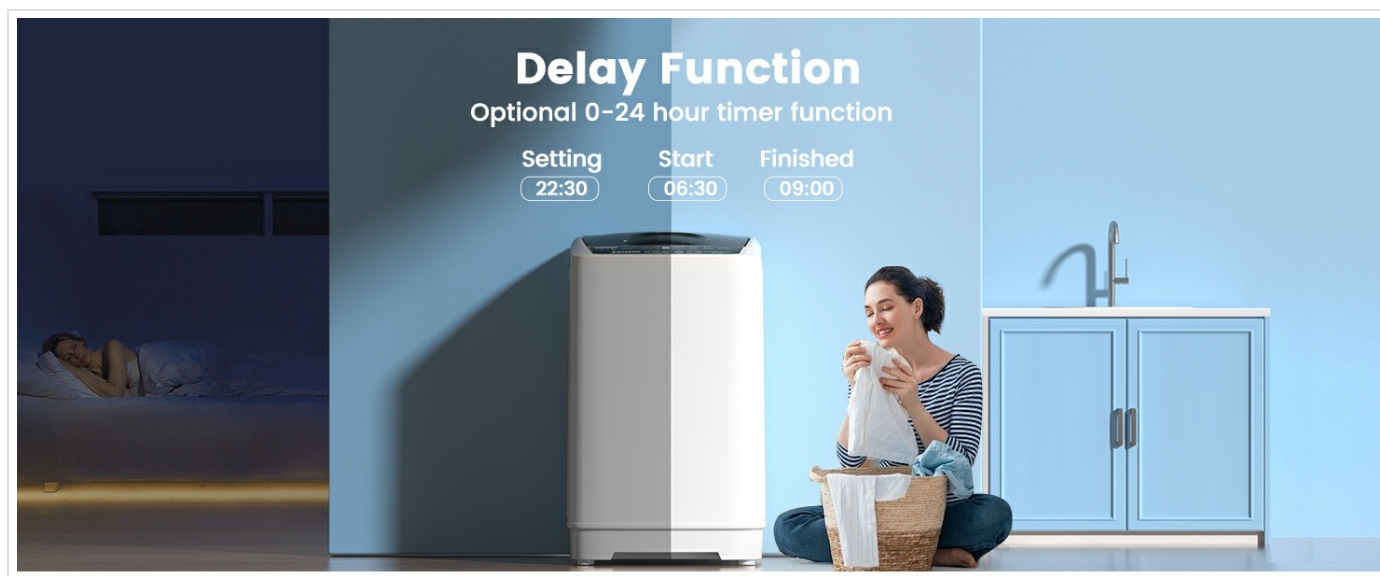


Image: Delay Function for scheduled washing.

9. Automatic Balance Correction

If laundry becomes unevenly distributed during the spin cycle, causing excessive shaking, the machine's automatic imbalance correction system will activate to stabilize the tub, ensuring safer and quieter operation.

Product Overview Video

Your browser does not support the video tag.

Video: Overview of the BANGSON Portable Washer features and operation.

MAINTENANCE

1. Cleaning the Washer

Regularly wipe down the exterior with a soft, damp cloth. Clean the inner tub and pulsator periodically to prevent

detergent residue buildup. Refer to the 'Water Recycle' program for potential self-cleaning features.

2. Draining

The built-in drain pump efficiently removes water after each cycle. Ensure the drain hose is properly positioned to prevent water backup.

3. Lint Filter

Check and clean the lint filter regularly to maintain washing efficiency and prevent lint buildup on clothes. The machine has a 'Full Lint Filter Indicator'.

TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed; Child lock activated.	Check power connection; Ensure lid is fully closed; Deactivate child lock.
Excessive vibration/noise	Machine not level; Uneven laundry load.	Adjust leveling feet; Redistribute laundry evenly.
Water not draining	Drain hose kinked or blocked; Drain pump malfunction.	Check and clear drain hose; Contact customer support if issue persists.
Error codes on LED display	Specific operational issue.	Refer to the full instruction manual for a list of error codes and their corresponding solutions.

For issues not listed here or if problems persist, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	BSW250045
Product Dimensions (D x W x H)	19.29"D x 19.29"W x 33.07"H
Capacity	1.31 cubic feet
Operation Mode	Fully Automatic
Number of Standard Cycles	8 (Normal, Spin, Wash, Strong, Fast Wash, Soft Wash, Wind Dry, Water Recycle)
Water Levels	6 Adjustable Levels
Material (Drum)	Stainless Steel
Special Features	Child Lock, Delay Start, Full Lint Filter Indicator, High Efficiency, Built-in Drain Pump

Feature	Detail
Color	White
Included Components	Cover, Drain Hose, Fill Hose, Power Cord





Image: BANGSON 1.31 Cu.Ft Portable Washing Machine.



Image: Energy-saving and quiet operation of the washing machine.

WARRANTY

This BANGSON Portable Washing Machine comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accident, unauthorized repair, or normal wear and tear.

CUSTOMER SUPPORT

For technical assistance, warranty claims, or any questions regarding your BANGSON Portable Washing Machine, please contact our customer support team. Refer to the contact information provided with your product packaging or visit the official BANGSON website for support details.

We are committed to providing excellent service and support for your product.

© 2026 BANGSON. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FP146258>

More documents and user manuals: <https://manuals.plus/>