

[Manuals.plus](#) /

› [Greadio](#) /

› Greadio Portable CD Player (Model CD-40) Instruction Manual

Greadio CD-40

Greadio Portable CD Player (Model CD-40) Instruction Manual

For Model: CD-40

PRODUCT OVERVIEW

The Greadio Portable CD Player (Model CD-40) is designed for personal audio playback, offering compatibility with various CD formats and additional features like TF card support and anti-skip protection. It features a built-in rechargeable battery for portable use. This device does not have a built-in speaker and requires headphones or external speakers for audio output.



Image: The Greadio Portable CD Player, showing its compact design and supported media types (CD, CD-R, CD-RW, MP3, WMA).

WHAT'S IN THE BOX

- Portable CD Player (1 unit)
- 3.5mm Earphones (1 pair)
- User Manual (1 copy)
- Type-C Charging Cable (1 unit)
- AUX Cable (1 unit)

SETUP

1. Initial Charging

Before first use, fully charge the CD player using the provided Type-C charging cable. Connect the cable to the player's charging port and a 5V 1A USB power adapter (not included). The built-in 1200mAh battery provides up to 11 hours of playback on a full charge.





FEATURE	OUR CD PLAYER	BASIC MODEL
POWER	✔ Built-in 1200mAh Battery	✘ 2xAA Batteries
CD FORMATS	✔ CD/CD-R/CD-RW/ MP3/WMA	✘ No MP3/WMA Support
Anti-Skip	✔ Advanced (30s CD / 60s MP3)	✔ Basic (60s)
CONVENIENCE	✔ Timer, Backlit LED	✘ No Timer, No Backlit
Gift-Ready Package	✔ Beautifully boxed, ideal for gifting	✘ Plain packaging only



Image: The CD player connected to a power source via its Type-C charging cable, indicating its rechargeable battery.

2. Connecting Headphones or External Speakers

This CD player does not have a built-in speaker. For audio output, you must connect headphones or external speakers.

1. **For Headphones:** Plug the included 3.5mm earphones into the headphone jack on the side of the player.
2. **For External Speakers/Car Audio (AUX):** Use the provided AUX cable. Connect one end to the player's headphone jack and the other end to the AUX input of your external speaker system or car stereo. Ensure your external device is set to AUX mode.

Anti-Skip, Smooth Playback Even on the Road

No more jumps enjoy smooth music playback

 **30s** /CD

 **60s** /MP3



Image: The portable CD player connected to a car's AUX input, demonstrating its use in a vehicle.

Your browser does not support the video tag.

Video: Demonstrates how to connect the CD player to a car stereo using the AUX cable.

OPERATING INSTRUCTIONS

1. Power On/Off and HOLD Switch

Locate the **HOLD** switch on the side of the player. Slide it to the **ON** position to enable all buttons and power on the device. If the controls are unresponsive, ensure the switch is not in the **HOLD** position. To power off, slide the switch to **OFF** or allow the auto power-off feature to activate after 20 minutes of inactivity.



Image: Detail of the HOLD switch, used to lock buttons and prevent accidental operation.

2. CD Playback

1. Open the CD compartment by gently lifting the lid.
2. Insert a CD (CD, CD-R, CD-RW, MP3, or WMA format) with the label side facing up.
3. Close the CD compartment firmly.
4. Press the **PLAY/PAUSE** button to begin playback.
5. Use the **PREV** and **NEXT** buttons to skip tracks. Long press these buttons to fast forward or rewind.
6. Adjust volume using the **VOL +/-** buttons.

Your browser does not support the video tag.

Video: Demonstrates how to use CD mode and TF mode on the player.

3. TF Card Playback

Insert a TF (MicroSD) card containing MP3 or WMA audio files into the TF card slot. The player will automatically switch to TF card mode and begin playback. This mode is ideal for audiobooks or educational content without requiring Wi-Fi or a screen.



Safe, Screen-Free Fun for Kids

HOLD switch prevents mistouches and TF cards support audiobooks or lessons



Image: A child inserting a TF card into the CD player, highlighting its use for screen-free learning.

4. Anti-Skip Protection

The player features a built-in anti-skip system: 60 seconds for MP3/WMA CDs and 30 seconds for standard audio CDs. This ensures uninterrupted playback, especially during movement or in a car.

1200mAh Battery with Long Playtime

Play Longer, saves money and hassle — no AA batteries needed.



**NO
SPEAKER**



**USE
EARBUDS**



5V 1A
Type-C Charging



11 HRS
Playtime



1200 mAh
Rechargeable

Image: The CD player on a car dashboard, emphasizing its anti-skip functionality for smooth playback while driving.

5. Programmable Playback & Sleep Timer

- **Programmable Playback:** Program up to 99 tracks in a desired order. Refer to the detailed user manual for specific programming steps.
- **Sleep Timer:** Set a sleep timer for 5, 15, 30, 60, 90, or 120 minutes. The player will automatically power off after the set time.

MAINTENANCE

- Keep the device clean and free from dust. Use a soft, dry cloth for cleaning.

- Avoid exposing the player to extreme temperatures, direct sunlight, or high humidity.
- Handle CDs and TF cards carefully to prevent scratches or damage.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	Battery is depleted; HOLD switch is engaged.	Charge the battery. Ensure the HOLD switch is in the OFF position.
No sound output.	Headphones/speakers not connected or volume too low; AUX mode not selected on external device.	Connect headphones or external speakers. Increase volume. Ensure external device is set to AUX mode.
CD skips or does not play.	CD is dirty or scratched; incorrect CD format.	Clean the CD with a soft cloth. Ensure the CD format (CD, CD-R, CD-RW, MP3, WMA) is supported.
Buttons are unresponsive.	HOLD switch is engaged.	Slide the HOLD switch to the OFF position.
TF card not recognized.	TF card inserted incorrectly; unsupported file format.	Reinsert the TF card correctly. Ensure files are MP3 or WMA format.
Low volume in car via AUX.	Car stereo volume is low.	Increase the volume on your car stereo.
CD difficult to remove.	CD may be slightly stuck.	Gently lift the CD from the edges. Avoid excessive force.

SPECIFICATIONS

Feature	Detail
Brand	Greadio
Model Name	Portable CD Player with Headphones
Model Number	CD-40
Color	Blue
Connectivity Technology	Auxiliary
Special Features	Anti-Skip Protection, CD-R/RW Compatible, Portable, Rechargeable
Number of Discs	1
Supported Audio Formats	CD, CD-R, CD-RW, MP3, WMA

Feature	Detail
Connector Type	3.5mm Jack
Specific Uses	Car Use, Home Use
Number of Channels	2
Media Format Type	Audio CD
Battery Average Life	11 hours
Compatible Devices	Headphone
Headphones Jack	3.5mm Jack
Number of Batteries	1 Lithium Polymer (included)
Item Dimensions (L x W x H)	5.2"L x 6.1"W x 1.18"H
Item Weight	8.32 ounces

WARRANTY AND SUPPORT

The Greadio Portable CD Player comes with a **12-month warranty**. For any questions, issues, or support needs, please contact Greadio customer service. We are committed to providing assistance and ensuring your satisfaction. Greadio offers 24/7 service and support in over 100 regions. Our products are built with patented technology and backed by a dedicated R&D team.



24/7 Service

Base lifetime service offices in Seattle and Burlin for a top-notch customer experience.



100+ Regions

We are present in more than 100 regions from North America to Europe.



100+ Patents

We are committed to the spirit of innovation, creating thoughtful lives for the world.

Image: Greadio's commitment to customer service, global presence, and patented technology.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question