

## PARIS RHÔNE PE-EK022

# PARIS RHÔNE 1.7L Electric Kettle

MODEL: PE-EK022 - INSTRUCTION MANUAL

## 1. Introduction

Thank you for choosing the PARIS RHÔNE 1.7L Electric Kettle. This appliance is designed to provide hot water quickly and efficiently, with precise temperature control for various beverages. Please read this instruction manual thoroughly before use to ensure safe and optimal operation.

## 2. Safety Instructions

- Always ensure the kettle is placed on a stable, flat, heat-resistant surface away from the edge of the countertop.
- Do not immerse the kettle, power base, cord, or plug in water or any other liquid.
- Do not operate the kettle if the power cord or plug is damaged, or if the kettle malfunctions or has been dropped.
- Keep the kettle out of reach of children and pets.
- Do not fill the kettle above the 'MAX' line or below the 'MIN' line to prevent boiling over or boil-dry damage.
- Always close the lid securely before operating the kettle.
- Exercise extreme caution when pouring hot water.
- The exterior of the kettle may become hot during operation. Avoid touching hot surfaces. Use the handle only.
- Unplug the kettle from the power outlet when not in use and before cleaning.

## 3. Product Overview

The PARIS RHÔNE Electric Kettle is designed for ease of use and durability, featuring a sleek design and advanced functionalities.



Image: Front view of the PARIS RHÔNE 1.7L Electric Kettle, showcasing its digital display and control buttons.

- **Digital Display:** Shows real-time water temperature and selected preset.
- **Control Panel:** Intuitive buttons for temperature selection and operation.
- **1.7L Capacity:** Large enough for multiple servings.
- **304 Stainless Steel Interior:** Ensures clean, pure water and easy cleaning.
- **Double-Wall Construction:** Keeps the exterior cool to the touch for safety.

## 4. Setup

1. **Unpacking:** Carefully remove all packaging materials from the kettle and its accessories. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, fill the kettle with water to the 'MAX' line. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, and stable surface. Ensure the power cord is not dangling where it can be pulled or tripped over.

## 5. Operating Instructions

---

### 5.1. Filling the Kettle

- Press the lid release button to open the lid.
- Fill the kettle with fresh, cold water between the 'MIN' and 'MAX' fill lines.
- Close the lid firmly until it clicks into place.

### 5.2. Powering On and Temperature Selection

1. Place the filled kettle securely on the power base.
2. Plug the power cord into a suitable electrical outlet. The digital display will illuminate.
3. Press the **TEMP** button to cycle through the 6 preset temperatures:

# 6 Pre-Set Temperatures



*Image: Digital display showing various temperature presets for different types of tea and coffee.*

- 165°F (Delicate)
- 175°F (White Tea)
- 180°F (Green Tea)
- 190°F (Oolong Tea)
- 200°F (Coffee)
- 212°F (Boil/Black Tea)

The digital display will show the selected temperature and the real-time water temperature as it heats.

## Real-Time TEMP Display



*Image: Close-up of the kettle's digital screen, indicating the current water temperature.*

### 5.3. Rapid Boiling

The 1500W heating element ensures rapid boiling, reaching your desired temperature in 3-8 minutes depending on the water volume.

# 1500W Fast Boiling Water

Rapid boil 1.7L water in 3-7 mins



Auto  
Shut-off



Boil-Dry  
Protection



*Image: Cross-section view of the kettle illustrating the 1500W heating element rapidly boiling water.*

## 5.4. Keep Warm Function

After reaching the set temperature, the kettle can maintain the water temperature for up to 4 hours. This feature is automatically activated when a preset is selected.

# Keep Warm for 4 Hours



*Image: Kettle on a wooden desk, indicating the 'Keep Warm for 4 Hours' feature is active.*

## 5.5. Automatic Shut-Off and Boil-Dry Protection

For safety, the kettle automatically shuts off once the water has boiled or reached the set temperature. It also features boil-dry protection, which turns off the heating element if the kettle is accidentally switched on without water or if the water level is too low.

## 5.6. Pouring

The kettle's handle and double-wall construction are designed to remain cool to the touch, allowing for safe and comfortable pouring.

# Safe To Touch

Double-wall cool-touch construction



*Image: A hand pouring hot water from the kettle into a glass, demonstrating the safe-to-touch exterior.*

## 5.7. Official Product Video

*Video: An official product video from PARIS RHÔNE demonstrating the Electric Kettle Temperature Control features and usage.*

## 6. Maintenance and Cleaning

### 6.1. General Cleaning

- Always unplug the kettle and allow it to cool completely before cleaning.

- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- The interior of the kettle is made of food-grade 304 stainless steel, which is easy to clean. Rinse with water and wipe with a soft cloth.



*Image: Close-up of the kettle's interior, highlighting the 100% food-grade 304 stainless steel material.*

## 6.2. Descaling

Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale:

1. Fill the kettle with a mixture of 1 part white vinegar and 2 parts water.
2. Bring the mixture to a boil and let it stand for at least 30 minutes, or longer if the scale is heavy.

3. Discard the mixture and rinse the kettle thoroughly with fresh water several times.
4. For stubborn deposits, a non-abrasive descaling solution designed for kettles can be used following the product's instructions.

## 7. Troubleshooting

Problem	Possible Cause	Solution
Kettle does not heat.	Not plugged in; power outage; kettle not properly seated on base.	Check power connection; ensure kettle is correctly placed on base.
Kettle shuts off prematurely.	Boil-dry protection activated (low/no water).	Ensure adequate water level; allow kettle to cool before refilling.
Water has an unusual taste.	New appliance odor; mineral deposits.	Perform initial cleaning steps again; descale the kettle.
Limescale buildup.	Hard water deposits.	Descale the kettle regularly as per cleaning instructions.

## 8. Specifications



Image: The PARIS RHÔNE Electric Kettle with its product dimensions clearly marked.

Feature	Detail
Model Number	PE-EK022
Brand	PARIS RHÔNE
Capacity	1.7 Liters
Material	Stainless Steel
Power	1500W
Product Dimensions	9.37 x 6.18 x 10.31 inches
Item Weight	3.39 pounds
Special Features	Automatic Shut-Off, Boil Dry Protection, Digital Display, Double Wall, Temperature Control, 6 Presets, 4H Keep Warm

## 9. Warranty and Support

The PARIS RHÔNE Electric Kettle comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use.

For technical support, warranty claims, or any questions regarding your product, please contact PARIS RHÔNE customer service. Refer to the contact information provided on the product packaging or the official PARIS RHÔNE website.