

FEZIBO YJJF-SD0042-140BLA-01

FEZIBO Electric Standing Desk User Manual

Model: YJJF-SD0042-140BLA-01

1. INTRODUCTION

Thank you for choosing the FEZIBO Electric Standing Desk. This manual provides essential information for the safe assembly, operation, and maintenance of your new desk. Please read these instructions carefully before use and retain them for future reference.



The FEZIBO Electric Standing Desk offers flexible sit-stand functionality, promoting a healthier work environment.

This electric standing desk is designed to offer a wide range of height adjustments, allowing users of various heights to find their optimal working posture. It features convenient memory presets, quiet operation, and an advanced anti-collision system for enhanced safety.

2. SAFETY PRECAUTIONS

- Ensure all components are securely fastened before use.
- Keep children and pets away from the desk during operation to prevent injury.

- Do not place hands or objects near moving parts of the desk frame.
- Avoid overloading the desk beyond its specified weight capacity.
- Disconnect power before cleaning or performing any maintenance.
- The desk is equipped with an anti-collision feature. If an obstruction is detected, the desk will automatically stop its movement within 0.2 seconds. However, always exercise caution during height adjustments.

衝突防止

衝突時に0.2秒以内に自動収納します



The anti-collision system automatically stops desk movement upon detecting an obstruction, enhancing user safety.

3. PACKAGE CONTENTS


Please verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Desktop (140cm x 80cm, Black)
- Desk Frame (Black, High-strength steel)
- Control Panel with LED Display
- Motor System
- Power Adapter and Cable
- Assembly Hardware (screws, tools)
- Cable Management Accessories
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two people. Follow the step-by-step instructions provided in the included assembly guide. Ensure all connections are tight and stable.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Attach the lifting columns to the desk feet using the provided screws.
3. Connect the crossbar to the lifting columns.
4. Secure the desktop to the assembled frame. Ensure the desktop is correctly oriented, especially for the L-shaped corner design.
5. Mount the control panel to the underside of the desktop in an easily accessible location.
6. Connect all motor and control cables to the control box and power adapter.
7. Use the provided cable management accessories to organize cables neatly.

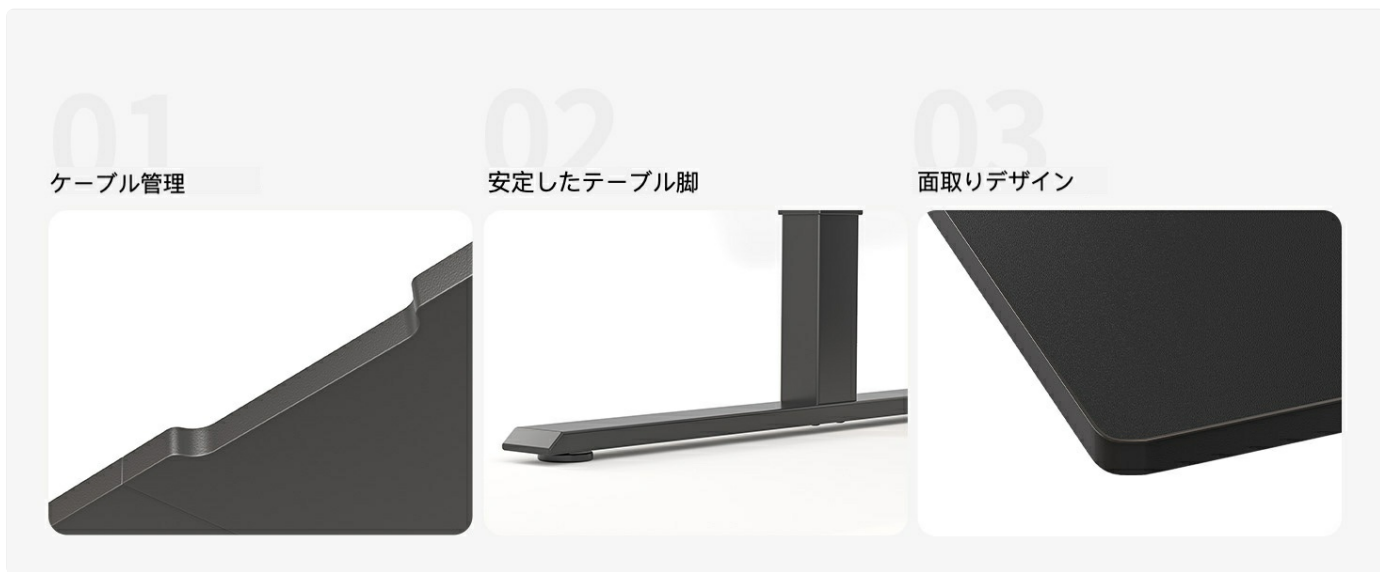

The desk features integrated cable management, stable legs, and a chamfered design for safety and aesthetics.

5. OPERATING INSTRUCTIONS

5.1 Initial Setup and Calibration

After assembly, connect the power cable. The desk may require initial calibration. Press and hold the 'Down' button until the desk reaches its lowest point, then release. The desk is now ready for use.

5.2 Height Adjustment

Use the 'Up' (▲) and 'Down' (▼) buttons on the control panel to adjust the desk height. The LED display will show the current height in centimeters.



多機能コントロールパッド

高さを28.3インチから46.5インチに設定


多機能インテリジェントキーパッド



アップ ダウン



チャイルドロック

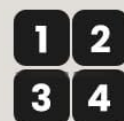

メモリーボタン

The multi-functional control pad allows precise height adjustments and access to memory presets.

5.3 Memory Presets

The desk allows you to save up to four preferred height settings for quick recall.

1. Adjust the desk to your desired height using the 'Up' or 'Down' buttons.
2. Press the 'M' button (if present, or follow specific instructions for your model's memory set button).
3. Immediately press one of the numbered preset buttons (1, 2, 3, or 4) to save the current height to that position.
4. To recall a saved height, simply press the corresponding numbered preset button.



The control panel features an LED display, up/down controls, and four memory buttons for customized height settings.

5.4 Child Lock Function

To prevent accidental operation, especially by children, the desk includes a child lock feature.

- **To Lock:** Press and hold buttons '1' and '2' simultaneously for 3 seconds. The display may show 'LOC' or a lock icon.
- **To Unlock:** Press and hold buttons '1' and '2' simultaneously again for 3 seconds. The display will return to showing the height.



Activate the child lock by pressing '1' and '2' for 3 seconds to prevent unintended desk movement.

5.5 Quiet Operation

The desk operates with a low noise level of approximately 45dB, comparable to a library environment. This ensures minimal disturbance during use, even in quiet settings.



安定した静かなリフトシステム

80dB 60dB **45dB**

シティラトル 普通の会話 このデスクの操作

The image shows a black desk with a cat resting on it. A hand is pressing one of the buttons on the control panel. Below the desk, a sound level comparison diagram shows three waveforms: a noisy one labeled '80dB シティラトル' (City Rattle), a medium one labeled '60dB 普通の会話' (Normal Conversation), and a quiet one labeled '45dB このデスクの操作' (Operation of this desk). The 45dB level is highlighted in a blue box.

Enjoy quiet operation at approximately 45dB, ensuring a peaceful work environment.

6. MAINTENANCE

- Regularly check all screws and bolts to ensure they are tight.
- Clean the desktop surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- Keep the motor and electrical components free from dust and moisture.
- Do not attempt to disassemble or repair the motor or control system yourself. Contact qualified service personnel if issues arise.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk does not move	Power cable disconnected; Child lock active; Overload	Check power connection; Deactivate child lock; Reduce weight on desk.
Uneven height adjustment	Desk not calibrated; Obstruction	Perform calibration (hold 'Down' button); Check for obstructions.
Error code on display	System malfunction	Refer to the full manual for specific error codes or contact customer support.
Desk stops unexpectedly	Anti-collision activated	Remove any obstructions and resume operation.

8. SPECIFICATIONS

- Brand:** FEZIBO
- Model Number:** YJJF-SD0042-140BLA-01
- Desktop Dimensions (W x D):** 140 cm x 80 cm
- Height Adjustment Range:** 72 cm - 118 cm (28.3 inches - 46.5 inches)
- Desktop Material:** Low-formaldehyde Melamine
- Frame Material:** High-strength Steel
- Noise Level:** Approximately 45 dB
- Features:** 4 Memory Presets, Anti-Collision System, Child Lock



Detailed dimensions of the FEZIBO Electric Standing Desk.

9. WARRANTY AND SUPPORT

FEZIBO products are designed for durability and reliability. For warranty information, product support, or to report any issues, please contact FEZIBO customer service through the retailer where you purchased the product or visit the official FEZIBO website. Please have your model number (YJJF-SD0042-140BLA-01) and purchase date ready when contacting support.

For additional resources and product information, you may visit the [FEZIBO Store on Amazon](#).

© 2024 FEZIBO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question