

MAXLEGEN M14

MAXLEGEN M14 14-inch Android 15 Tablet User Manual

Model: M14 | Brand: MAXLEGEN

INTRODUCTION

Thank you for choosing the MAXLEGEN M14 14-inch Android 15 Tablet. This manual provides essential information to help you set up, operate, and maintain your device. The M14 tablet features a 14-inch 2.5K display, an Octa-Core processor, 36GB RAM, 256GB internal storage (expandable up to 1TB), 4G LTE+5G connectivity, and a powerful 11580mAh battery. Its sleek design and robust features make it suitable for various uses, from entertainment to productivity.



Image: The MAXLEGEN M14 tablet displayed with its protective case acting as a stand, highlighting its large screen and modern aesthetic.

WHAT'S IN THE BOX

Ensure all items are present upon unboxing:

- MAXLEGEN M14 14-inch Android 15 Tablet
- Protective Case
- Stylus
- Earphones
- USB-C Cable
- 20W Fast Charger
- SIM Ejection Tool

Erfüllen Sie Ihren täglichen Bedarf



11580mAh
Large-capacity Lithium Battery

18W
Type-C Fast Charging

Spielen Sie überall mit LTE



4G 4G TDD+FDD
LTE-Unterstützung

VoLTE
Appeler & Parcourir

Schnelle Verbindung



2.4G+5G
AC dual band Wi-Fi

Bluetooth 5.0

Führe deinen Weg



4-Mode
Satellite Positioning

A-GPS
Assisted Positioning

Image: The MAXLEGEN M14 tablet shown with its accompanying stylus and protective case, illustrating the complete package contents.

SETUP

1. Initial Charging

Before first use, fully charge the tablet using the provided 20W fast charger and USB-C cable. Connect the USB-C cable to the tablet's charging port and the charger to a power outlet. The battery indicator on the screen will show charging progress.

2. Power On/Off

- To power on: Press and hold the Power button until the MAXLEGEN logo appears.
- To power off: Press and hold the Power button, then select "Power off" from the options.
- To restart: Press and hold the Power button, then select "Restart" from the options.

3. Initial Setup Wizard

Follow the on-screen instructions to complete the initial setup, which includes:

- Language selection
- Wi-Fi network connection
- Google account sign-in (optional, but recommended for full Android functionality)
- Date and time settings
- Security settings (PIN, pattern, password, or facial recognition)

4. SIM Card and MicroSD Card Installation

The tablet supports Dual Nano 4G LTE SIM cards and a microSD card for expandable storage up to 1TB.

1. Locate the SIM/microSD card tray on the side of the tablet.
2. Insert the SIM ejection tool into the small hole next to the tray to open it.
3. Place the Nano SIM card(s) and/or microSD card into the designated slots on the tray. Ensure correct orientation.
4. Gently push the tray back into the tablet until it clicks into place.

OPERATING INSTRUCTIONS

Display and Visuals

The MAXLEGEN M14 features an impressive 14-inch 2.5K IPS Incell display with a resolution of 2240 x 1400 pixels. This provides sharp details, vibrant colors, and wide viewing angles. The integrated blue light filter helps protect your eyes and reduces fatigue during extended use.



Image: The tablet screen showcasing its 2.5K QHD Incell display with vibrant content, emphasizing the visual quality.

Performance and Storage

Powered by Android 15 and an Octa-Core 2.0 GHz processor, the M14 tablet ensures smooth multitasking and efficient application performance. With 36GB of RAM (12GB base + 24GB expandable) and 256GB of internal storage, you have ample space for apps and files. Storage can be further expanded up to 1TB using a microSD card.

Connectivity

Stay connected with dual-band Wi-Fi (2.4G/5G), Bluetooth 5.0 for faster and more stable connections, and Dual Nano 4G LTE SIM support for cellular data and calls. The tablet also features a 3.5mm headphone jack.

Camera and Audio

The M14 tablet is equipped with an 8MP front camera for clear video calls and a 13MP rear camera for capturing photos and videos. Four stereo speakers with noise reduction technology provide an immersive audio experience.



Image: Close-up of the tablet's rear camera module, highlighting the AI Dual Camera setup and LED flash.

Battery Management

The 11580mAh battery provides extended usage time. Use the included 20W fast charger to quickly recharge your tablet. To optimize battery life, adjust screen brightness, close unused applications, and disable unnecessary connectivity features.

Smart Features

- **GPS Functionality:** Utilize the built-in GPS for navigation with Google Maps and offline maps.
- **Wireless Screen Mirroring:** Easily share content from your tablet to a compatible TV or display.
- **Facial Recognition:** Securely unlock your device using facial recognition.
- **Split Screen Function:** Use multiple applications simultaneously for enhanced productivity.
- **Parental Controls:** Create a safe environment for children with integrated parental control features.
- **TÜV Certified Eye-Care Display:** The display is certified to reduce eye strain.

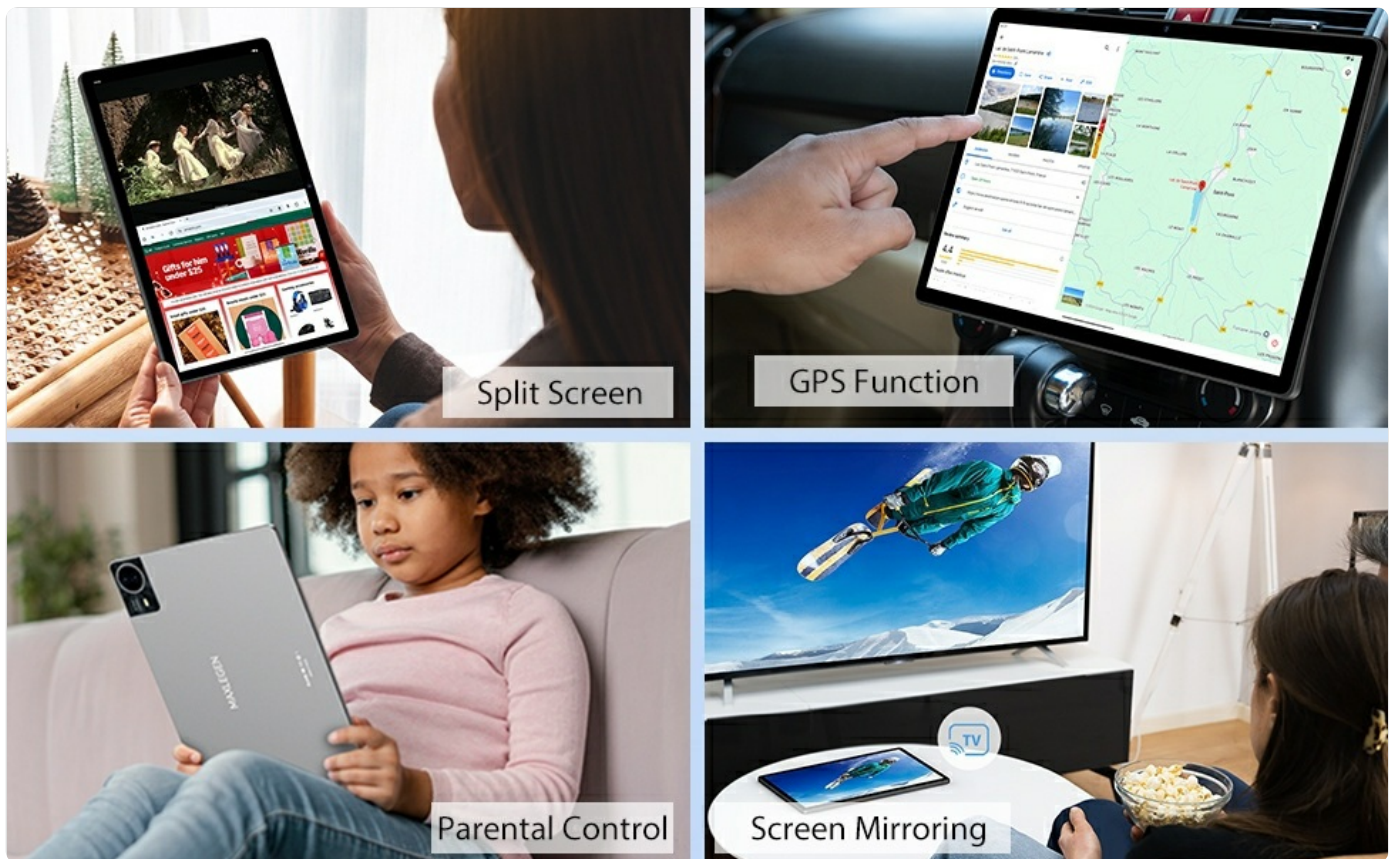


Image: A collage illustrating various smart features of the MAXLEGEN M14 tablet, including split-screen multitasking, GPS navigation, parental controls, and wireless screen mirroring.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive cleaners or solvents.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and security.
- **Storage Management:** Periodically clear unnecessary files and apps to free up storage space.
- **Temperature:** Avoid exposing the tablet to extreme temperatures (hot or cold) or direct sunlight for prolonged periods.
- **Water Resistance:** The tablet is not water-resistant. Keep it away from liquids.

TROUBLESHOOTING

Tablet does not power on:

Ensure the tablet is fully charged. Connect it to the charger and wait a few minutes before attempting to power it on again.

Screen is unresponsive:

Try restarting the tablet. If the issue persists, perform a factory reset (note: this will erase all data).

Wi-Fi connection issues:

Check if Wi-Fi is enabled. Restart your router and the tablet. Ensure you are within range of the Wi-Fi network and have entered the correct password.

Slow performance:

Close unused applications. Clear cache and data for frequently used apps. Consider uninstalling unnecessary apps or moving large files to a microSD card.

Battery drains quickly:

Reduce screen brightness. Disable GPS, Bluetooth, and Wi-Fi when not in use. Close background apps. Check battery usage in settings to identify power-hungry applications.

SPECIFICATIONS

Feature	Detail
Model	M14
Brand	MAXLEGEN
Operating System	Android 15
Processor	Octa-Core 2.0 GHz (MediaTek)
RAM	36 GB (12GB + 24GB expandable)
Internal Storage	256 GB
Expandable Storage	Up to 1 TB via microSD
Display Size	14 inches
Display Resolution	2240 x 1400 Pixels (2.5K QHD IPS Incell)
Rear Camera	13 MP
Front Camera	8 MP
Battery Capacity	11580 mAh (Lithium-polymer, 20 Wh)
Charging	20W Fast Charging (USB Type-C)
Connectivity	Dual Nano 4G LTE SIM, Dual-band Wi-Fi (2.4G/5G), Bluetooth 5.0
Audio	Four Stereo Speakers, 3.5mm Headphone Jack
Navigation	GPS
Dimensions (L x W x Thickness)	35 cm x 20 cm x 0.8 cm

WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contact details is not available in this manual. Please refer to the product packaging or the manufacturer's official website for warranty registration and support options.

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found in the provided product data to embed in this manual.

