

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Giantex](#) /

› [Giantex Portable Twin Tub Washing Machine \(Model: GX11059US-GR-PF\) - Instruction Manual](#)

Giantex GX11059US-GR-PF

Giantex Portable Twin Tub Washing Machine

Model: GX11059US-GR-PF



Image: Front view of the Giantex Portable Twin Tub Washing Machine in Grey and White.

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Giantex Portable Twin Tub Washing Machine. Designed for convenience in small living spaces, this appliance features a dual-tub system for both washing and spin-drying, offering a practical laundry solution for apartments, dorms, RVs, and similar environments.

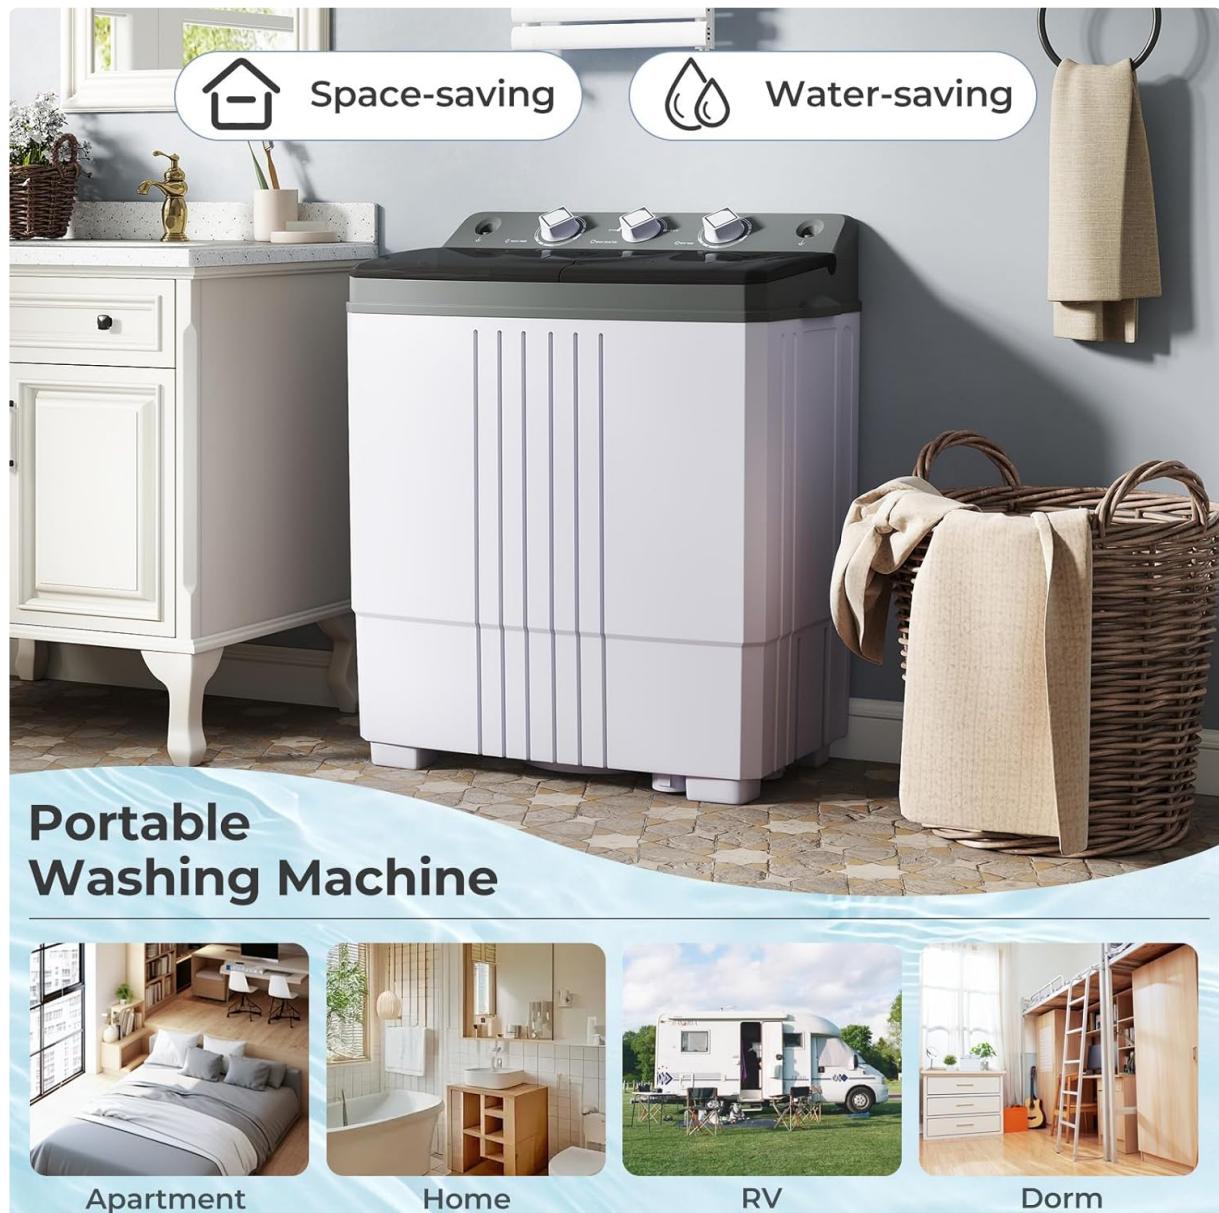


Image: The portable washing machine shown in different compact settings like an apartment, home, RV, and dorm room, highlighting its space-saving design.

2. SAFETY INSTRUCTIONS

- Always unplug the machine from the power outlet when not in use, before cleaning, or before performing any maintenance.
- Do not operate the machine with wet hands or in excessively wet environments to prevent electrical shock.
- Ensure the machine is placed on a stable, level surface to prevent tipping or excessive vibration during operation.
- Keep children and pets away from the machine during operation.
- The motor and drain pump are equipped with overheating protection. If they overheat, restart them after 30-60 minutes of cooling.
- The drain hose should not be submerged in water to prevent drain issues or siphoning.

- Do not wash items that are waterproof or water-resistant, as this may cause an unbalanced load and excessive vibration.

3. PRODUCT OVERVIEW

Your portable washing machine features a twin-tub design, separating washing and spin-drying functions for optimal performance. The control panel offers intuitive knobs for managing wash time, wash mode, and spin time.



Image: Close-up view of the control panel, showing the Wash Timer, Wash Selector (Gentle/Normal/Drain), and Spin Timer knobs, along with water inlets.


Key Components:

- **Wash Tub:** For washing clothes (12 lbs capacity).
- **Spin Tub:** For spin-drying clothes (8 lbs capacity).
- **Control Panel:** Features knobs for Wash Timer, Wash Selector, and Spin Timer.
- **Water Inlets:** Two inlets for adding water to the wash tub.
- **Drain Hose:** For expelling dirty water.
- **Detachable Lint Filter:** Located inside the wash tub to collect lint.
- **Safety Cover:** Prevents items from spinning out during the spin cycle.

Well Crafted Details



Convenient Handle

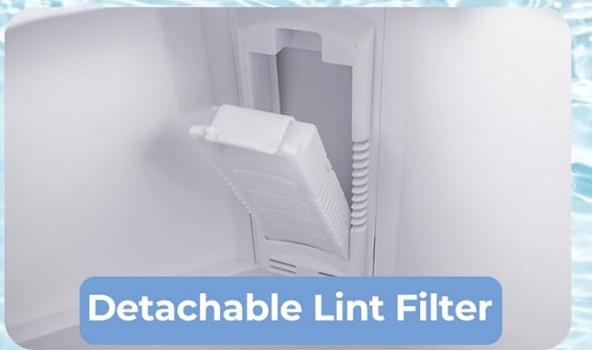

Detachable Lint Filter



Safety Cover



Cable Holder



Stable Feet

Image: Detailed views of the machine's features, including a convenient handle, detachable lint filter, cable holder for neat management, and stable feet.

4. SETUP

- Placement:** Position the washing machine on a firm, level surface. Ensure it is in an area where water can be easily drained, such as a bathtub, shower, or near a floor drain.
- Water Connection:** Connect the provided inlet hose to a faucet. Alternatively, you can manually fill the wash tub using a bucket.
- Drain Hose Positioning:** Ensure the drain hose is positioned lower than the machine's base for gravity drainage. It should lead directly into a drain or a large bucket.
- Power Connection:** Plug the power cord into a standard 110-120V, 60Hz electrical outlet.



Image: The portable washing machine demonstrating its easy drainage system with a 48-inch inlet hose and a 39.5-inch outlet hose, along with a built-in drain pump.

5. OPERATING INSTRUCTIONS

5.1. Washing Cycle

1. Add clothes to the wash tub. Do not exceed the 12 lbs capacity.
2. Add water to the wash tub via the water inlet or manually with a bucket. Fill to the desired level based on load size.
3. Add a small amount of laundry detergent.
4. Set the **Wash Selector** knob to 'NORMAL' for regular loads or 'GENTLE' for delicate items.
5. Turn the **Wash Timer** knob to the desired wash time (up to 15 minutes). The machine will start washing.
6. Close the wash tub lid during operation.



Image: The twin tubs illustrating their respective capacities: 12 lbs for washing and 8 lbs for spin-drying, suitable for various clothing types.

5.2. Rinsing Cycle

1. Once the wash cycle is complete, turn the **Wash Selector** knob to 'DRAIN' to empty the dirty water from the wash tub.
2. Refill the wash tub with clean water.
3. Set the **Wash Timer** for 3-4 minutes to rinse the clothes.
4. After rinsing, turn the **Wash Selector** knob to 'DRAIN' again to empty the rinse water.

5.3. Spin Drying Cycle

1. Transfer the wet clothes from the wash tub to the spin tub. Ensure the clothes are evenly distributed to prevent imbalance (max 8 lbs).
2. Place the white spin cap firmly on top of the clothes in the spin tub to prevent small items from spinning out.
3. Close the spin tub lid.
4. Turn the **Spin Timer** knob to the desired time (up to 5 minutes). The spin dryer will start.
5. Ensure the **Wash Selector** is set to 'DRAIN' during the spin cycle to allow water to exit.
6. After the spin cycle, clothes will be approximately 70-80% dry and can be air-dried or hung to finish.

6. MAINTENANCE

6.1. Cleaning the Lint Filter

- Regularly remove the detachable lint filter from the wash tub.
- Clean any accumulated lint or debris from the filter under running water.
- Reinsert the clean lint filter securely into its position in the wash tub.

6.2. Cleaning the Exterior

- Wipe the exterior of the machine with a soft, damp cloth.
- Avoid using abrasive cleaners or solvents that could damage the surface.

6.3. Storage

- After each use, ensure all water is drained from both tubs and hoses.
- Wipe down the interior and exterior to prevent mold or mildew.
- Store the machine in a dry, well-ventilated area, away from direct sunlight or extreme temperatures.

7. TROUBLESHOOTING

- **Machine not starting:** Check if the power cord is securely plugged in. Ensure the timer knobs are set correctly.
- **Water not draining:** Verify that the drain hose is positioned lower than the machine and is not kinked or blocked. Ensure the Wash Selector is set to 'DRAIN'.
- **Excessive vibration during spin:** This usually indicates an unbalanced load in the spin tub. Redistribute clothes evenly. Ensure the machine is on a stable, level surface.
- **Poor washing results:** Avoid overloading the wash tub. Use the recommended amount of detergent. Ensure sufficient water is added for the load size.

8. SPECIFICATIONS

Brand	Giantex
Model	GX11059US-GR-PF
Material	Polypropylene (PP)
Overall Product Dimensions	25" L x 15.5" W x 29" H
Wash Tub Capacity	12 lbs
Spin Tub Capacity	8 lbs
Rated Voltage	110-120V
Rated Frequency	60Hz
Rated Input Power (Washing)	260W
Rated Input Power (Spin)	140W
Net Weight	30 lbs

Inlet Hose Length	48 inches
Outlet Hose Length	39.5 inches

9. WHAT'S IN THE Box

- 1 x Twin Tub Washing Machine
- 1 x Inlet Hose Kit
- 1 x Drain Hose
- 1 x Instruction Manual

10. WARRANTY & SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official Giantex website. Keep your purchase receipt for any warranty claims.