

[Manuals.plus](#) /

> [GITAWUSA](#) /

> GITAWUSA Kids Toy Storage Organizer with 3 Tiers and 9 Bins - Instruction Manual

GITAWUSA Kids Toy Storage Organizer 3-Tier 9-Bin

GITAWUSA Kids Toy Storage Organizer with 3 Tiers and 9 Bins - Instruction Manual

Model: Kids Toy Storage Organizer 3-Tier 9-Bin

INTRODUCTION

Thank you for choosing the GITAWUSA Kids Toy Storage Organizer. This manual provides detailed instructions for assembly, proper use, maintenance, and troubleshooting to ensure the longevity and optimal functionality of your product. Please read this manual thoroughly before assembly and use.

SAFETY INFORMATION

- Keep all small parts and packaging materials away from children during assembly to prevent choking hazards.
- Ensure all screws and fasteners are securely tightened before use. Periodically check for loose connections.
- Do not allow children to climb on the organizer.
- Place the organizer on a flat, stable surface to prevent tipping.
- This product is designed for toy and book storage. Do not overload shelves or bins.

PACKAGE CONTENTS


Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Wooden frame components (shelves, side panels)
- 9 x Removable plastic storage bins
- Assembly hardware (screws, dowels, etc.)
- 3 x Removable hooks

Designed Specifically for Children



Rounded Corners

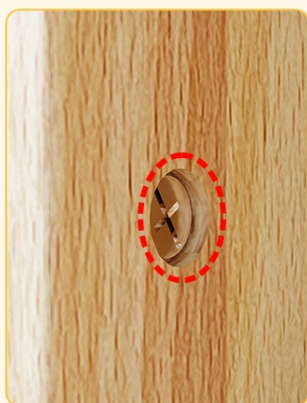

Hidden Screw Tips



Easy to Clean



Stable Structure

Figure 1: Illustration of the various storage components included with the organizer.

SETUP AND ASSEMBLY

Tools required: Phillips head screwdriver (not included).

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Side Panels:** Attach the horizontal shelf supports to the vertical side panels using the provided screws. Ensure the pre-drilled holes align.
3. **Install Shelves:** Slide the wooden shelves into the assembled side panels. Secure them with screws as indicated in the diagram.
4. **Attach Back Panel (if applicable):** If a back panel is included, attach it now to enhance stability.
5. **Insert Storage Bins:** Place the 9 plastic storage bins onto the designated tiers.
6. **Attach Hooks:** Secure the removable hooks to the side of the organizer for additional hanging storage.
7. **Final Check:** Verify that all connections are tight and the organizer is stable.

Keep the Space Tidy Cultivate children's habit of organizing



Figure 2: Visual guide for assembling the wooden frame components.

OPERATING INSTRUCTIONS

The GITAWUSA Kids Toy Storage Organizer is designed for easy access and organization of children's items.

- **Toy Storage:** Use the 9 removable bins to sort and store various toys. The bins are designed for easy removal and placement by children.
- **Book Storage:** The side shelves are ideal for organizing books, puzzles, or larger toys.
- **Hanging Items:** Utilize the side hooks for hanging hats, bags, or other small accessories.
- **Encourage Organization:** The low height and accessible design promote independent cleanup habits in children.



Figure 3: The organizer functioning as both a toy organizer and a bookshelf.

CARE AND MAINTENANCE

- **Cleaning the Frame:** Wipe the wooden frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Cleaning the Bins:** The plastic bins can be easily removed and washed with mild soap and water. Rinse thoroughly and air dry before returning to the organizer.
- **Regular Inspection:** Periodically check all screws and connections to ensure they remain tight. Tighten if necessary.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight may cause fading or warping of the wood.



Figure 4: A hand wiping the organizer, highlighting its easy-to-clean surfaces.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Organizer is wobbly.	Screws are loose or not fully tightened. Uneven floor surface.	Ensure all assembly screws are securely tightened. Move the organizer to a flat, level surface.

Problem	Possible Cause	Solution
Bins do not fit properly.	Bins are inserted incorrectly or frame is misaligned.	Remove bins and re-insert, ensuring they slide smoothly into the tracks. Check frame assembly for any misalignments.
Missing parts during assembly.	Packaging error.	Contact customer support with your purchase details for replacement parts.

SPECIFICATIONS

- **Brand:** GITAWUSA
- **Model:** Kids Toy Storage Organizer 3-Tier 9-Bin
- **Material:** Wood frame, plastic bins
- **Overall Dimensions:** Approximately 42.13" (L) x 11.69" (W) x 31.5" (H)
- **Item Weight:** 34 pounds
- **Storage Capacity:** 3 tiers, 9 removable bins, additional side shelving



Figure 5: Detailed dimensions of the GITAWUSA Kids Toy Storage Organizer.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to your purchase documentation or contact the seller directly. Keep your proof of purchase for any warranty claims.

Seller: Tianlu shuzi

Amazon Store: [GITAWUSA Store](#)

