

## Savetek GS-R6Clip

# Savetek GS-R6Clip 32GB Digital Voice Recorder and MP3 Player User Manual

- [Introduction](#)
- [Safety Information](#)
- [Package Contents](#)
- [Product Overview](#)
- [Setup](#)
- [Operating Instructions](#)
- [Maintenance](#)
- [Troubleshooting](#)
- [Specifications](#)
- [Warranty & Support](#)

## 1. INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your Savetek GS-R6Clip 32GB Digital Voice Recorder and MP3 Player. Please read this manual thoroughly before using the device to ensure proper function and to maximize its capabilities. This device is designed for capturing high-quality audio and playing back MP3 files, featuring voice-activated recording, noise cancellation, and a compact design.

## 2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or modify the device. This will void the warranty.
- Use only the provided charging cable and accessories.
- Store the device out of reach of children.

## 3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Savetek GS-R6Clip Digital Voice Recorder
- Earphones
- Charging Cable (USB 2.0)
- OTG Adapter (for smartphone connection)
- User Manual

# Package Include



Image 3.1: All components included in the Savetek GS-R6Clip package.

## 4. PRODUCT OVERVIEW

---

The Savetek GS-R6Clip is a compact and versatile digital voice recorder. Familiarize yourself with its key features and physical attributes.

# Digital Voice Recorder

Multifunctional & Easy voice recording



Image 4.1: Key features of the Savetek GS-R6Clip Digital Voice Recorder.



Image 4.2: Front and back view of the device, showing the metal clip.



Image 4.3: Device dimensions.

## 5. SETUP

---

### 5.1 Charging the Device

Before first use, fully charge the device. Connect the provided USB charging cable to the device's USB port and the other end to a computer's USB port or a USB wall adapter (not included). The charging indicator will show the charging status and turn off when fully charged.

### 5.2 Powering On/Off

- **To Power On:** Slide the 'ON/OFF' switch to the 'ON' position. The screen will light up.
- **To Power Off:** Slide the 'ON/OFF' switch to the 'OFF' position. The device will save any current recording and shut down.

### 5.3 Connecting to a Computer or Smartphone

To transfer files, connect the device to a computer using the USB cable. The device will appear as a removable disk. For smartphone connection, use the provided OTG adapter to connect the recorder to your Android smartphone. This allows for direct file transfer.

## Micro USB OTG cable for Android, Transfer files

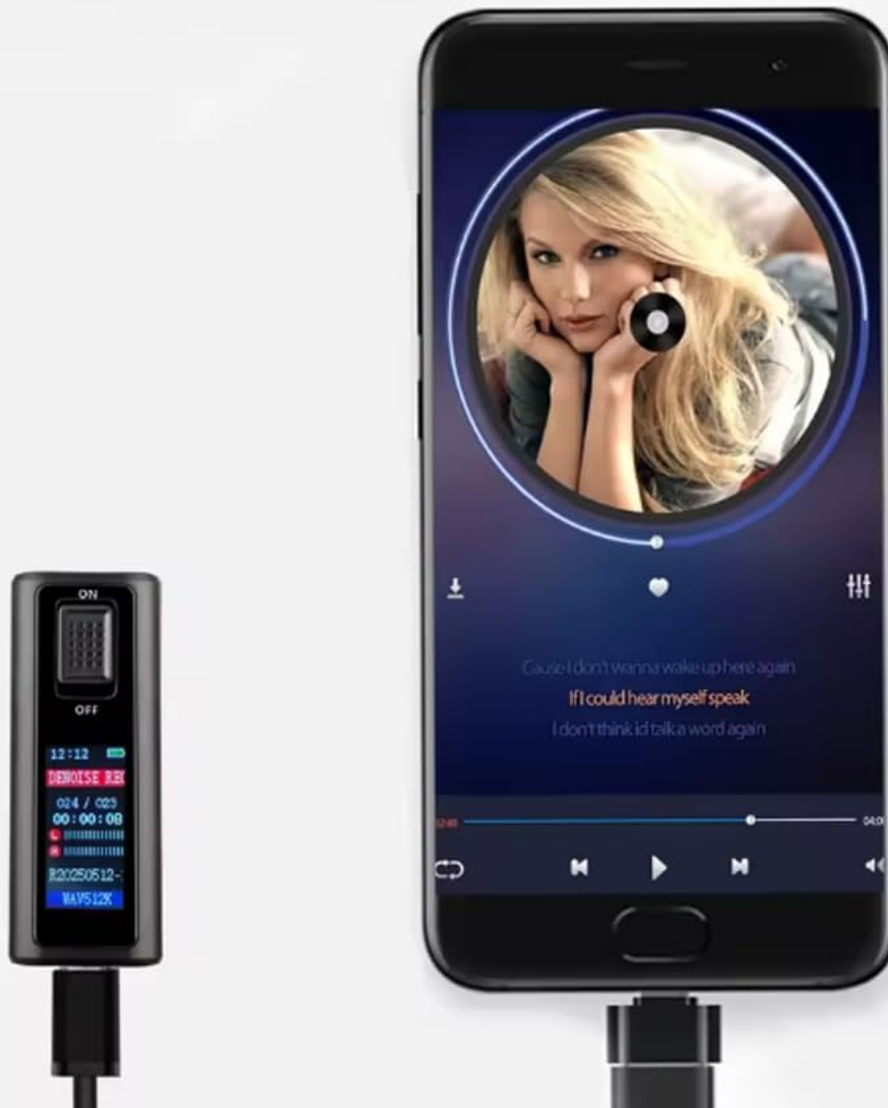


Image 5.1: Connecting the device to a smartphone for file transfer.

## 6. OPERATING INSTRUCTIONS

### 6.1 Basic Recording (One-Button Recording)

To start recording, simply slide the 'ON/OFF' switch to the 'ON' position. The device will automatically begin recording. To stop and save the recording, slide the switch back to the 'OFF' position.

### 6.2 Voice-Activated Recording (VOR)

The device supports Voice-Activated Recording (VOR), which starts recording automatically when sound is detected and pauses when silence occurs, saving memory space. Refer to the device's menu settings to enable or disable VOR mode and adjust sensitivity levels (e.g., 100dB for high sensitivity, 60dB for lower sensitivity).

# Voice Activated Recording

Start recording automatically when it detects sound



Image 6.1: Voice-Activated Recording (VOR) mechanism.

## 6.3 Playback

Connect the earphones to the device's headphone jack. Use the 'PLAY/PAUSE' button to start or pause playback. Use the 'VOL+' and 'VOL-' buttons to adjust the volume. The 'UP' and 'DOWN' buttons allow you to navigate through recorded files or MP3 tracks.



Image 6.2: Device connected to earphones for playback.

## 6.4 Transferring Files

Connect the device to a computer or smartphone as described in Section 5.3. Once connected, the device will appear as a removable storage drive. You can then drag and drop audio files to and from the device.

## 6.5 MP3 Player Function

In addition to recording, the device functions as an MP3 player. Transfer your MP3 audio files to the device's internal memory. Use the 'MODE' button to switch between recording and MP3 playback modes. Navigate tracks using the 'UP' and 'DOWN' buttons.

## 6.6 Time Stamp Setting

The device automatically adds a time stamp to your recordings, making it easier to organize and locate specific audio files. Ensure the device's internal clock is set correctly for accurate time stamps. Refer to the on-screen menu for time and date settings.

## 6.7 Noise Cancellation

The Savetek GS-R6Clip features a noise cancellation system to enhance recording clarity. This feature is typically enabled by default but can be adjusted or toggled via the device's settings menu.

## 7. MAINTENANCE

## 7.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or solvents, as they may damage the device's surface or internal components.

## 7.2 Storage

When not in use for extended periods, store the device in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to fully charge the device before storing and to recharge it every few months to maintain battery health.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device for at least 2 hours.
Cannot record.	Memory full.	Delete old files to free up space.
Poor recording quality.	Microphone obstructed; high background noise; VOR sensitivity too low.	Ensure microphone is clear; record in a quieter environment; adjust VOR sensitivity.
Device not recognized by computer.	Faulty USB cable; incorrect connection.	Try a different USB cable or USB port; ensure the cable is fully inserted.
No sound during playback.	Volume too low; earphones not connected properly; faulty earphones.	Increase volume; ensure earphones are fully plugged in; try different earphones.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	GS-R6Clip
Manufacturer	Savetek
Memory Storage Capacity	32 GB
Maximum Recording Time	Up to 160 hours
Battery Duration	Up to 10 hours
Hardware Interface	USB 2.0
Microphone Form Factor	Built-in
Audio Format	MP3, WAV
Compatible Devices	MP3 Player
Special Features	Voice Activated Recording, Noise Cancellation, Time Stamp, Metal Clip

## 10. WARRANTY AND SUPPORT

### 10.1 Warranty Information

This product comes with a 1-month manufacturer's warranty from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

### 10.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact your retailer or the manufacturer's customer support. Refer to the packaging or the retailer's website for specific contact details.