

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [WOSPORTS](#) /

> [WOSPORTS Golf Range Finder H-116 and Golf Cart Phone Holder Instruction Manual](#)

## WOSPORTS H-116

# WOSPORTS Golf Range Finder H-116 and Golf Cart Phone Holder

Instruction Manual

## 1. INTRODUCTION

---

Thank you for choosing the WOSPORTS Golf Range Finder H-116 and Golf Cart Phone Holder. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new devices. Please read this manual thoroughly before use to ensure optimal performance and longevity of your products.

## 2. SAFETY INFORMATION

---

- Do not look directly into the sun or any bright light source through the rangefinder, as this may cause permanent eye damage.
- Keep the devices away from extreme temperatures, moisture, and direct sunlight.
- Do not attempt to disassemble or repair the devices yourself. Contact customer support for assistance.
- Keep out of reach of children.
- Ensure the phone holder is securely attached to the golf cart and the phone is firmly seated before moving the cart.

## 3. PACKAGE CONTENTS

---

Please check the package for the following items:

- WOSPORTS Golf Range Finder H-116
- WOSPORTS Golf Cart Phone Holder
- Carrying Case for Range Finder

- Cleaning Cloth
- User Manual
- USB Charging Cable (for Range Finder, if applicable)

## 4. PRODUCT OVERVIEW

---

### 4.1 WOSPORTS Golf Range Finder H-116

The WOSPORTS H-116 Golf Range Finder is designed to provide accurate distance measurements on the golf course. Key features include:

- **Slope On/Off:** Provides compensated distance for uphill/downhill shots. Can be switched off for tournament play.
- **Magnetic Mount:** Integrated magnet for easy attachment to golf cart frames.
- **6x Magnification:** Clear viewing of targets up to 1200 yards.
- **Scan Mode:** Continuously measures distances to multiple targets.
- **Flag Lock with Vibration:** Confirms target acquisition with a short vibration.
- **H/V Distance & Angle Measure:** Displays horizontal/vertical distance and angle.

# Designed for Golf



Image: Overview of the WOSPORTS Golf Range Finder H-116, highlighting its main features such as slope on/off, magnetic mount, 6x magnification, scan mode, flag lock with vibration, H/V distance, and angle measure.

## 4.2 WOSPORTS Golf Cart Phone Holder

The WOSPORTS Golf Cart Phone Holder provides a secure and convenient way to mount your smartphone on a golf cart. It features:

- **Strong Magnetic Hold:** Utilizes N54 magnets for a firm grip on your phone.
- **Extra-Wide Magnetic Plate:** Ensures broad contact for enhanced stability.
- **Adjustable Viewing Angle:** Allows for optimal screen positioning.

# Rock-Solid Magnetic Hold

Strong Magnets | No Shaking | No Slipping



Image: The WOSPORTS Golf Cart Phone Holder securely holding a smartphone displaying a golf course map, demonstrating its strong magnetic hold.



Image: Detailed view of the N54 magnets and the extra-wide magnetic plate, illustrating the robust design of the phone holder for secure attachment.

## 5. SETUP

### 5.1 Range Finder H-116

1. **Battery Installation:** Open the battery compartment (typically located on the side or bottom). Insert a CR2 3V battery, ensuring correct polarity. Close the compartment securely.
2. **Power On:** Press the Power/Fire button once to activate the display.
3. **Attaching to Golf Cart:** The rangefinder features a strong integrated magnet. Simply place the side of the rangefinder with the magnet against a metal surface on your golf cart (e.g., the cart frame or steering column) to secure it.

# *Strong Magnetic Strap*



Image: The WOSPORTS Range Finder H-116 shown magnetically attached to the frame of a golf cart, demonstrating its secure and convenient mounting.

## 5.2 Golf Cart Phone Holder

1. **Mounting to Cart:** The phone holder typically attaches to the golf cart's windshield frame or other suitable bar using its adjustable clamp. Tighten the clamp firmly to prevent movement.
2. **Attaching Phone:** Ensure your phone has a magnetic-compatible case or attach the provided metal plate to your phone or phone case. Align your phone with the magnetic surface of the holder until it snaps securely into place.

## 6. OPERATING INSTRUCTIONS

### 6.1 Using the Range Finder H-116

1. **Measuring Distance:** Look through the eyepiece. Aim the reticle at your target. Press the

Power/Fire button once. The distance will be displayed in the viewfinder.

2. **Slope Compensation:** The H-116 features a physical slope switch. Slide the switch to the 'ON' position to activate slope compensation, which calculates the adjusted distance based on elevation changes. Slide to 'OFF' for tournament legal play.

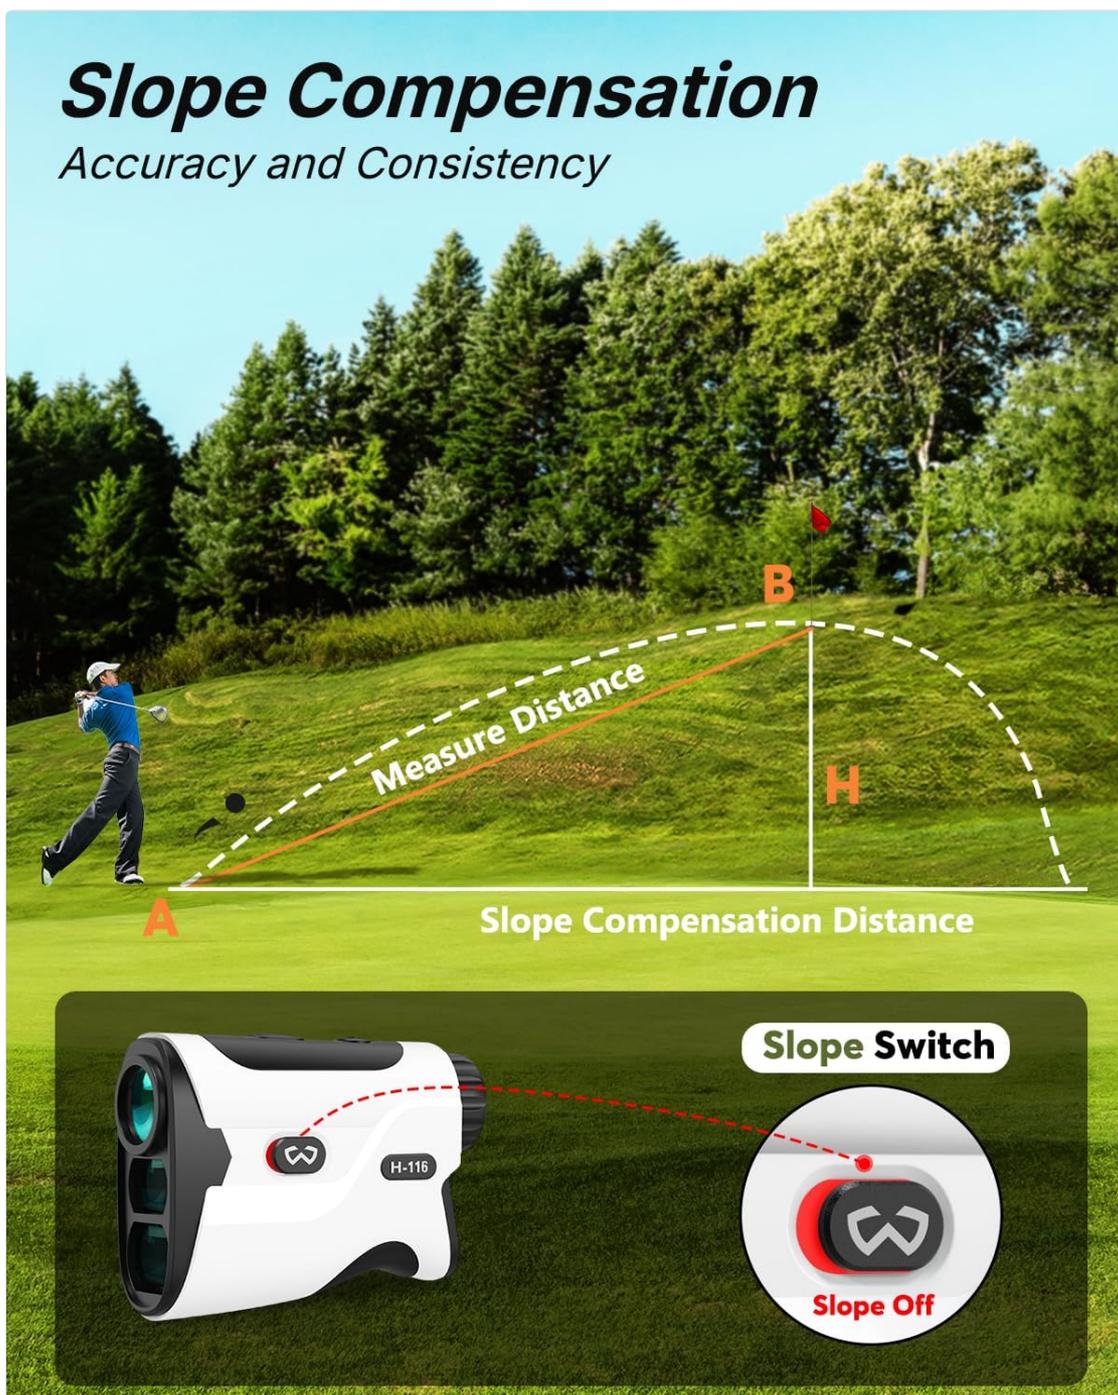


Image: The WOSPORTS Range Finder H-116 illustrating how slope compensation works and showing the physical slope switch in the 'Slope Off' position.

3. **Flag Lock with Vibration:** When targeting a flagstick, slowly pan the rangefinder across the flag. The device will vibrate briefly once the flag is locked, and the distance will be displayed.
4. **Scan Mode:** Press and hold the Power/Fire button to activate scan mode. Pan the rangefinder across multiple targets to get continuous distance readings. Release the button to exit scan mode.
5. **Switching Units (Yards/Meters):** While the device is on, press and hold the Mode button (usually located near the Power/Fire button) to switch between yards (Y) and meters (M).

## 6.2 Using the Golf Cart Phone Holder

1. **Securing Your Phone:** Once the holder is mounted, simply place your magnetic-compatible phone onto the holder. The strong N54 magnets will hold it firmly.
2. **Adjusting Viewing Angle:** The phone holder typically allows for rotation and tilt. Adjust your phone to the desired viewing angle for easy access to golf apps, GPS, or for recording your swing.



Image: A smartphone securely held by the golf cart phone holder, positioned to record a golfer's swing, demonstrating its hands-free functionality.

## 7. MAINTENANCE

- **Cleaning:** Use the provided cleaning cloth to gently wipe the lenses of the rangefinder. For the body of both devices, use a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the rangefinder in its protective carrying case. Store both

devices in a cool, dry place away from direct sunlight.

- **Battery:** If the rangefinder will not be used for an extended period, remove the battery to prevent leakage.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Rangefinder does not power on.	Low or dead battery; incorrect battery installation.	Replace battery or ensure it is inserted with correct polarity.
Inaccurate distance readings.	Lens obstruction; unstable aiming; extreme weather conditions.	Clean lenses; ensure stable aim; re-measure in clear conditions.
Flag Lock not working.	Target too far or too small; unstable aiming.	Ensure flag is within range; hold steady; try scan mode.
Phone not holding securely.	Phone case not magnetic-compatible; metal plate not attached.	Use a magnetic-compatible case or attach the provided metal plate to your phone/case.

## 9. SPECIFICATIONS

### 9.1 WOSPORTS Golf Range Finder H-116

- **Measurement Range:** 5-1200 yards
- **Magnification:** 6x
- **Accuracy:**  $\pm 1$  yard
- **Slope Compensation:** Yes, with On/Off switch
- **Flag Lock:** Yes, with Vibration
- **Scan Mode:** Yes
- **Units:** Yards/Meters
- **Battery Type:** CR2 3V (not included)
- **Magnetic Mount:** Integrated strong magnet

### 9.2 WOSPORTS Golf Cart Phone Holder

- **Magnet Type:** N54 Strong Magnets
- **Mounting:** Clamp-style for golf cart bars
- **Compatibility:** Universal for smartphones with magnetic-compatible cases or metal plates.

## 10. WARRANTY AND SUPPORT

WOSPORTS products are backed by a limited warranty. For specific warranty details, please refer to the warranty card included with your product or visit the official WOSPORTS website. If you

encounter any issues or have questions regarding your WOSPORTS Golf Range Finder H-116 or Golf Cart Phone Holder, please contact WOSPORTS customer support through the retailer where you purchased the product or via the contact information provided on the official WOSPORTS website.

**WOSPORTS Official Website:** [Visit the WOSPORTS Store on Amazon](#)