

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Uthfy](#) /

› [Uthfy HPC-F2013YL 38-inch Tower Space Heater User Manual](#)

Uthfy HPC-F2013YL

Uthfy HPC-F2013YL 38-inch Tower Space Heater User Manual

Model: HPC-F2013YL | Brand: Uthfy

IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not use outdoors.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater is equipped with a tip-over safety switch that automatically shuts off the unit if it is accidentally knocked over.
- The heater also features overheat protection, automatically turning off if internal components reach excessive temperatures.
- Constructed with V-0 flame-retardant materials for enhanced safety.

PRODUCT OVERVIEW

The Uthfy HPC-F2013YL is a 38-inch tower space heater designed for indoor use, offering efficient heating for large rooms up to 500 sq.ft. It features a realistic 3D flame effect, 120° oscillation, multiple heating modes, and comprehensive safety features.

120° Wide Heating for the Whole Room



Image: Uthfy 38-inch Tower Space Heater in a living room, illustrating its 120° wide heating coverage for areas up to 450 sq.ft.

38 Inch Tall Tower Heater for Superior Heating



Image: The 38-inch tall tower heater positioned next to a person, demonstrating its superior height for effective heat distribution compared to a standard 24-inch heater.

Your browser does not support the video tag.

Video: An overview of the Uthfy 38-inch Tall Space Heater with Flame, showcasing its quick heating, 1500W output, 120° oscillation, 3D flame effect, and portable design.

SETUP INSTRUCTIONS

Follow these steps to properly assemble the base of your Uthfy tower space heater.

1. Carefully remove all components from the packaging. Ensure you have the fuselage, front base plate, rear base plate, instruction manual, remote control, 8 self-tapping screws, and power cord.
2. Pass the power cord through the central hole in the base plate.
3. Assemble the front and rear base plates together around the bottom of the heater.
4. Align the screw holes on the assembled base plate with the corresponding holes on the heater's fuselage.
5. Secure the base plate to the fuselage using the provided self-tapping screws.
6. Secure the power cord in the buckle of the baseplate to prevent it from being pulled or damaged.

Your browser does not support the video tag.

Video: Detailed instructions on how to correctly install the product base for the Uthfy space heater.

OPERATING INSTRUCTIONS

Your Uthfy space heater can be operated using the touch control panel on top of the unit or the included remote control.

Control Panel and Remote



Image: The touch control panel on the top of the heater and the included remote control, both offering full functionality.

- **Power Button:** Turns the heater ON or OFF.
- **Mode Button (M):** Cycles through heating modes: ECO, 1000W, 1500W.
- **Oscillation Button:** Activates or deactivates the 120° oscillation function.
- **Timer Button:** Sets the auto-off timer from 1 to 24 hours.
- **Temperature Adjustment (+/-):** Increases or decreases the target temperature (50°F to 99°F).
- **Flame Effect Button (on remote):** Controls the 3D realistic flame effect.

Heating Modes

Select from three heating modes to suit your comfort and energy efficiency needs:

- **ECO Mode:** Energy-saving mode that automatically adjusts power consumption to maintain the set temperature, optimizing energy use.
- **1000W Mode:** Provides consistent warmth for general use.
- **1500W Mode:** High-power setting for rapid heating of larger spaces.

3 Modes Setting Find Your Perfect Warmth



Eco Mode



1000W Power



1500W Power

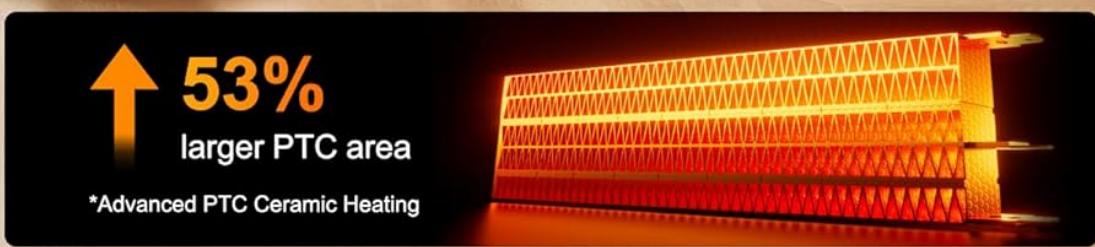


Image: The heater's display showing the three available heating modes: ECO, 1000W, and 1500W, allowing for customized warmth.

Consistent Warmth. Powerful Performance.

1 Sec. 2X'

Instant Heat

Longer Heat Range



* More instant response, more precise control, and higher starting torque than ac motor.



Image: The Uthfy space heater operating in ECO mode, highlighting its energy-saving capabilities compared to other heaters.

Thermostat and Timer

- Adjustable Thermostat:** Set your desired room temperature between 50°F and 99°F in 1°F increments. The heater will automatically maintain this temperature.
- 24-Hour Timer:** Program the heater to automatically turn off after a set period, from 1 to 24 hours.

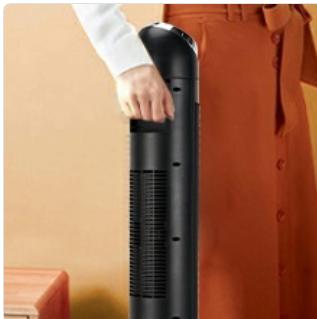


Image: Close-up of the heater's control panel, illustrating the precise temperature control from 50°F to 99°F.

Your browser does not support the video tag.

Video: The Uthfy space heater operating in a large room, demonstrating its heating capabilities and remote control convenience, including timer settings.

Oscillation and Flame Effect

- 120° Oscillation:** Distributes warm air evenly across a wide area, eliminating cold spots.
- 3D Realistic Flame Effect:** Provides an aesthetic ambiance, which can be operated independently of the heating function.



Image: The base of the Uthfy space heater showcasing its realistic 3D flame effect, adding ambiance to any room.

Maintenance

Regular maintenance ensures optimal performance and longevity of your heater.

- Cleaning:** Always unplug the heater before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- Storage:** When not in use, store the heater in a cool, dry place. It is recommended to cover it to protect against dust.
- Filter Cleaning:** Periodically check and clean the air intake filter to ensure efficient operation. Refer to the detailed manual for specific instructions on accessing and cleaning the filter.

Troubleshooting

If you encounter issues with your Uthfy space heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power, tip-over switch activated, overheat protection activated.	Ensure power cord is securely plugged in. Check if the unit is upright. Allow unit to cool down if it was recently overheated.
Heater blows cold air.	Heating element issue, fan mode selected.	Ensure a heating mode (1000W or 1500W) is selected, not just the fan. If problem persists, contact customer support.
Heater turns off unexpectedly.	Overheat protection, tip-over switch, timer activated.	Check for obstructions around air inlets/outlets. Ensure unit is on a stable, flat surface. Verify timer settings.
Remote control not working.	Dead batteries, obstruction, out of range.	Replace batteries. Ensure no obstructions between remote and heater. Operate within recommended range.

Specifications

Feature	Detail
Brand	Uthfy
Model Number	HPC-F2013YL
Product Dimensions	12.2"D x 12.2"W x 38.1"H
Item Weight	8.38 pounds
Color	Black
Form Factor	Tower
Indoor/Outdoor Usage	Indoor
Heating Coverage	Up to 500 sq.ft
Fuel Type	Electric
Voltage	120 Volts (AC)

Feature	Detail
Heating Modes	ECO, 1000W, 1500W
Thermostat Range	50°F - 99°F
Timer	1-24 hours
Oscillation	120°
Special Features	3D Realistic Flame, Remote & Touch Control, DC Motor, Overheat Protection, Tip-over Protection, V0 Flame-Retardant Material
Included Components	Remote Control, Space Heater with Flame
UPC	774882977865

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in your product packaging or visit the official Uthfy website.

You can visit the Uthfy Store for more products:[Uthfy Store](#)