

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Foyoconven](#) /

› [Foyoconven Touch Screen Toaster \(Model TA 1428E\) - 2 Slice Stainless Steel Digital Toaster User Manual](#)

## Foyoconven TA 1428E

# Foyoconven Touch Screen Toaster (Model TA 1428E) User Manual

## INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Foyoconven Touch Screen Toaster, Model TA 1428E. Please read this manual thoroughly before first use and retain it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not leave toaster unattended while in use.

## PRODUCT OVERVIEW

The Foyoconven Touch Screen Toaster features a modern design with intuitive controls for a customized toasting

experience.



Figure 1: Front view of the Foyoconven Touch Screen Toaster with toast in slots.

## Key Features:

- **Touch Screen Display:** Intuitive interface for easy selection of settings.
- **1.5" Wide Slots:** Accommodates various bread types, including bagels and thick slices.
- **Memory Function:** Saves your preferred toasting settings for future use.
- **6 Shade Settings:** From lightly warmed to extra crispy.
- **5 Bread Types:** Dedicated settings for Bread, Bagel, Waffle, Pastry, and English Muffin.
- **Defrost & Reheat Functions:** For frozen items and warming previously toasted items.
- **900W Precision Heating:** Ensures even toasting.

- **Easy-Clean Design:** Removable crumb tray and stainless steel housing.

## SETUP

1. **Unpacking:** Carefully remove the toaster from its packaging. Retain packaging for storage or return if necessary.
2. **Placement:** Place the toaster on a stable, heat-resistant, and dry surface, away from flammable materials. Ensure adequate ventilation around the appliance.
3. **First Use:** Before first use, operate the toaster without bread on the highest shade setting (Level 6) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

## OPERATING INSTRUCTIONS

### Powering On/Off

Press the **POWER** button on the touchscreen to turn the toaster on or off.

Your browser does not support the video tag.

*Video: Demonstrating the touchscreen interface and power button on the Foyoconven toaster.*

### General Toasting Steps

1. Insert bread slices into the toaster slots.
2. Press the **POWER** button to activate the touchscreen.
3. **Select Bread Type:** Choose from the 5 available bread icons (Bread, Bagel, Waffle, Pastry, English Muffin) on the touchscreen. This optimizes the toasting cycle for the specific item.
4. **Select Shade Setting:** Choose your desired browning level from 1 (lightest) to 6 (darkest) by tapping the corresponding shade icon.
5. **Start Toasting:** Press the lever down to begin the toasting cycle. The countdown timer will display on the screen.
6. **Cancel:** To stop toasting at any time, press the **CANCEL** button (X icon) on the touchscreen.

# 4 Steps to Baking Bread



Figure 2: Visual guide for the 4-step toasting process.

## Special Functions

- Defrost Function:** For frozen bread. After selecting your bread type and shade setting, tap the **DEFROST** icon (snowflake). The toaster will automatically adjust the toasting time.
- Reheat Function:** To warm up already toasted bread without further browning. After inserting the bread, tap the **REHEAT** icon (wavy lines).
- Memory Function:** The toaster can remember your last used settings for bread type and shade. To activate, simply press the **MEMORY** icon (heart) after selecting your desired settings. The next time you power on, these settings will be pre-selected.
- Single Slice Toasting:** To toast a single slice, select the **SINGLE SLICE** icon (slice of bread with '1'). This optimizes energy usage for one slice.

# 2+4 Multi-Function

## Single Toasting



Toast one slice save time and energy

## Memory Function



Save your settings for next time



Defrost



Reheat



POWER



CANCEL

Figure 3: Illustration of Single Toasting and Memory Function.

## MAINTENANCE

### Cleaning the Toaster

- Unplug:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
- Exterior:** Wipe the exterior stainless steel housing with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads.
- Crumb Tray:** The toaster features a full-width slide-out crumb tray for easy cleaning. Pull out the crumb tray from the bottom of the toaster, discard crumbs, and wipe clean with a damp cloth. Ensure it is completely dry before reinserting.

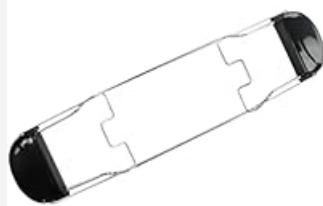


Figure 4: Removing the crumb tray for cleaning.

## Storage

Ensure the toaster is clean and completely cool before storing. The power cord can be wrapped around the cord storage slot at the bottom of the toaster for neat storage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the toaster is securely plugged into a working outlet. Check your circuit breaker.
Bread is not toasting evenly.	Uneven bread thickness; crumb buildup.	Ensure bread slices are of uniform thickness. Clean the crumb tray regularly.
Toaster smokes during operation.	Crumb buildup; food stuck in slots.	Unplug and allow to cool. Carefully remove any stuck food. Clean the crumb tray. If smoke persists, discontinue use.
Lever does not stay down.	Toaster not powered on; no settings selected.	Ensure the toaster is powered on and a bread type and shade setting have been selected on the touchscreen.

## SPECIFICATIONS

- Brand:** Foyoconven
- Model:** TA 1428E
- Material:** Stainless Steel
- Product Dimensions:** 10.98"D x 7.44"W x 6.14"H
- Wattage:** 900 watts
- Number of Slices:** 2
- Special Features:** Built-In Timer, Defrost Mode, Reheat Mode, Removable Crumb Tray, Touchscreen
- Item Weight:** 3.02 pounds
- Number of Shade Settings:** 6

## WARRANTY INFORMATION

Foyoconven provides a limited warranty for this product. Please refer to the warranty card included in your product packaging for specific terms and conditions. For warranty claims or service, please contact customer support.

## CUSTOMER SUPPORT

For any questions, assistance, or troubleshooting not covered in this manual, please contact Foyoconven customer support:

**Website:** [Visit the Foyoconven Store on Amazon](#)

**Email:** [Insert Customer Support Email Here]

**Phone:** [Insert Customer Support Phone Number Here]