

VICNIE XEB-B02

VICNIE 2-Light Flush Mount Ceiling Light

Model: XEB-B02-Brushed Nickel-2PK | Brand: VICNIE

1. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before beginning installation. Failure to do so may result in electric shock, fire, or other injuries which could be fatal or cause property damage.

- Always turn off power at the main circuit breaker before installation, removal, or maintenance.
- Consult a qualified electrician if you are unsure about wiring or installation procedures.
- This fixture is designed for indoor use only. Do not expose to water or excessive moisture.
- Use only E26 base LED or CFL bulbs. Do not exceed 60 watts equivalent per socket. Bulbs are not included.
- Ensure all connections are secure and properly insulated.
- Keep away from children during installation.

2. WHAT'S IN THE BOX

Verify that all components are present and undamaged before proceeding with installation:

- 1 x 2-Light Ceiling Light (Bulb not included)
- Mounting Hardware
- Instruction Manual



Figure 2.1: Included Components

3. SPECIFICATIONS

Feature	Specification
Brand	VICNIE
Model Name	XEB-B02-Brushed Nickel-2PK
Color	Brushed Nickel
Material	Glass, Metal, Plastic
Style	Modern
Light Fixture Form	Close to Ceiling
Product Dimensions	12.59"L x 4.7"W x 12.59"H
Specific Uses	Indoor use only
Power Source	AC
Installation Type	Flush Mount
Special Features	Anti-Rust, Dimmable
Light Source Type	LED Bulbs, CFL Bulbs
Number of Light Sources	2
Voltage	120 Volts
Wattage (Max)	60 watts (equivalent per bulb)
Bulb Base	E26
Certification	ETL Certified



Figure 3.1: Product Dimensions and Features

4. SETUP & INSTALLATION

Follow these steps for quick and easy installation. All necessary mounting hardware is included.

1. **Turn Off Power:** Before starting any electrical work, ensure the power to the junction box is turned off at the main circuit breaker.
2. **Prepare Mounting Plate:** Attach the mounting plate (crossbar) to your ceiling's electrical junction box using the provided screws. Ensure it is securely fastened.
3. **Connect Wires:** Carefully connect the electrical wires from the fixture to the wires in the junction box. Match the black wire from the fixture to the live (black) wire from the junction box, the white wire from the fixture to the neutral (white) wire, and the ground wire (bare copper or green) from the fixture to the ground wire from the junction box. Secure connections with wire nuts.
4. **Secure Fixture Body:** Carefully tuck all wires into the junction box. Align the fixture body over the mounting plate and secure it using the decorative nuts or screws provided.
5. **Install Bulbs:** Screw two E26 base LED or CFL bulbs (not included) into the sockets. Do not exceed 60 watts equivalent per bulb.
6. **Attach Glass Shade:** Place the frosted glass shade onto the fixture body and secure it with the decorative knob/nut at the center. Tighten gently to prevent overtightening.
7. **Restore Power:** Turn the power back on at the main circuit breaker.



Figure 4.1: Fixture Details and Bulb Sockets

5. OPERATING INSTRUCTIONS

This fixture is designed for simple operation via a standard wall switch.

- **Turning On/Off:** Use your existing wall switch to turn the light fixture on or off.
- **Dimming Function:** If you have installed dimmable E26 bulbs and a compatible dimmer switch (not included), you can adjust the light intensity by using the dimmer switch.



Figure 5.1: Light On/Off Demonstration

6. MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your light fixture.

- **Cleaning:** To clean the fixture, turn off the power. Wipe the metal parts with a soft, dry cloth. For the frosted glass shade, use a mild glass cleaner and a soft cloth. Avoid abrasive cleaners or solvents.
- **Bulb Replacement:** To replace bulbs, turn off the power at the circuit breaker. Unscrew the decorative knob/nut at the center of the glass shade, carefully remove the glass. Unscrew the old bulbs and replace them with new E26 base LED or CFL bulbs (max 60W equivalent). Reattach the glass shade and decorative knob/nut, then restore

power.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on	No power to fixture; Loose wiring; Faulty bulb	Check circuit breaker; Verify wire connections; Replace bulb(s)
Light flickers	Loose bulb; Incompatible dimmer switch; Faulty wiring	Tighten bulb(s); Ensure dimmer is compatible with LED/CFL bulbs; Check wiring connections
Insufficient light output	Low wattage bulbs; Incorrect bulb type	Use higher wattage equivalent bulbs (up to 60W per socket); Ensure bulbs are LED or CFL

8. WARRANTY & SUPPORT

This VICNIE 2-Light Flush Mount Ceiling Light comes with a**2-year limited warranty** from the date of purchase.

The warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications.

For warranty claims, technical support, or any questions regarding your product, please contact VICNIE customer service through the retailer where the product was purchased or visit the official VICNIE website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question